

Multifunctional Cooker Special Edition

DFC-918



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

**Multifunctional Cooker
Special Edition
User Manual**

Content

| | |
|-----------------------------|----|
| Notice Before Use | 4 |
| Product Performance | 5 |
| Product Structure | 6 |
| Operating Instructions | 7 |
| Accessories | 14 |
| Care & Maintenance | 15 |
| Troubleshooting | 15 |
| Technical Specifications | 16 |
| Warranty Terms & Conditions | 31 |

Please read these instructions and warranty information carefully before use and keep them handy for future reference.

Notice Before Use

Important

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord is damaged, do not replace with a non-manufacturer certified power cord. Such certified power cord must be purchased directly from the manufacturer.
- Children should be supervised to ensure that they do not play with the appliance.
- To prevent electric shock, do not splash water on the power cord or plug.
- Do not mess demolition equipment. Because incorrect restructuring may lead to a electric shock.
- Be careful when moving the appliance as steam may escape from the cooker.
- Do not touch the lid or the pot during operation.
- Use the oven mitts or cloth to remove to pot, if it is still hot.

1. When using the appliance, observe these rules of safety:

- Do not operate the appliance in the outdoors
- Operate the appliance with the supplied heating pot. This pot is not intended to be used on or with any other appliances.
- Keep the cooker away from a stove during operation.
- Ensure that the cooker operates on a stable, level and heat resistant surface.
- Do not operate the cooker near inflammable materials such as curtains, walls, kitchen cabinets and so on.
- Operate the cooker away from a hot furnace or an oven.

2. When unplugging the power cord:

- Switch off the power first, before unplugging the power cord.
- Do not let the power cord comes into contact with hot objects or surfaces. Wait until the equipment is completely cooled down before pulling out the power cord.

Notice Before Use

3. Correct usage:

The appliance shall not be placed where children can reach. After cooking, do not let children approach or go near the appliance.

4. Safety considerations:

- The appliance may stop operating due to damage or malfunction. Do not use non-manufacturer certified or recommended accessories as this may cause fire or electric shock.
- Do not use the appliance for anything other than its intended purposes.
- When the appliance is not in use, unplug the power plug from the wall outlet.
- Do not operate the cooker with an empty heating pot. The glass lid and the interior of the heating pot may be soaked in water for cooling.
- If the glass lid or the heating pot is damaged, the appliance cannot be operated.
- The lid and the heating pot is fragile, please handle with care.
- Should any problems occur, the appliance must be repaired by a professional maintenance staff.

5. Electrical requirements:

Before plugging in the appliance, check that the electrical rating shown on the rating plate corresponds with your house electricity supply. Use a suitable adaptor if the socket does not match the plug.

Product Performance

 
1. This is an 18 functions in one cooker which combines functions of: Double Boil, Hot Pot, Pan Fry, Deep Fry, Grill, Stir Fry, Steam, Congee, Keep Warm, Toast, Chocolate, Cake, Bake, Pizza, Soup, Yogurt, Boil and Defrost.
2. The non-stick heating pot is easy to clean. Thoughtful design for the pot lid, easy to place on the table.
3. High-end LED display with touch key.
4. Manual adjustment of cooking time and temperature available.
5. 8L extra-large capacity. Deep inner pot for easy cooking.

Product Structure

Main Body



Control Panel

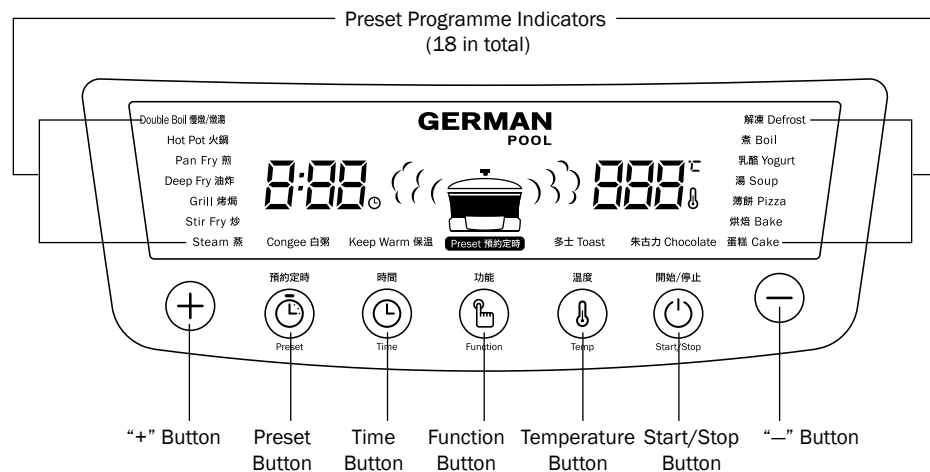

Operating Instructions

Note: For the first use, you may notice a faint odour due to the burning of residues resulting from production. This is normal. Do not be nervous, and the smell will gradually disappear after use.

Watch the video clip



- Please read all instructions and product labels carefully before use.
- The non-stick heating pot and glass lid can be cleaned with alkaline water and allowed to dry completely before being put into the body.
- Steam rack, spatula and other accessories are washable.
- When cleaning the heating plate, gently wipe the outside of the heating plate with a soft cloth.
- How to use: Insert 5 metal feet into the hole of the heating plate, then cover the glass lid, connect the power cable, and power on. The appliance starts working.

Start/Stop Button

After connecting to a power source, a “beep” sound is heard. In the meantime, LED screen lights up and enters into energy-saving mode. Press Function button to select a mode, adjust time and temperature, then press the “Start/ Stop” button and the programme begins. Press “Start/ Stop” button again and the cooker stops operation and returns to standby mode.

While the appliance is in standby mode, press the “Start/ Stop” button and enter DIY mode.

Attention: Product will enter energy saving status when machine has been idle for 60 seconds.

Time Button

After a function is selected, press the “Time” button and adjust the cooking time with “+” or “-” button. Every press has a step of 1min. Press and hold to increases or decreases the time rapidly in 10mins step. The longest cooking time setting is 9 hours 59mins.

Attention: Hours and minutes can be alternately selected when “Time” button is pressed.

Temp Buttons

After a function is selected, press the “Temp” button and adjust the temperature with “+” or “-” button. Every press has a step of 10 degrees. Press and hold to increases or decreases the time rapidly in 10-degree step. The highest temperature setting is 240°C and the lowest is 40°C.

Attention: Product will enter energy saving status when machine has been idle(or without pressing Start/Stop switch) for 60 seconds in function settings.

Operating Instructions

Preset Button

You can time the start of the cooker.

1. Adjust the settings and temperature to preference, press time key to set timer (Red LED enter timer setting , flashing LED represents selected , normal lights represent other functions). Default timer is set at 1:00, press “+” , “-” to adjust the timer. Press “Time” button to confirm timer, product will enter idle mode when timer flashes 60 times.
2. Having set the preset time, press the “Start/ Stop” button, the preset indicator remains lit which indicates that the preset timer is working. When it reaches the preset time, the preset indicator goes out and the cooker starts heating.
3. In preset mode, press Time button and Temp button to review time and temperature, and press “+” or “-” button to adjust. The LED reverts to displaying the preset time after flashing for 5 times later.

DIY Mode

In standby mode, press Time or Temp button once to enter DIY mode. 18 functions indicators keep on. Default temperature is 240 °C, time is 20 minutes. After setting time and temperature, press “Start/ Stop” button to start heating. The appliance will enter standby mode without pressing the Start button in 60s. While the appliance is in standby mode, press the “Start/ Stop” button twice and enter DIY mode.

Function Button

The cooker has 18 functions on the menu. Press the “Function” button to access these functions in a cycle: Double Boil, Hot Pot, Pan Fry, Deep Fry, Grill, Stir Fry, Steam, Congee, Keep Warm, Toast, Chocolate, Cake, Bake, Pizza, Soup, Yogurt, Boil and Defrost.

Every press of the “Function” button or “+” or “-” button selects one function, and the corresponding indicator flashes (adjust time and temperature while the indicator flashes). Press “Start/ Stop” button to start heating, the corresponding indicator then remains lit. After cooking, the cooker returns to standby mode.

Operating Instructions

1) Double Boil

Place ingredients inside the heating pot, pour in right amount of water and close the lid. Press “Function” button and select Double Boil mode from the menu. The double boil indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to keep warm mode once operation is complete (Default temperature is 99 °C, time is 6 hours). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 6 hours. Temperature is not adjustable. You can preset this function.

2) Hot Pot

Press “Function” button and select Hot Pot mode from the menu. The hot pot indicator flashes. Press “Start/ Stop” button to start operation. The cooker starts operating. The cooker returns to energy-saving mode once operation is complete (Default temperature is 240 °C and time is 2 hours). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 2 hours. Temperature ranges between 120 °C and 240 °C. You can preset this function.

3) Pan Fry

Press “Function” button and select Pan Fry mode from the menu. The pan fry indicator flashes. Press “Start/ Stop” button and set the working status. Put oil and food into the heating pot. The cooker returns to energy-saving mode once operation is complete (Default temperature is 200 °C, time is 25 mins). Time and temperature can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 59 mins; adjustable temperature ranges between 50 °C and 240 °C. You cannot preset this function.

4) Deep Fry

Pour oil into the heating pot. Avoid pouring in too much oil to prevent it from overflowing when the fry basket is inserted later. Press “Function” button and select Deep Fry mode from the menu. The deep fry indicator flashes. Press “Start/ Stop” button to start operation. Put food inside the fry basket and lower the basket into the oil to deep fry. The cooker returns to energy-saving mode once operation is complete (Default temperature is 180 °C, time is 30 minutes). Time and temperature can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 9 hours 59 minutes. Adjustable temperature ranges between 180 °C and 240 °C. You cannot preset this function.

Operating Instructions

5) Grill

Put food inside the heating pot, close the lid. Press “Function” button and select Grill mode from the menu. The grill indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to keep warm mode once operation is complete (Default temperature is 240 °C, time is 30 minutes).

Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 9 hours 59 minutes. Temperature ranges between 180 °C and 240 °C. You can preset this function.

6) Stir Fry

Press “Function” button and select Stir Fry mode from the menu. The stir fry indicator flashes. Press “Start/ Stop” button to start operation. Pour an appropriate amount of oil inside the heating pot and put in ingredients. Use wooden spatula to stir fry the food. The cooker returns to energy-saving mode once operation is complete (Default temperature is 240 °C and time is 15 minutes). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 30 minutes. Temperature ranges between 50 °C and 240 °C. You cannot preset this function.

7) Steam

Place a steam rack or low rack inside the heating pot. Add an appropriate amount of water and keep the water level below the rack. Put food on the rack and close the lid. Press “Function” button and select Steam mode from the menu. The steam indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to keep warm mode once operation is complete (Default temperature is 220 °C, time is 15 minutes). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 1 hour 59 minutes. Temperature ranges between 100 °C and 220 °C. You can preset this function.

8) Congee

Put rinsed rice inside the heating pot, add ingredients and water, close the lid. Press “Function” button and select Congee mode from the menu. The congee indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to keep warm mode once operation is complete (Default temperature is 110 °C, time is 1 hour). Time and temperature can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 1hour30min; adjustable temperature ranges between 100 °C and 140 °C. You can preset this function.

Operating Instructions

9) Keep Warm

Press “Function” button and select Keep Warm mode from the menu. The keep warm indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to energy-saving mode once operation is complete (Default temperature is 80 °C and time is 2 hours). Time can be adjusted during function selection and operation. Adjustable time ranges between 30 minutes and 9 hours 59 minutes. Temperature is not adjustable. You can preset this function.

10) Toast

Spread honey and cream on a slice of bread and place it inside the heating pot. Close the lid. Press “Function” button and select Toast mode from the menu. The toast indicator flashes. Press “Start/ Stop” button to start operation. Turn the bread after 10 minutes. The cooker returns to energy-saving mode once operation is complete (Default temperature is 160 °C, time is 20 minutes). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 30 minutes. Temperature is not adjustable. You cannot preset this function.

11) Chocolate

Put chocolate inside the heating pot, close the lid. Press “Function” button and select Chocolate mode from the menu. The chocolate indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to energy-saving mode once operation is complete (Default temperature is 60 °C, time is 2 hours). Time and temperature can be adjusted during function selection and operation. Adjustable time ranges between 30 minutes and 4 hours. Temperature ranges between 60 °C and 70 °C. You cannot preset this function.

12) Cake

Press “Function” button and select Cake mode from the menu. The cake indicator flashes. Press “Start/ Stop” button to start operation. Grease the heating pot with a layer of edible oil and preheat for a minute. Pour premixed flour mixture into the heating pot, close the lid. The cooker returns to energy-saving mode once operation is complete (Default temperature 140 °C, time is 1 hour). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 1hour 30mins. Temperature is not adjustable. You can preset this function.

Operating Instructions

13) Bake

Press “Function” button and select Bake mode from the menu. The bake indicator flashes. Press “Start/ Stop” button to start operation. Put delicacies into the heating pot. The cooker returns to energy-saving mode once operation is complete (Default temperature is 160 °C, time is 30 minutes). Time and temperature can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 30 minutes. Adjustable temperature ranges between 140 °C and 180 °C. You can preset this function.

14) Pizza

Put a pizza inside the heating pot. Close the lid. Press “Function” button and select Pizza mode from the menu. The pizza indicator flashes. Press “Start / Stop” button to start operation. The cooker returns to energy-saving mode once operation is complete (Default temperature is 160 °C, time is 40 minutes). Time and temperature can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 1 hour. Adjustable temperature ranges between 140 °C and 180 °C. You can preset this function.

15) Soup

Place ingredients inside the heating pot, pour in right amount of water and close the lid. Press “Function” button and select Soup mode from the menu. The soup indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns keep warm mode once operation is complete (Default temperature is 110 °C, time is 1 hour). Time can be adjusted during function selection and operation. Adjustable time ranges between 30 minutes and 3 hours. Temperature is not adjustable. You can preset this function.

16) Yogurt

Add pure or fresh milk into the heating pot. Add an appropriate amount of starter culture or 10% pure yogurt and close the lid. Press “Function” button and select Yogurt mode from the menu. The yogurt indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to energy-saving mode once operation is complete (Default temperature is 40 °C, time is 4 hours). Time can be adjusted during function selection and operation. Adjustable time ranges between 30 minutes and 9 hours 59 minutes. Temperature is not adjustable. You cannot preset this function.

Operating Instructions

17) Boil


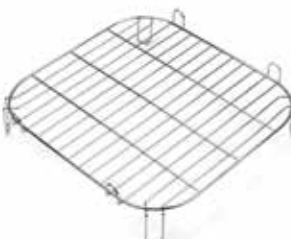 
Put food inside the heating pot, pour in an appropriate amount of water, and close the lid. Press “Function” button and select Boil mode from the menu. The boil indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to keep warm mode once operation is complete (Default temperature is 150 °C, time is 25 minutes). Time can be adjusted during function selection and operation. Adjustable time ranges between 1 minute and 9 hours 59 minutes. Temperature ranges between 100 °C and 240 °C. You cannot preset this function.



18) Defrost

Put the frozen food inside the heating pot. Close the lid. Press “Function” button and select Defrost mode from the menu. The defrost indicator flashes. Press “Start/ Stop” button to start operation. The cooker returns to energy-saving mode once operation is complete (Default temperature is 80 °C, time is 1 hour). Time can be adjusted during function selection and operation. Adjustable time ranges between 30 minutes and 3 hours. Temperature is not adjustable. You can preset this function.

Accessories

Supplied accessories

| | |
|---|---|
| <p>Fry basket with handle</p>  <p>Gently press the handle hook from two sides and insert the handle into the 2 handle holes.</p> | <p>Grill rack</p>  |
|---|---|

| | |
|---|--|
| <p>Steam rack</p>  <p>Hang the steam rack at the 4 corners of the pot.</p> | <p>Spatula</p>  |
|---|--|

Care & Maintenance

1. Clean the heating pot by boiling vinegar and water.
2. Use a soft sponge to clean. Do not use steel gauze to scrub to avoid damages to the heating pot.
3. Do not use corrosive liquids for cleaning.
4. If the product is not going to be used for a long period of time, clean thoroughly and put inside a box to store in a dry, ventilated area.
5. When the product is faulty, contact the customer service and repair centre at once.
6. Do not disassemble or repair the product yourself.
7. The glass lid is fragile, be careful when using it.



Troubleshooting

1. Make sure the electricity voltage is consistent with the voltage shown in the label.
2. Please place the cooker on a stable desktop, do not allow children to approach during working to avoid scalding.
3. Do not place the product in a damp environment; keep away from flammable and combustible substances or other heat sources to avoid danger and breakage.
4. Do not use hard objects such as metal or bone-like utensils, use bamboo, wood, plastics and other non-hard utensils to avoid scratching the heating pot.
5. Avoid impacting the glass lid with heavy external force.
6. Always keep the plug and socket dry, do not use wet hands to plug or unplug to prevent electrical shock.
7. Do not immerse the power cord or product into water or clean with water, to avoid danger and breakage, which may affect safety.
8. You may hear "tick tock" sound when the cooker is working, this is normal. It does not affect normal functioning.

Error code:

- E1 Broken circuit of the sensor
- E2 Short circuit of the sensor
- E3 Overheating (300 °C overheat protection)

If you encounter the above troubles, please restart the appliance after cooling down. If the problem still cannot be solved, please contact customer service and repair centre.

Technical Specifications

| | |
|--------------------|-------------------------------|
| Model | DFC-918 |
| Voltage | 220 V |
| Frequency | 50 - 60 Hz |
| Power | 1,800 W |
| Product Dimensions | (H)305 mm (W)347 mm (D)356 mm |
| Net Weight | ~4.2 kg |

Specifications are subject to change without prior notice.
If there is any inconsistency or ambiguity between the English version and the Chinese version, the English version shall prevail. Refer to www.germanpool.com for the most up-to-date version of the Operating Instructions.

變頻萬用養生鍋 使用說明

| | |
|---------|----|
| 注意事項 | 19 |
| 產品性能 | 20 |
| 產品結構 | 21 |
| 操作說明 | 22 |
| 配件 | 28 |
| 清潔與保養 | 29 |
| 常見故障及處理 | 29 |
| 技術規格 | 30 |
| 保用條款 | 31 |

在使用之前請詳細閱讀「使用說明書」及「保用條款」，並妥為保存。

重要說明

- 本機擬用於家庭與類似的用途，如：
 - 商店、辦公室和其他工作環境的員工廚房區域；
 - 農舍；
 - 用於客戶在酒店，汽車旅館和其他住宅類型環境；
 - 住宿和早餐酒店環境；
- 本機不是靠外部計時器或單獨的遠端控制系統來操作。
- 本機不應由兒童、身體或心智殘障、缺乏經驗或知識的人士操作，除非他們有專門監督或指導有關使用該設備的人負責他們的安全。
- 如果電源線受損，請不要自行找電源線替代，必須使用專用的電源線或從製造商或維修部門購買專用元件來替換。
- 兒童應被監督，以確保他們不能把玩本機。
- 為了防止觸電，請不要將水濺到電源線或插頭上。
- 不要亂拆裝本機，因為不正確的重裝會導致觸電。
- 移動本機時應小心，避免蒸氣溢出。
- 本機工作時，請不要觸摸玻璃蓋或者內鍋。
- 如果內鍋尚熱，使用手套或者布取出內鍋。

1. 使用該電器需遵守以下安全條例：

- 不要在室外使用
- 使用跟機內鍋，該內鍋不適用於其他煮食電器上。
- 使用本機時，必須遠離火爐。
- 使用本機時，確保工作檯平穩和耐熱。
- 使用本機時，不要接近窗簾、牆壁、櫥櫃和其他易燃材料。
- 使用本機時，遠離熱爐和加熱的焗爐。

2. 拔出電源插頭線時注意：

必須關掉電源後再拔離插座。

不要使電源線接觸尚熱的表面，等本機完全冷卻後再拔出。

3. 正當使用

不得放置在兒童可以觸摸的地方，特別是在使用該產品時，不要讓兒童接近。

安全注意事項

4. 安全事項

- 本機會因損壞或故障導致不能運作。不要使用製造商不建議使用的配件，因為這可能會引起火災和觸電。
- 本機不得用於其他用途。
- 不使用本機時，需從插座上拔掉電源插頭。
- 內鍋空時請勿啟動本機。玻璃蓋和內鍋內部可用水冷卻。
- 如果玻璃蓋或內鍋被損壞，本機將不能再使用。
- 玻璃蓋和內鍋易碎，請小心使用。
- 本機如有任何問題，需由專業的維修人員進行維修。

5. 電源電壓

核對本機上的電壓標籤，確保本機電壓與所使用的電壓一致。如使用的插座和本機插頭不匹配，請安裝一個合適的轉換插頭。

產品性能

 
1. 集合慢燉 / 燉湯、火鍋、煎、油炸、烤焗、炒、蒸、白粥、保溫、多士、朱古力、蛋糕、烘焙、薄餅、湯、乳酪、煮及解凍十八大功能為一體的養生鍋。
2. 不粘內鍋，清洗方便，貼心鍋蓋設計，方便放置。
3. 採用液晶LED顯示屏，輕觸式按鍵，簡單易用。
4. 時間、溫度，隨時可以自行調節。
5. 8公升超大容量，加深內鍋，方便烹調。

產品結構

主機



控制面板

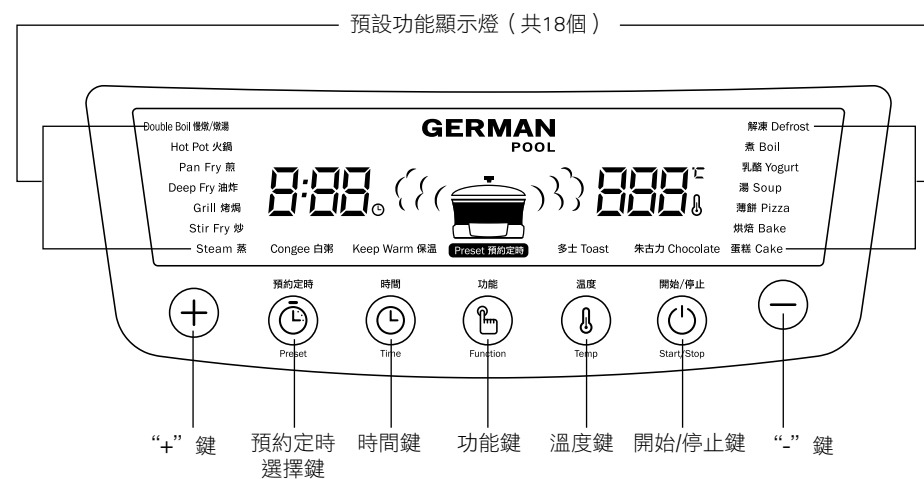

操作說明

注意

首次使用，可能會有少量氣味，不要緊張，這是燃燒生產殘留物的原因，這是完全正常的，使用後會逐漸消失。

- 在使用前請細閱所有說明和產品標籤。
- 內鍋和玻璃蓋可用鹼水清洗，待完全乾燥再放進機身裡。
- 蒸架及鍋鏟等配件也可清洗。
- 清洗加熱盤時，請使用軟布輕輕擦拭加熱盤外部。
- 如何使用：將5個金屬腳插進機身發熱盤底部的孔裡，然後蓋上玻璃蓋，連接電源線並通電，開始工作。



開始/停止鍵

產品通電後，會聽見「嘀」一聲同時顯示屏亮著進入節能狀態，按功能鍵選擇好相應的功能後，按個人需求調節時間與溫度，按下「開始/停止」即開始工作。再按下此鍵即停止工作，回到待機狀態，待機狀態下按「開始/停止」鍵可快速進入DIY功能。

注意：待機狀態下60秒無任何操作，產品進入節能狀態。

時間鍵

選擇功能後，按一次「時間」鍵，進入時間調節狀態，再按「+」、「-」兩個鍵進行時間調整，每按一次變化單位為1分鐘，若連續按住不放，則自動按變化單位為10分鐘快速增/減。最長的工作時間為9小時59分。

注意：按一次「時間」鍵，顯示屏個位/十位數字閃爍，再按一次，百位數字閃爍，可循環轉換。

溫度鍵

選擇功能後，按下「溫度」鍵，進入溫度調節狀態，再按「+」、「-」鍵進行溫度調整，每按一次變化單位為10°C，若連續按住不放，則自動按變化單位為10°C快速增/減。工作溫度最高為240°C，最低為40°C。

注意：功能設定過程中60秒內無任何操作（或沒有按「開始/停止」鍵），產品進入待機狀態。

操作說明

預設定時

1. 先選擇想要的功能，然後根據個人需求調節時間與溫度，再按預約定時鍵，進入預約時間設置狀態（液晶屏紅色預約燈閃亮，選定的功能表閃爍，其它功能燈常亮），液晶屏默認預約時間1：00小時閃爍顯示，按時間鍵進入預約時間設定狀態（設定過程中，分鐘/小時閃爍60次無操作後進入待機狀態），再按「+」、「-」鍵調節預約時間；
2. 設置好預約時間後按「開始」鍵確認，預約燈由閃亮變為常亮，開始進入預約倒計時工作狀態，液晶屏顯示預約倒計時時間，每分鐘倒減一次，直到預約時間倒減為0，預約指示燈滅，開始進入烹飪工作狀態。
3. 在預約工作狀態下，可按時間與溫度鍵查看時間和溫度，或按「+」、「-」鍵進行調整工作時間與溫度，閃5次後會自動跳回預約工作狀態。

DIY功能設置

待機狀態下按「時間」或「溫度」鍵1次，進入DIY功能設置狀態，液晶屏18個功能指示燈常亮，默認時間為20分鐘，溫度240°C，設定好時間和溫度後按「開始/停止」鍵進入工作狀態。如60秒沒按開始鍵確認，回到待機狀態。待機狀態下按「開始/停止」鍵2次快速進入DIY工作狀態。

產品功能

產品共有十八項功能，按「功能」鍵即可循環選取「慢燉 / 燉湯」、「火鍋」、「煎」、「油炸」、「烤焗」、「炒」、「蒸」、「白粥」、「保溫」、「多士」、「朱古力」、「蛋糕」、「烘焙」、「薄餅」、「湯」、「乳酪」、「煮」及「解凍」功能。每按一下「功能」或「+」、「-」鍵選擇功能，對應的指示燈亮並閃動（閃動時可調節時間與溫度），再按下「開始/停止」鍵，進入加熱工作，對應功能箭頭圖案燈常亮。設定時間完成後，自動回到待機狀態。

操作說明

1) 慢燉 / 燉湯

首先將所需的湯料或食物直接放入不粘內鍋裡，加入適量的水，然後蓋上蓋子，按功能鍵選擇對應功能，液晶屏上對應的「慢燉 / 燉湯」指示燈閃爍，按下「開始/ 停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到保溫狀態（該功能預設溫度為99°C，時間6小時）在選擇功能與工作過程中可以自行調節慢燉所需的時間，溫度不能調節，時間可調節範圍為1分鐘-6小時。該功能可以預約。

2) 火鍋

按功能鍵選擇對應功能，液晶屏上對應的「火鍋」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到節能狀態（該功能預設溫度為240°C，時間2小時）在選擇功能與工作過程中可以自行調節火鍋所需的時間與溫度，溫度可調節範圍為120°C-240°C，時間可調節範圍為1分鐘-2小時。該功能可以預約。

3) 煎

按功能鍵選擇所需功能，「煎」指示燈閃爍。按下「開始/停止」鍵並設定工作狀態，然後放入油及食物，完成設定的工作時間後，自動回到節能狀態（預設溫度為200°C，時間25分鐘）。在選擇功能與工作過程中可以自行調節所需溫度與時間，時間可調節範圍為1分鐘-59分鐘，溫度調節範圍為50°C-240°C，此功能不能預約。

4) 油炸

首先將油倒入不粘內鍋裡，倒入時油不能過多，避免油於放入炸籃時溢出，按功能鍵選擇對應功能，液晶屏上對應的「油炸」指示燈閃爍，按下「開始/ 停止」功能鍵進入工作狀態，然後將食物放入炸籃裡，再放進油鍋裡炸熟，完成設定的工作時間後，自動回到節能狀態。（該功能預設溫度為180°C，時間30分鐘）在選擇功能與工作過程中可以自行調節油炸所需的時間與溫度，溫度可調節範圍為180°C-240°C，時間可調節範圍為1分鐘-9 小時59 分鐘，此功能不能預約。

5) 烤焗

將食物放入內鍋裡，蓋好蓋子，按「功能」鍵選擇對應功能，液晶屏上對應的「烤焗」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到保溫狀態（該功能預設溫度為240°C，時間30分鐘）在選擇功能與工作過程中可以自行調節烤焗所需的時間與溫度，溫度可調節範圍為180°C-240°C，時間可調節範圍為1分鐘-9小時59分鐘。該功能可以預約。

操作說明

6) 炒

按功能鍵選擇對應功能，液晶屏上對應的「炒」指示燈閃爍，按下「開始/ 停止」功能鍵進入工作狀態，接著倒入適量油在不粘內鍋中，然後倒入食物，期間用家用木鍋勺翻滾至炒熟，完成設定的工作時間後，自動跳到節能狀態（該功能預設溫度為240 °C，時間15分鐘）在選擇功能與工作過程中可以自行調節炒所需的時間與溫度，溫度可調節範圍為50°C-240°C，時間可調節範圍為1分鐘-30 分鐘，此功能不能預約。

7) 蒸

首先將低架或蒸架放入內鍋，然後加入適量的水，保持水位低於低架或蒸架，放上食物並蓋上蓋子，按「功能」鍵選擇對應功能，液晶屏上對應的「蒸」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到保溫狀態（該功能預設溫度為220 °C，時間15分鐘）在選擇功能與工作過程中可以自行調節蒸所需的時間與溫度，溫度可調節範圍為100°C-220°C，時間可調節範圍為1分鐘-1小時59分鐘。該功能可以預約。

8) 白粥

首先將洗乾淨的米放在不粘內鍋裡，可加入配料，加入水，然後蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「白粥」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到保溫狀態（該功能預設溫度為110°C，時間1小時）在選擇功能與工作過程中可以自行調節白粥所需的時間與溫度，溫度可調節範圍為100°C-140°C，時間可調節範圍為1分鐘-1小時30分。該功能可以預約。

9) 保溫

按功能鍵選擇對應功能，液晶屏上對應的「保溫」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動回到節能狀態。（該功能預設溫度為80°C，時間2小時）在選擇功能與工作過程中可以自行調節保溫所需的時間，溫度不能調節，時間可調節範圍為30分鐘-9 小時59分鐘。該功能可以預約。

10) 多士

將切好表面塗有蜂蜜和奶油的方麵包放在內鍋裡，按功能鍵選擇對應功能，液晶屏上對應的「多士」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，10分鐘翻一翻方包，完成設定的工作時間後，自動回到節能狀態（該功能預設溫度為160°C，時間20分鐘）在選擇功能與工作過程中可以自行調節多士所需的時間，溫度不能調節，時間可調節範圍為1 分鐘-30分鐘，此功能不能預約。

操作說明

11) 朱古力

先將朱古力放入不粘內鍋裡，蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「朱古力」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動回到節能狀態。（該功能預設溫度為60°C，時間2小時）在選擇功能與工作過程中可以自行調節朱古力所需的溫度與時間，溫度可調節範圍為60°C~70°C，時間可調節範圍為30分鐘~4小時，此功能不能預約。

12) 蛋糕

按功能鍵選擇對應功能，液晶屏上對應的「蛋糕」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，在鍋內均勻的刷一層食用油，先預熱1分鐘後，將拌好的粉漿倒入鍋內，蓋好蓋子，完成設定的工作時間後，自動回到節能狀態（該功能預設溫度為140°C，時間1小時）在選擇功能與工作過程中可以自行調節焗蛋糕所需的時間，溫度不能調節，時間可調節範圍為1分鐘~1小時30分。該功能可以預約。

13) 烘焙

按功能鍵選擇對應功能，液晶屏上對應的「烘焙」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，把食物放入鍋內加熱，完成設定的工作時間後，自動回到節能狀態。（該功能預設溫度為160°C，時間30分鐘）在選擇功能與工作過程中可以自行調節烘焙所需的溫度與時間，溫度可調節範圍為140°C~180°C，時間可調節範圍為1分鐘~30分鐘。該功能可以預約。

14) 薄餅

首先將食物放在不粘內鍋上，蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「薄餅」箭頭指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動回到節能狀態。（該功能預設溫度為160°C，時間40分鐘）在選擇功能與工作過程中可以自行調節薄餅所需的溫度與時間，溫度可調節範圍為140°C~180°C，時間可調節範圍為1分鐘~1小時。該功能可以預約。

15) 湯

首先將湯料或食物直接放在不粘內鍋裡，加入水，然後蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「湯」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到保溫狀態（該功能預設溫度為110°C，時間1小時）在選擇功能與工作過程中可以自行調節煲湯所需的時間，溫度不能調節，時間可調節範圍為30分鐘~3小時。該功能可以預約。

操作說明

16) 乳酪

將適量的純牛奶或鮮奶倒入鍋內，再加入適量的發酵劑或10%的純乳酪，蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「乳酪」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動回到節能狀態（該功能預設溫度為40°C，時間4小時）在選擇功能與工作過程中可以自行調節乳酪所需的時間，溫度不能調節，時間可調節範圍為30分鐘~9小時59分鐘，此功能不能預約。

17) 煮

 
 
將食物放入不粘內鍋上，然後加入適量的水，蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「煮」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動跳到保溫狀態（該功能預設溫度為150°C，時間25分鐘）在選擇功能與工作過程中可以自行調節煮所需的時間與溫度，溫度可調節範圍為100°C~240°C，時間可調節範圍為1分鐘~9小時59分鐘，此功能不能預約。

18) 解凍

首先將低架或蒸架放在不粘內鍋裡，隨後放上食物，蓋好蓋子，按功能鍵選擇對應功能，液晶屏上對應的「解凍」指示燈閃爍，按下「開始/停止」功能鍵進入工作狀態，完成設定的工作時間後，自動回到節能狀態。（該功能預設溫度為80°C，時間1小時）在選擇功能與工作過程中可自行調節解凍所需的時間，溫度不能調節，時間可調節範圍為30分鐘~3小時。該功能可預約。

配件

隨機配件

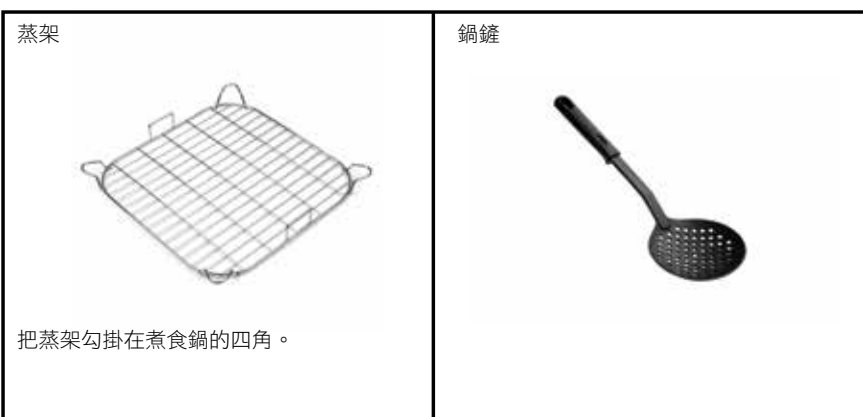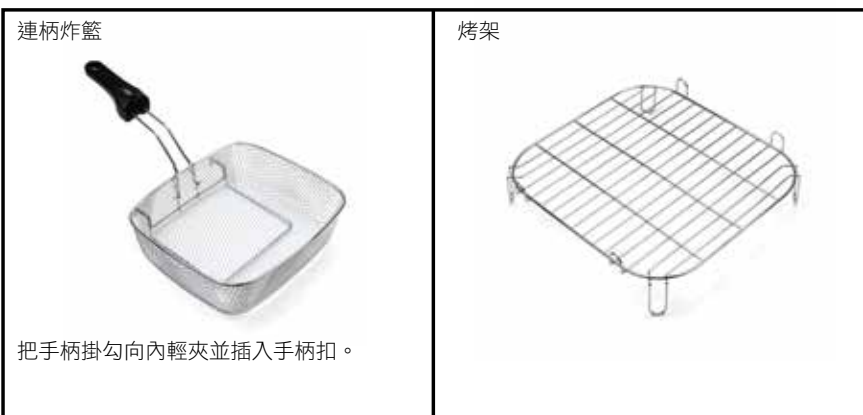

清潔與保養

1. 不粘內鍋內如有污垢，可用食用醋加水煮沸，以作清洗。
2. 洗刷時，請用柔軟的海綿搓洗，請勿使用鋼絲球類硬質物刷洗，以免損壞不粘內鍋。
3. 請勿使用腐蝕性液體進行清洗。
4. 產品長期不使用時，請清潔乾淨後，裝入包裝箱中，存放於通風乾燥的地方。
5. 當產品遇到故障時，請馬上與德國寶或當地經銷商聯繫。
6. 非專業人士切勿自行拆卸、維修。
7. 玻璃蓋為易碎物品，請小心使用。

觀看操作視頻



常見故障及處理

1. 請確認用電電壓與標籤所示電壓一致。
2. 請將養生鍋放置於平穩桌面，產品工作時，勿讓小孩接觸，以免燙傷。
3. 請勿將產品放置在潮濕、靠近易燃易爆或其他熱源的地方使用，以免發生故障和危險。
4. 使用不粘內鍋煮食時，不能使用金屬、骨狀等硬物，須用些竹、木、塑膠製品等非硬物，以免刮花不粘內鍋。
5. 避免外力、重力撞擊玻璃蓋。
6. 請經常保持電源插頭、插座的乾燥，請勿用濕手插撥電源插頭，以防觸電。
7. 請勿將電源線、產品整體浸入水中或沖洗，以免機體進水，發生故障，影響安全使用。
8. 產品在通電工作時，內部會發生「嗒」「嗒」響聲，屬於正常現象，不影響正常工作。

錯誤代碼訊息如下：

E1表示感測器開路

E2表示感測器短路

E3超溫顯示（300°C超溫保護）

如果出現以上這些情況，可待機器冷卻後再重啟一下，如果問題仍然無法解決，請聯繫客戶服務及維修中心。

技術規格

| | |
|------|-------------------------------|
| 型號 | DFC-918 |
| 電壓 | 220 V |
| 頻率 | 50 - 60 Hz |
| 功率 | 1,800 W |
| 產品尺寸 | (H) 305mm (W) 347mm (D) 356mm |
| 淨重 | ~4.2 kg |

產品規格及設計如有變更，恕不另行通知。
中英文版本如有出入，一概以英文版為準。
本產品使用說明書以 www.germanpool.com 網上版為最新版本。

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用 (自購買日起計算)。

* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥本公司網頁內之保用登記表格

www.germanpool.com/warranty

2) 填妥保用登記卡，郵寄至本公司。



Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:

www.germanpool.com/warranty

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : **DFC-918**

機身號碼 Serial No. : _____ 發票號碼 Invoice No. : _____

購買商號 Purchased From : _____ 購買日期 Purchase Date : _____

- 未能出示購買發票正本者，將不獲免費維修服務。
 - 用戶應依照說明書的指示操作。本保用並不包括：
 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞 (包括運輸及其他)；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
 - 於下列情況下，用戶之保用資格將被取消：
 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被擅自塗改、破壞或刪除。
 - 總代理有權選擇維修或更換配件或其損壞部份。
 - 產品一經被轉讓，其保用即被視作無效。
- Customer who fails to present original purchase invoice will not be eligible for free warranty service.
 - Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
 - This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
 - German Pool will, at its discretion, repair or replace any defective part.
 - This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港

九龍灣啟興道1-3號

九龍貨倉10樓

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：repairs@germanpool.com

中國澳門

澳門俾利喇街145號

寶豐工業大廈3樓

電話：+853 2875 2699

傳真：+853 2875 2661

Customer Service & Repair Centre

Hong Kong, China

10/F, Kowloon Godown

1-3 Kai Hing Road, Kowloon Bay,

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau, China

3/F, Edificio Industrial Pou Fung,

145 Rua de Francisco Xavier Pereira,

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwawan, Kowloon, Hong Kong.
Tel: +852 2773 2888
Fax: +852 2765 8215

Mainland China

8th, Xinxiang Road, Wusha Industrial Park,
Daliang, Shunde, Foshan, Guangdong
Tel: +86 757 2980 8308
Fax: +86 757 2980 8318

Macau, China

3/F, Edifício Industrial Pou Fung,
145 Rua de Francisco Xavier Pereira, Macau
Tel: +853 2875 2699
Fax: +853 2875 2661



香港 (S MARK)
安全認證



中國櫥櫃/家電行業
十大影響力品牌

CEO

CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007
最具潛質
創星品牌企業獎



香港中小企業
最佳拍檔大獎



香港消費者推崇品牌



香港《心嚮》
優質服務證書



香港名牌十年成就獎
HONG KONG TOP BRAND TEN YEAR
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.