

Cordless Food Processor

PRG-WL07



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

請即進行保用登記！  
有關保用條款細則，請看說明書最後一頁。

---

Please register your warranty information now !  
For Warranty Terms & Conditions,  
please refer to the last page of this user manual.

# Table of Contents

---

Warnings & Safety Precautions	04
Product Structure	06
Operation Instructions	07
Cleaning & Maintenance	09
Troubleshooting	10
Technical Specification	11
Warranty Terms & Conditions	19

# Warnings & Safety Precautions

---

## **WARNING!**

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.
- Contact German Pool authorized service technician for repair or maintenance of this product.

To avoid potential harm from misuse, please carefully read this user manual before use and keep it in a safe place for future reference.

1. Make sure your household mains power supply is suitable for use with this product to avoid affecting this product's performance or causing damage.
2. When using this product, make sure your hands, clothing, spatula and other kitchen utensils are kept away from the rotating parts of this product in order to reduce the risk of personal injury or damage to this product.
3. To prevent electric shock, DO NOT immerse this product in water or other liquids, in order to avoid the risk of fire, electricity leakage or personal injury etc.
4. DO NOT place this product near hot gas stoves or on top of hot items.
5. Make sure to disconnect the USB cable when this product is not in use, or when assembling or disassembling its parts, or before cleaning.
6. DO NOT place this product on or near gas stove, induction cooker, oven, etc.
7. When this product is fully charged, it can be used for 3 consecutive times, with 1 minute rest time in between. This product must be allowed to rest for 30 minutes after using 3 consecutive times.
8. DO NOT knead dough with this product.
9. DO NOT let the USB cable hang from the countertop or table's edge during charging. DO NOT place the USB cable on a hot surface.
10. Disconnect the power source when this product is not in use, or when assembling or disassembling its parts, or before cleaning.
11. DO NOT use the motor combination of the product configuration for other purposes.
12. DO NOT use this product outdoors.
13. Turn off this product and disconnect the power source before changing accessories or coming into contact with any operational parts.
14. DO NOT use this product for purposes other than those specified.

 
# Warnings & Safety Precautions

---

15. If the power cord is damaged, it must be replaced with a specialized cord obtained from German Pool Customer Service & Repair Centre.
16. DO NOT use this product when the following occurs: when this product malfunctions, or when this product is dropped or damaged in any other way. Please send this product to German Pool Customer Service & Repair Centre for inspection and repair.
17. Individuals with physical, sensory or mental disabilities, or those lacking experience and knowledge of its use (including children) are strictly prohibited to use this product, unless they are supervised or instructed by a person responsible for their safety and knowledgeable about the use of this product.
18. Mind your children and DO NOT allow them to play with this product.
19. DO NOT allow children to clean or maintain this product unless under strict adult supervision.
20. Disconnect the power source when this product is not in use, or when assembling or disassembling its parts, or before cleaning. DO NOT allow children to use this product without adult supervision.

# Product Structure

---

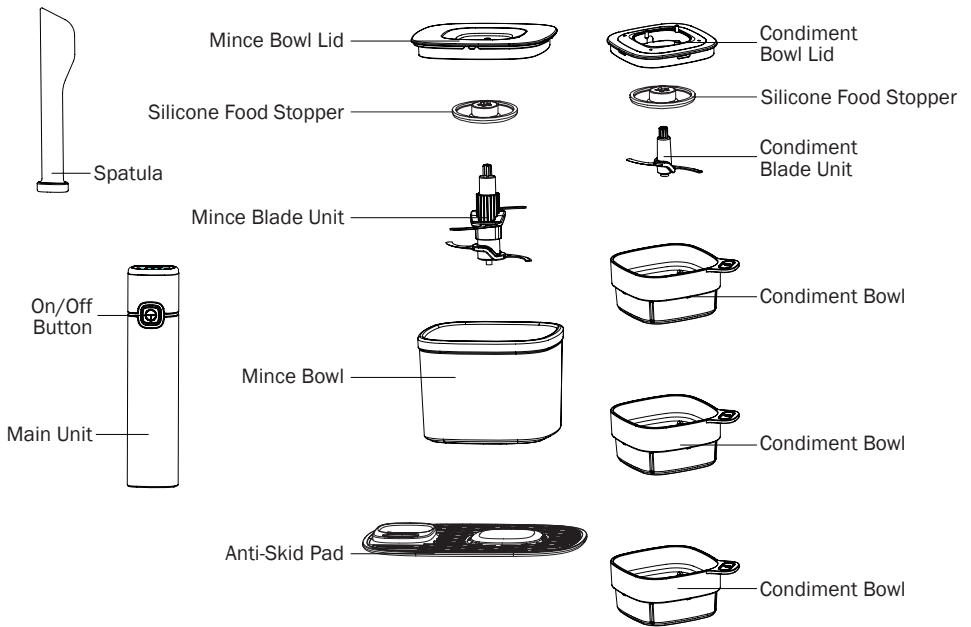

## Before Use

 
This product contains a lithium-ion battery. The following precautions must be taken:

1. This product must be stored and used in an environment within the temperature range of 0-40°C.
2. If this product will not be used in a prolonged period of time, it must be recharged once every 6 months to avoid battery damage.
3. If this product is being charged in an environment colder than 10°C, it will take longer to charge. This is a normal phenomenon.
4. Please recharge promptly when the battery reserve is low. DO NOT disassemble or puncture this product, or put pressure on top of this product, or place this product in water or fire, or place it in an environment hotter than 60°C.

# Operation Instructions

## Charging This Product

1. Plug the provided charging cable into the USB charging port on the main unit. Connect the other end of the cable to a 5V=1A power adapter (adaptor not included with product). Then, insert the power adapter into a power outlet for charging.
2. During charging, the Battery Indicator Lights flash in a marquee pattern.
3. When product is fully charged, the Battery Indicator Lights light up constant.

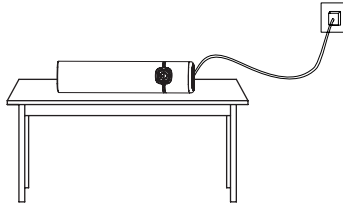


### Note:

- This product must be used with a power adaptor that complies with the standards and has an output specification of 5V=1A.
- This product cannot be operated during charging.

## Mincing Meat

 
1. Place diced meat into the Mince Bowl, install the Mince Blade Unit and put on the Silicone Food Stopper and Mince Bowl Lid. Be careful of the sharp blades (Pic 1).
2. Align the dot on the main unit with the dot on the lid, install the main unit onto the lid, and press On/Off Button to start mincing (Pic 2).
3. After mincing is completed and the blades have stopped rotating, detach the main unit from the lid, open the lid and take out the Mince Blade Unit. Be careful of the sharp blades. Finally, take the minced meat out of the bowl (Pic 3).

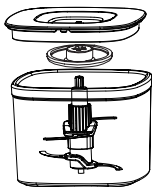

Pic 1



 Pic 2

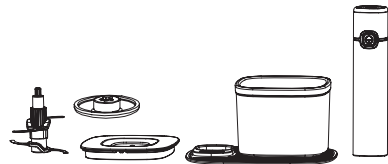


Pic 3

# Operation Instructions

 ---

## Chopping Condiments


1. Install the Condiment Blade Unit into the Condiment Bowl, place in condiments, put on the Silicone Food Stopper and Condiment Bowl Lid (Pic 4).
2. Align the dot on the main unit with the dot on the lid, install the main unit onto the lid, and press On/Off Button to start chopping (Pic 5).
3. After chopping is completed and the blades have stopped rotating, detach the main unit from the lid, open the lid and take out the Condiment Blade Unit. Be careful of the sharp blades. Finally, take the chopped condiments out of the bowl (Pic 6).

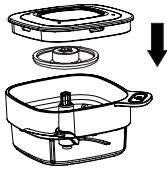

Pic 4



 Pic 5

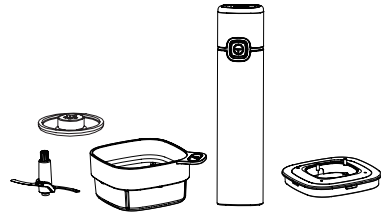

Pic 6



# Cleaning & Maintenance

## ⚠ WARNING!

- Before cleaning and maintenance, unplug from the power source and detach the blade unit from the main unit.
- DO NOT immerse or rinse the main unit in water or other liquids.

1. Before cleaning, make sure the product has stopped operating, and wait till the main unit has completely cooled down.
2. Before cleaning, detach all removable parts.
3. Use a moist cloth to wipe down the main unit, then wipe dry with a dry cloth. DO NOT immerse main unit in water to avoid risk of electric shock or fire.
4. Remove any food debris on the USB cable.
5. Blade units, bowls and lids must be washed and dried thoroughly. Mince bowl, condiment bowl, blade units and lids can be placed in the dishwasher. Make sure they are air-dried completely afterwards.

## ⚠ WARNING!

Be careful when detaching and cleaning the blade units. They are extremely sharp.

 
## Disposing The Battery

Before discarding of this product, it is necessary to remove the battery and dispose of it safely.


### Note:

Disconnect this product from the power source before taking out the battery.


1. Place the main unit horizontally on its side, and forcefully pry open the main unit's top cover with a flathead screwdriver (Pic 1).
2. Unscrew the four screws on the four corners of the top cover decoration piece with a Phillips screwdriver (Pic 2).
3. Pry off the decoration piece with a flathead screwdriver, then use a Phillips screwdriver to unscrew the lid (Pic 3).
4. Pry off the lid with a flathead screwdriver, take out the battery and dispose of it safely (Pic 4).




Pic 1

 

Pic 2

 

Pic 3

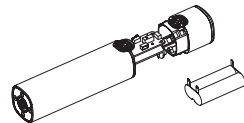 

Pic 4

# Troubleshooting

---

**⚠ WARNING!**

- When this product experiences a malfunction, please perform the following checks.
- If problem persists, stop using this product immediately and contact German Pool Customer Service & Repair Centre for assistance. DO NOT disassemble or repair this product by yourself.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Product does not operate	Battery too low, product cannot turn on	Recharge battery
	Product is not turned on	Press On/Off Button to turn on product
Product stops abruptly during use	Battery too low, product has automatically turned off	Recharge battery
	Product has run continuously for 1 minute	Wait 1 minute before reusing
	Excessive load, product has automatically activated overload protection function	Turn off product then restart
Product is overheated	Product has run continuously for multiple times	Turn off product, let it cool off for at least 30 minutes

# Technical Specification

---

Model	PRG-WL07
Power	70W
Input Voltage	5V $\approx$ 1A
Rated Voltage	7.4V $\approx$
Battery Capacity	2000 mAh
Max. Duration of Each Use	1 minute
Main Unit Dimensions	(H)194 (W)45 (D)45mm
Mince Bowl Dimensions	(H)95 (W)124 (D)124mm
Condiment Bowl Dimensions	(H)46 (W)86 (D)86mm
Net Weight	1.39kg

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to [www.germanpool.com](http://www.germanpool.com) for the most update version of the user manual.

# 目錄

---

警告及注意事項 13

產品結構 14

使用說明 15

清潔與保養 16

故障檢修 17

技術規格 18

保用條款 19

# 警告及注意事項

## ⚠ 警告！

 
使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；
- 如需使用，必須要在負責的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技术人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技术人員進行維修或保養本產品。

為避免誤用可能帶來的傷害，使用前仔細閱讀本說明書，並妥善保管。

1. 必須確認家庭電源是否適用，以免影響使用效果或造成損壞。
2. 操作過程中，手、衣服、刮刀和其他廚房器具必須遠離產品轉動部件以減少人身傷害的風險，或造成本產品損壞。
3. 防止觸電危害，嚴禁把本產品放在水裡或其他液體中，以免發生火災、漏電或人身傷害等風險。
4. 嚴禁將本產品放置靠近高溫的瓦斯爐附近，或放在高溫的物體上。
5. 不使用本產品時、組裝或拆卸零部件時，或清洗前必須先將USB線拔除。
6. 不可將本產品放置於或靠近燃氣灶、電磁爐、烤爐等。
7. 充滿電後可以連續使用3次，每次休息1分鐘為一次，使用3次後必須休息30分鐘。
8. 本產品嚴禁用於搓揉麵團。
9. 嚴禁在充電的情況下將USB線懸掛在櫃檯或桌子的邊緣，或者置於表面高溫的地方。
10. 在無人使用時和拆裝、清洗前，必須斷開本產品的電源連接。
11. 本產品配置的摩打組合不可挪作他用。
12. 嚴禁在室外使用本產品。
13. 在更換配件或接觸運作部件前，必須關掉電源開關並斷開電源。
14. 嚴禁將本產品用於其他非指定的用途。
15. 如果電源軟線損壞，必須用德國寶客戶服務及維修中心提供的專用軟線來更換。
16. 出現以下情況時，嚴禁使用本產品：當電器出現故障、電器掉落或受到其他方式損壞時；必須將本產品送到德國寶客戶服務及維修中心進行檢查及維修。
17. 本產品嚴禁由存在肢體、感官或精神能力缺陷或缺乏使用經驗和知識的人（包括兒童）使用，除非有負責他們安全的人對他們進行與本產品使用有關的監督或指導
18. 必須照看好兒童，確保他們不玩耍本產品。
19. 在沒有監督的情況下，清洗以及維護本產品的工作嚴禁由小孩來做。
20. 在無人使用和拆裝時、清洗前，必須斷開本產品的電源連接，嚴禁兒童在無人監護的情況下使用本產品。

# 產品結構

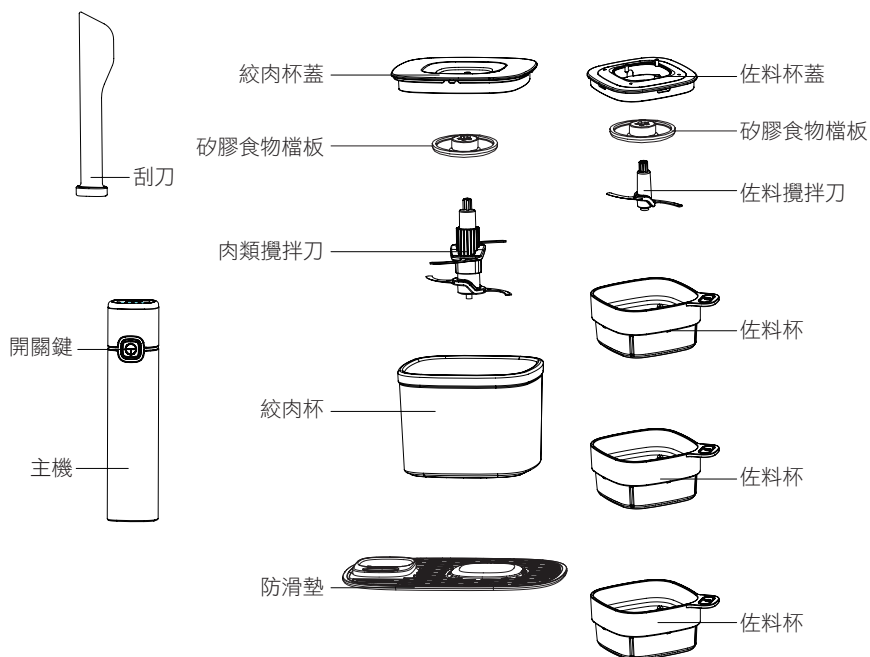

## 使用前注意事項

 
本產品內置鋰電池，必須注意以下事項：

1. 本產品必須在0-40°C的環境下儲存和使用。
2. 如長時間不使用本產品，必須每隔6個月充電一次，以防電池損壞。
3. 如在低於10°C的環境下充電，充電速度可能會變慢，屬正常情況。
4. 電量不足時必須及時充電，嚴禁任意拆解、擠壓、穿刺本產品，或將本產品投入水或火中，或置於溫度高於60°C的環境中。

# 使用說明

## 為產品充電

1. 使用跟機附送的充電線插入主機上的USB充電口，連上5V=1A的電源轉換器（請自行準備電源轉換器），將電源轉換器插入電源插座進行充電。
2. 充電期間，電源指示燈呈跑馬燈閃爍。
3. 充滿電後，電源指示燈常亮。

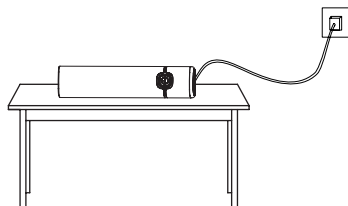

## 注意：

- 必須使用符合標準，且輸出規格為5V=1A的電源轉換器。
- 充電期間本產品無法運作。

## 攪拌肉類

1. 將肉粒放進絞肉杯，安裝好肉類攪拌刀、矽膠食物檔板和杯蓋，注意攪拌刀鋒利（圖1）。
2. 主機與杯蓋上的對位點對齊，將主機安裝到杯蓋上，按開關鍵開始攪拌（圖2）。
3. 攪拌完畢待刀停穩後，把主機從杯蓋取下，打開杯蓋並取出肉類攪拌刀，注意攪拌刀鋒利；然後倒出肉碎（圖3）。

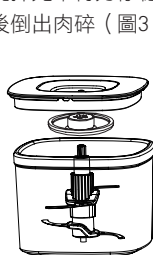 


圖1

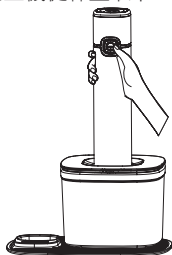 


圖2

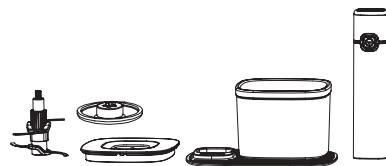 


圖3

## 攪拌佐料

1. 將佐料攪拌刀安裝到佐料杯，放入需要切碎的佐料，安裝好矽膠食物檔板及杯蓋（圖4）。
2. 主機與杯蓋上的對位點對齊，將主機安裝到杯蓋上，按開關鍵開始攪拌（圖5）。
3. 攪拌完畢待刀停穩後，把主機從杯蓋取下，打開杯蓋並取出佐料攪拌刀，注意攪拌刀鋒利；然後倒出佐料（圖6）。

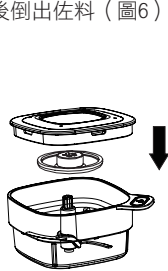 


圖4

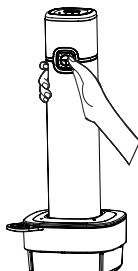 


圖5

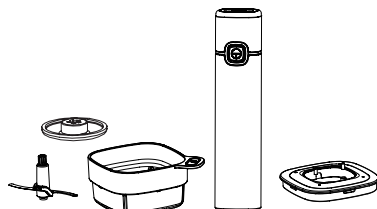 


圖6

# 清潔及保養

## ⚠ 警告！

- 清潔和保養前，必須拔除電源插頭及將攪拌刀從主機上拆下。
- 嚴禁將主機浸入水或其他液體中，或直接沖洗。

1. 清潔前必須確保本產品停止運作，待主機充份冷卻。
2. 清潔前先鬆開按鍵並拆下可移除的配件。
3. 用濕抹布擦拭主機，然後用乾抹布擦乾。嚴禁將主機浸泡在水中，避免觸電或引發火災。
4. USB線上不小心沾到的食物必須去除。
5. 攪拌刀及料理杯必須徹底清潔乾淨並擦乾。絞肉杯、肉類攪拌刀、杯蓋、佐料杯等可以放進洗碗機內清潔，然後徹底晾乾。

## ⚠ 警告！

取出攪拌刀和清潔期間必須小心，避免割傷。

## 拆除電池

在廢器本產品前必須將電池取出，並將電池安全地處置。

## 注意：

拆除電池前必須先將本產品斷電。

1. 將主機平放，用一字螺絲批強行將主機頂蓋撬開（圖1）。
2. 打開頂蓋後，用十字螺絲批把上蓋裝飾件內的4顆螺絲擰出（圖2）。
3. 用一字螺絲批撬開上蓋裝飾件後，用十字螺絲批擰出上蓋上的螺絲（圖3）。
4. 用一字螺絲批強行將主機上蓋撬開，取出電池後安全地處理（圖4）。

 


圖1

 


圖2

 


圖3

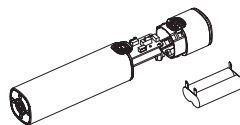 


圖4



# 故障檢修

## ⚠ 警告！

- 當本產品出現故障時，請進行以下檢查。
- 如仍無法解決，必須立即停止使用。聯絡德國寶客戶服務及維修中心，嚴禁私自拆解或修理本產品。

故障現象	原因分析	處理方法
產品不運作	電池電量不足，無法開機	為產品充電
	未按開關鍵開機	按開關鍵開機
使用期間突然停止工作	電池電量不足，自動關機	為產品充電
	單次使用的時間已到1分鐘	停機1分鐘後再使用
	負載過大，產品自動進入堵轉保護功能	關機後再次開機
產品過熱	連續使用多次	停止使用本產品，待其冷卻至少30分鐘

# 技術規格

---

型號	PRG-WL07
功率	70W
充電電壓	5V $\overline{\text{---}}$ 1A
額定電壓	7.4V $\overline{\text{---}}$
電池容量	2000mAh
每次最長使用時間	1分鐘
主機尺寸	(H)194 (W)45 (D)45mm
絞肉杯尺寸	(H)95 (W)124 (D)124mm
佐料杯尺寸	(H)46 (W)86 (D)86mm
淨重	1.39kg

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用說明書以[www.germanpool.com](http://www.germanpool.com)網上版為最新版本。

# 保用條款

# Warranty Terms & Conditions

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

\*貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)
- 2) 填妥本公司網頁保用登記表  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 3) 填妥保用卡郵寄至本公司



\* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) Visit our VIP App and register online:  
(Scan the QR Code on the right)
- 2) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : PRG-WL07

機身號碼 Serial No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_

發票號碼 Invoice No. : \_\_\_\_\_

購買日期 Purchase Date : \_\_\_\_\_

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞(包括運輸及其他)；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including material transfer and others);
  - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
  - the purchase invoice is modified by an unauthorized party;
  - the product is used for any commercial or industrial purposes;
  - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

## 客戶服務及維修中心

中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2773 2888

傳真：+852 2356 9798

電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

中國澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

## Customer Service & Repair Centre

Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street,

Kowloon, Hong Kong

Tel : +852 2773 2888

Fax : +852 2356 9798

Email : [repairs@germanpool.com](mailto:repairs@germanpool.com)

Macau, China

A, 1 Andar, Mei Kui Kuong

Cheong Fase 2, No.515 Avenida

Do Conselheiro Borja Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

## German Pool (Hong Kong) Limited

### Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau  
Kok Road, Tokwawan, Kowloon, Hong Kong.  
Tel: +852 2773 2888  
Fax: +852 2765 8215

### Mainland China

8th, Xinxiang Road, Wusha Industrial Park,  
Daliang, Shunde, Foshan, Guangdong  
Tel: +86 757 2219 6888  
Fax: +86 757 2219 6809

### Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,  
No.515 Avenida Do Conselheiro Borja, Macau  
Tel: +853 2875 2699  
Fax: +853 2875 2661



香港 (S MARK)  
安全認證



中國電器/康電行業  
十大影響力品牌

CEO

CEO非凡品牌大賞



香港優質商號



香港工商業獎



最具素質  
創建品牌企業獎



香港中小企業  
最佳拍檔大獎



香港消費者推銷品牌



香港 (O 導)  
優質服務證書



香港名牌十年成就獎  
HONG KONG TOP BRAND TEN YEAR  
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.