

Portable Cold Brew Coffee Maker | CMH-500



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

Table of Contents

Warnings & Safety Precautions 03

Product Structure 04

Operation Instructions 05

Cleaning & Maintenance 08

Technical Specification 08

Warranty Terms & Conditions 15

Warnings & Safety Precautions

 
WARNING!

Read all instructions carefully before using this product.


- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
 - This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
 - Mind your children and DO NOT let children play with this product.
 - Cleaning and user maintenance shall not be made by children without supervision.
 - Check the voltage indicated on the rating label before using this product.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
 - Unplug this product from the power source before cleaning and maintenance.
 - Contact German Pool authorized service technician for repair or maintenance of this product.
-
1. Please read this Instruction Manual carefully before using the product, and keep this manual properly for future reference.
 2. Please strictly follow the instructions below. Ignorance to any instruction or any operation error may lead to a major accident or other injuries.
 3. DO NOT turn on this product when it is being charged. Disconnect the cable before operating the product.
 4. This product applies to DC 5V. Please make sure the specification of your power adapter matches this product's rating label before use.
 5. Please put the product on a stable and level surface out of the reach of children.
 6. When charging, this product should be placed in a well ventilated place to avoid the main control unit from overheating due to insufficient ventilation.
 7. When this product is turned on, DO NOT move or tilt this product.
 8. DO NOT immerse or splash water on the main control unit of this product to avoid short-circuiting the unit.
 9. DO NOT dismantle the main control unit of this product by yourself, as improper configuration may lead to fire, electric shock or malfunction. Repair and maintenance must be made by German Pool authorized technician only.
 10. DO NOT let this product charge for a long time without being attended to.
 11. Remove and wash the brewing drum and filter every time after using.
 12. Before turning on the product, please make sure all parts are mounted properly.
 13. If the charging cable is damaged, it must be replaced by German Pool Customer Service & Repair Centre's qualified technicians in order to avoid hazards.
 14. This product is for home use only. DO NOT use it for commercial purpose.

Product Structure

Main Body

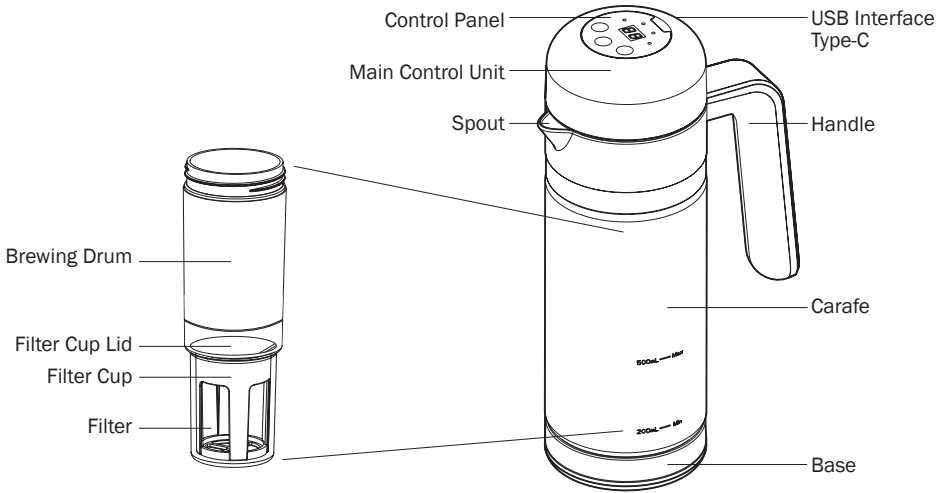

Control Panel

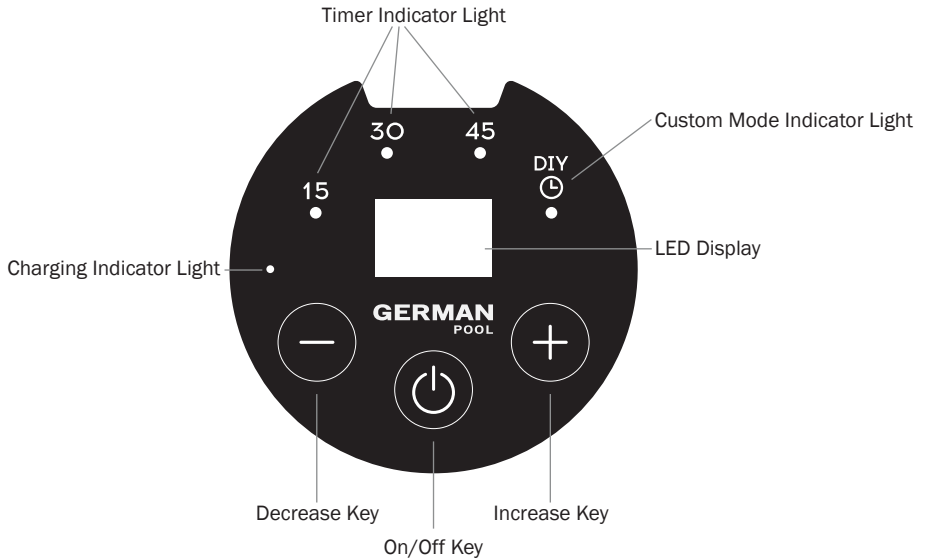 

Operation Instructions

⚠ WARNING!

- The power **MUST** be turned off before adding water and ground coffee.
- To avoid clogging the filter, it is recommended to use only medium or coarsely ground coffee powder.
- **DO NOT** fill to above the “MAX” water line (500ml).

 

Before Use

1. If the carafe is too full and the water level reaches the water detection sensor, the coffee maker will stop operating to prevent water seeping into the main control unit, and LED display will show “FU”.
2. Open the dustproof rubber cover and connect the product with the charging cable that comes with the package. The Charging Indicator Light will blink while charging, and light up constant once fully charged.
3. The recommended ratio of ground coffee to water is 1:10.
4. The brewing drum and filter cup **MUST** be screwed on tight to prevent ground coffee from leaking into the carafe.







Note:

- All indicator lights will blink when the battery is low, and charging is needed.
- When the coffee extraction speed is slow, charging is needed.


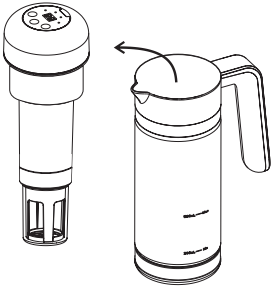
Brewing Coffee

<p>1</p>  <p>Take the main control unit and brewing drum out of the carafe.</p>	<p>2</p>  <p>Pour 200-500ml water into the carafe.</p>
--	---

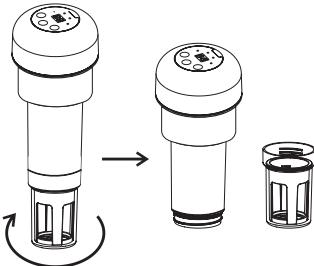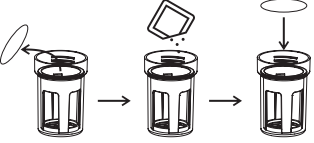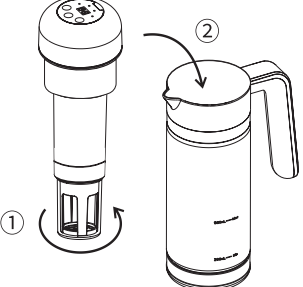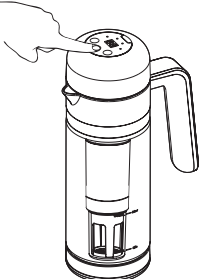    

Operation Instructions

<p>3</p>  <p>Twist the filter cup leftward (clockwise) to detach it from the brewing drum.</p>	<p>4</p>  <p>Remove the filter cup lid, add ground coffee into the filter cup, then put the filter cup lid back in place.</p>
<p>5</p>  <p>Screw the filter cup rightward (anticlockwise) onto the brewing drum, add ice cubes into the drum if desired. Put the main control unit and brewing drum back into the carafe, and make sure it is tightly capped.</p>	<p>6</p>  <p>Press On/Off Key  to turn on the product, the default setting is 15 minutes. Press On/Off Key  repeatedly to cycle among 15 minutes / 30 minutes / 45 minutes / Custom Mode.</p>

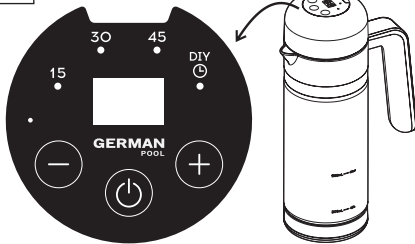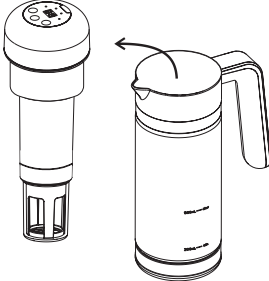  Operation Instructions

<p>7</p>  <p>After selecting the desired mode, the corresponding indicator light will blink for 3 seconds, then the product will automatically start brewing. LED Display will show countdown timer.</p>	<p>8</p>  <p>When brewing is completed, take out the main control unit and brewing drum from the carafe.</p>
--	--

Note:

- When selecting Custom Mode, the timer is set to 90 minutes by default. Press + or - Key to customize from 5 - 95 minutes.
- Press On/Off Key  five times and the product will cycle back to standby state; press and hold On/Off Key  for 3 seconds to turn off the product.
- When adding ice into the brewing drum, do not exceed the brewing drum's "Max" water line. If ice touches the sensors, the product will not operate.

Cleaning & Maintenance

WARNING!

Turn off the product and unplug from the power source before commencing cleaning or maintenance. DO NOT immerse or splash water on the main control unit to avoid short-circuiting the unit.

- The main control unit may be wiped clean with a wrung out soft cloth.
- The carafe, brewing drum and filter cup may be cleaned with water and soft sponge. DO NOT clean with abrasive cleansers, scouring pads or hard brushes.
- Use soft brush to gently clean the filter and filter cup lid if necessary, then wipe dry or let them air dry.
- If the product will not be used for a prolonged period of time, clean it thoroughly and wipe it dry. Detachable accessories should be allowed to air dry completely before storing away in a dry and well-ventilated place.

Technical Specification

Model	CMH-500
Voltage	DC 5V
Power	5 W
Charging Cable	USB Type-C
Carafe Capacity	500 ml
Filter Cup Capacity	20 g
Product Dimensions	(H) 287 (W) 169 (D) 95 mm
Net Weight	1 kg

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the English version shall prevail.
- Refer to www.germanpool.com for the most updated version of the User Manual.

目錄

警告及注意事項 10

產品結構 11

使用說明 12

清潔與保養 14

技術規格 14

保用條款 15

警告及注意事項

⚠ 警告！

 
使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩弄本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。


1. 使用前必須詳細閱讀本說明書操作指導，並妥善保管以供日後參考。
2. 嚴格遵守以下指示，無視該指示或操作失誤，都可能會導致嚴重意外事故或其他傷害。
3. 在充電期間，嚴禁啟動本產品。操作本產品前必須先拔掉充電線。
4. 本產品適用於5V直流電源。使用前必須認真檢查使用的電源適配器規格是否與本產品銘牌相符。
5. 使用時本產品應放置於穩定平台上，並放置於兒童觸摸不到的地方。
6. 充電期間，本產品必須置於通風位置以免主機因空氣不流通而過熱。
7. 本產品啟動期間，嚴禁移動或傾倒壺內液體。
8. 嚴禁將主機浸泡於水中清洗或讓液體流入機器內部，以免造成短路。
9. 嚴禁私自拆除零件維修，以免引起火災、漏電或其他故障。維修必須由德國寶授權專業技術員進行。
10. 嚴禁在長時間無人看管下為本產品充電。
11. 每次使用完畢，請及時拆下及清潔內杯及過濾器。
12. 使用本產品前請確保所有配件均安裝妥當。
13. 如果充電線損壞，為了避免危險，必須由德國寶客戶服務及維修中心的專業人員更換。
14. 本產品僅限家庭用途，嚴禁用於商業用途。

產品結構

主機

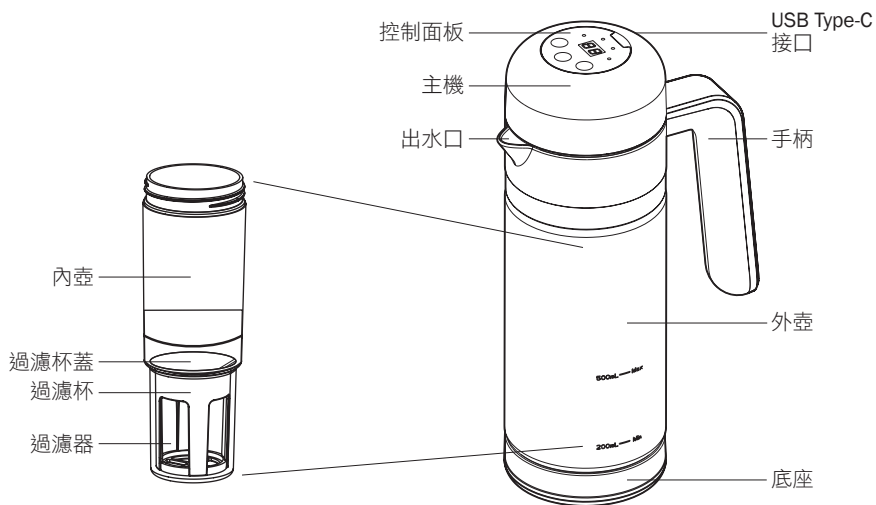

控制面板

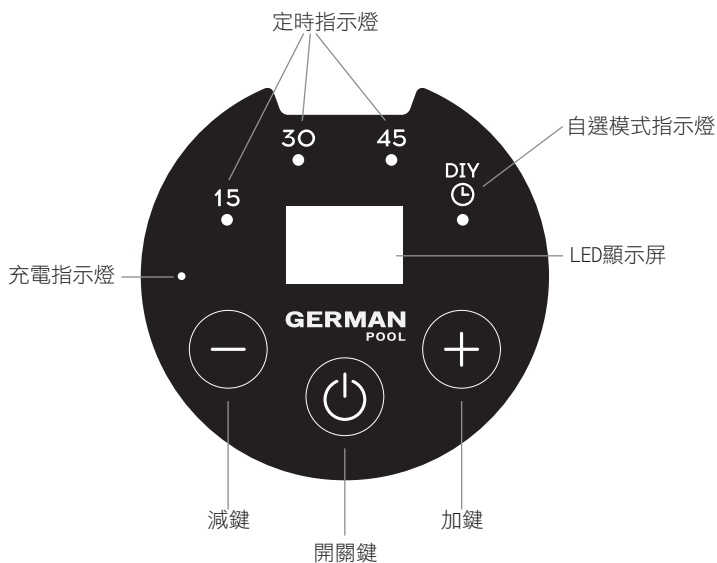 

使用說明

⚠ 警告！

- 在加水和研磨咖啡粉前必須確保已關上電源
- 為免堵塞過濾器，建議使用研磨中等或粗糙的咖啡粉。
- 嚴禁注水高於外壺「MAX」水位線 (500ml)。

 
使用前準備事項

1. 如果咖啡機內裝載的水太滿，水位達到感測器，本產品會停止運作以防止有水滲入主機，屏幕上會顯示「FU」。
2. 打開防塵膠塞並用跟機附送的充電線連接主機充電。充電時，指示燈會持續閃爍，電量全滿時指示燈會常亮。
3. 咖啡粉和水的建議比例為1:10。
4. 必須扭緊內壺及過濾杯以防止咖啡粉漏出到外壺。

注意：

- 電量不足時，全部指示燈同時閃爍，需接上電源。
- 當萃取速度過慢時，需接上電源。



沖製咖啡

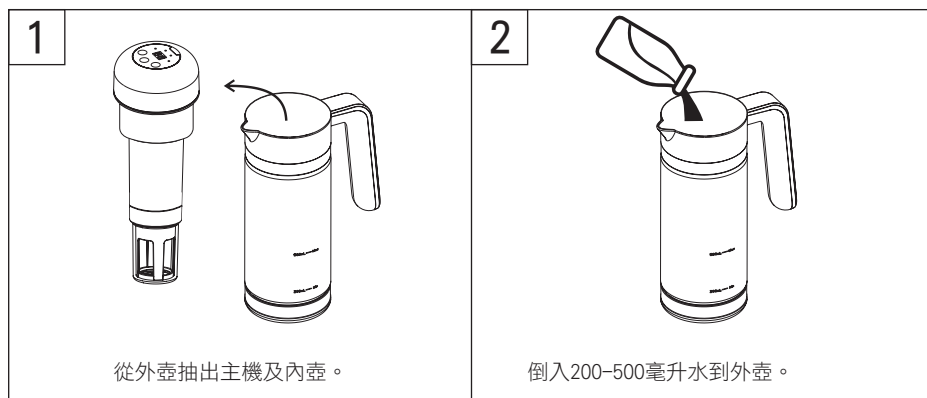

使用說明

<p>3</p>  <p>將內壺底部的過濾杯向左（順時針）旋轉拆出。</p>	<p>4</p>  <p>拆下過濾杯蓋，在過濾杯中倒入研磨咖啡粉，再蓋上過濾杯蓋。</p>
<p>5</p>  <p>將過濾杯向右（逆時針）旋轉裝回內壺。如有需要，可加入冰塊在內壺裡。再將主機及內壺穩固地裝回外壺。</p>	<p>6</p>  <p>按開關鍵  開機，預設運行時間為15分鐘。重複按開關鍵  循環選擇15分鐘/30分鐘/45分鐘/自選模式。</p>
<p>7</p>  <p>選擇完成後，相應指示燈閃爍3秒，產品自動運行，顯示屏顯示剩餘時間。</p>	<p>8</p>  <p>冷萃完成後，抽出主機及內壺，然後倒出咖啡。</p>

  注意：

- 如使用自選模式，預設運行時間為90分鐘，按+或-鍵調整運行時間，可調時間為5-95分鐘。
- 按開關鍵  5次，本產品會返回待機模式；長按開關鍵  3秒可即時關機。
- 如要加入冰塊，嚴禁超過內壺「**Max**」水位線，如冰塊接觸到感應器，產品不會啟動。

清潔與保養

⚠ 警告！

清潔及保養本產品前必須關機並拔出充電線。

嚴禁將主機浸入水中或直接沖洗，以免導致機件短路。

- 主機表面請使用微濕抹布清潔。
- 其他可拆卸部件（如內外壺、過濾杯等）可用清水及軟海綿清洗。嚴禁使用研磨性清潔劑、百潔布或硬刷清洗。
- 如有需要，可用軟刷輕輕清潔過濾器及過濾杯蓋，然後抹乾或讓其風乾。
- 如長時間不使用本產品時，請清潔乾淨後擦乾機身，將可拆卸部件完全晾乾後存放於乾燥通風處。

技術規格

型號	CMH-500
電壓	DC 5V
功率	5 W
充電線	USB Type-C
外壺容量	500 ml
過濾杯容量	20 g
產品尺寸	(H) 287 (W) 169 (D) 95 mm
淨重	1 kg

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以英文版為準。
- 本產品使用說明書以www.germanpool.com網上版為最新版本。

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥本公司網頁內之保用登記表格

www.germanpool.com/warranty

2) 填妥保用登記卡，郵寄至本公司。



* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:

www.germanpool.com/warranty

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : CMH-500

機身號碼 Serial No. : _____ 發票號碼 Invoice No. : _____

購買商號 Purchased From : _____ 購買日期 Purchase Date : _____

- 未能出示購買發票正本者，將不獲免費維修服務。
- 用戶應依照說明書的指示操作。本保用並不包括：
 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞(包括運輸及其他)；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
- 於下列情況下，用戶之保用資格將被取消：
 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被擅自塗改、破壞或刪除。
- 總代理有權選擇維修或更換配件或其損壞部份。
- 產品一經被轉讓，其保用即被視作無效。

- Customer who fails to present original purchase invoice will not be eligible for free warranty service.
- Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
- This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
- German Pool will, at its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：repairs@germanpool.com

中國澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

Customer Service & Repair Centre

Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street, Kowloon

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,

No.515 Avenida Do Conselheiro Borja, Macau

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwanan, Kowloon, Hong Kong.
Tel: +852 2773 2888
Fax: +852 2765 8215

Mainland China

8th, Xinxiang Road, Wusha Industrial Park,
Daliang, Shunde, Foshan, Guangdong
Tel: +86 757 2219 6888
Fax: +86 757 2219 6809

Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,
No.515 Avenida Do Conselheiro Borja, Macau
Tel: +853 2875 2699
Fax: +853 2875 2661



香港《S MARK》
安全認證



中國櫥櫃/家電行業
十大影響力品牌



CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007
最具潛質
創星品牌企業獎



香港中小企業
最佳拍檔大獎



香港消費者推祟品牌



香港《Q標》
優質服務證書



香港名牌十年成就獎
HONG KONG TOP BRAND TEN YEAR
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.