

WiFi Smart Air Purifying Duhumidifier | DHM-807-SC



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

請即進行保用登記！
有關保用條款細則，請看說明書最後一頁。

Please register your warranty information now !
For Warranty Terms & Conditions,
please refer to the last page of this user manual.

Table of Contents

Warnings & Safety Precautions 04

Product Structure 06

Operation Instructions 07

Cleaning & Maintenance 18

Troubleshooting 19

Technical Specification 20

Warranty Terms & Conditions 39

Warnings & Safety Precautions

WARNING!

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.
- Contact German Pool authorized service technician for repair or maintenance of this product.

1. This product must be installed in compliance with local regulations, laws and guidelines. This product is only suitable for use in a dry and indoor environment. This product must be used with a reliably earthed 220-240V / 50Hz power supply system.
2. To allow this product to perform at its optimum, DO NOT place this product near radiator or other heat sources.
3. To maximize the efficacy of this product, it is recommended that all windows and doors be closed when using this product.
4. The dehumidifying capacity of a dehumidifier depends on the temperature and humidity in the room. When temperature is low, only little moisture can be removed.

Attention:

- This product must be connected to an earthed socket. DO NOT connect this product if the power source is not earthed.
- When this product is connected to the power source, make sure the plug can be easily accessible.
- Read this user manual thoroughly and follow all instructions strictly.
- DO NOT use this product if its power cord, plug, casing or control panel is damaged.
- DO NOT curl the power cord, and DO NOT let sharp instruments come in contact with the power cord.
- If the instructions in this user manual are not strictly adhered to, it may lead to this product's warranty becoming voided.


Warnings & Safety Precautions

Pay attention to the following before connecting this product to the power source:


1. The power supply's voltage must match the rated voltage printed on the rating label.
2. The power socket and power source must match the standard printed on the rating label.
3. The plug of the power cord must fit the wall outlet.
4. This product must be placed on a level and sturdy surface.
5. The current supply must comply with safety standards.
6. DO NOT cover the air inlet and outlet.
7. Empty all water in the water tank before moving this product.
8. This product must be kept far away from all chemical substances.
9. DO NOT splash water on this product or immerse this product in water.
10. DO NOT insert any item into this product's air vents.
11. Make sure to unplug from the power source before cleaning this product or replacing any of its parts (or machinery parts).
12. DO NOT connect this product to any adaptor or extension unit. If the wall socket does not fit the plug, the wall socket must be replaced by a professional technician.
13. For safety reasons, DO NOT allow children near or use this product.
14. Repair of this product must only be conducted by German Pool Customer Service & Repair Centre, a professional electrician or the product supplier. The use and maintenance of this product must be carried out in accordance with the operation instructions in this user manual.
15. When this product is not used, unplug it from the power source.
16. When the power cord or power plug is damaged, stop using this product immediately and have it replaced by German Pool Customer Service & Repair Centre.

Product Structure

Front

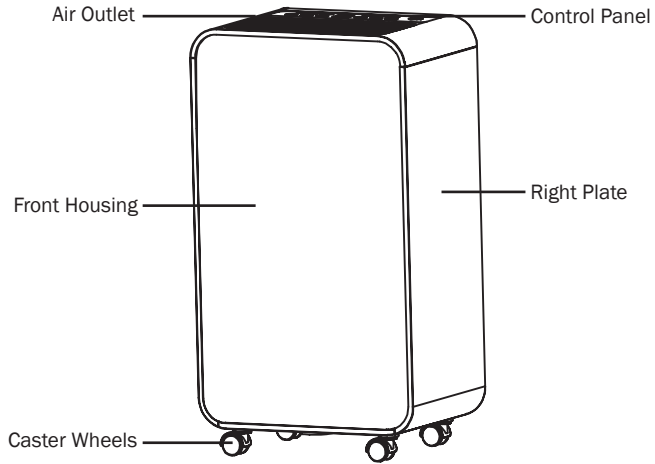


Back

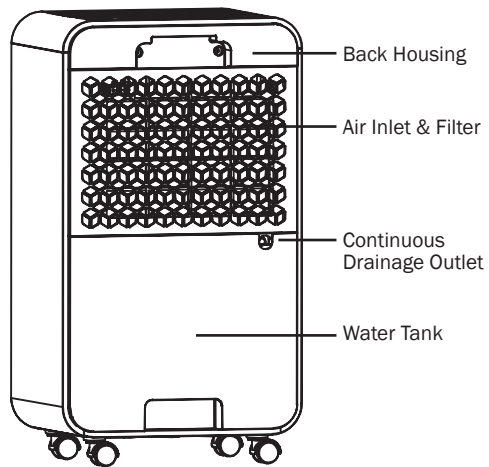





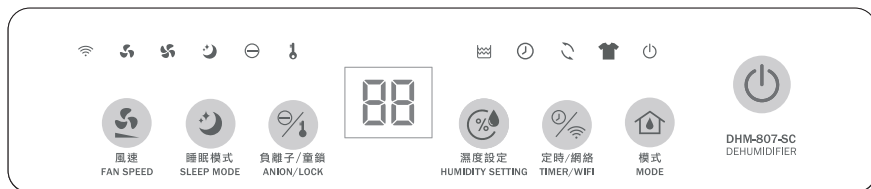


Operation Instructions

Control Panel



| Icon | Description | |
|------|---------------------------------|---|
| | Power Indicator Light | When product is turned on, this indicator light lights up constant in white |
| | Dry Mode Indicator Light | When product is set to Dry Mode, this indicator light lights up constant in white |
| | Dehumidify Mode Indicator Light | When product is set to Dehumidify Mode, this indicator light lights up constant in white |
| | Timer Indicator Light | When Timer Function is turned on, this indicator light lights up constant in white |
| | Water Tank Full Indicator Light | When water tank is full, this indicator light lights up constant in red |
| | Child Lock Indicator Light | When Child Lock is activated, this indicator light lights up constant in white |
| | Anion Indicator Light | When Anion Function is turned on, this indicator light lights up constant in white |
| | Sleep Mode Indicator Light | When the product is set to Sleep Mode, this indicator light lights up constant in white |
| | High Fan Indicator Light | When product is set on High Fan Speed, this indicator light lights up constant in white |
| | Low Fan Indicator Light | When product is set on Low Fan Speed, this indicator light lights up constant in white |
| | WiFi Indicator Light | <ul style="list-style-type: none"> When connecting to WiFi, this indicator light blinks in white When WiFi connection is successful, this indicator light lights up constant in white |

Operation Instructions





| Button | | Description |
|---|------------------|---|
|  | On/Off | <ul style="list-style-type: none"> In standby state, press this button 1 time to turn on the product. By default, product is set to 50% humidity and High Fan Speed Press this button 1 time again to turn off the product. Compressor will stop running, and fan will stop running after 30 seconds |
|  | Mode | <ul style="list-style-type: none"> Press this button to switch between Dehumidify Mode and Dry Mode |
|  | Timer/WiFi | <ul style="list-style-type: none"> Press this button repeatedly to adjust Timer between 0-24 hour Each press adds 1 hour until setting reaches 00 then timer will be cancelled Long-press this button 5 seconds to turn on WiFi Connection Mode |
|  | Humidity Setting | <ul style="list-style-type: none"> Press this button 1 time to check the current target humidity Press this button repeatedly to set target humidity between 30-80% Each press raises target humidity by 5% until setting reaches 80% then cycles back to 30% Long-press this button 5 seconds to display current ambient temperature |
|  | Anion/Child Lock | <ul style="list-style-type: none"> Press this button to turn Anion Function on and off Long-press this button 3 seconds to lock or unlock Child Lock |
|  | Sleep Mode | <ul style="list-style-type: none"> Press this button to turn Sleep Mode on and off |
|  | Fan Speed | <ul style="list-style-type: none"> Press this button to switch between High Fan Mode and Low Fan Mode This button is disabled when product is in Dry Mode, Sleep Mode or defrosting |

A. Basic Operation

 
WARNING!

When this product is in use, make sure there is an empty space of at least 20 cm behind the product's back housing so that there is nothing blocking the air inlet.

Turn On









- After connecting to the power source, buzzer beeps once, display panel shows “— —”, and product enters standby state.
- Press On/Off Button  to turn on the product. Power Indicator Light , High Fan Indicator Light , Dehumidify Mode Indicator Light  will all light up constant, display panel shows current ambient humidity. By default, product is set to 50% humidity and High Fan Speed.
- If ambient humidity is high, compressor will run; if ambient humidity is low, compressor will not run.




Note:

 When product is turned on, pressing On/Off Button  will turn off product. Compressor will stop running, and fan will turn off after 30 seconds.

Operation Instructions

Mode Selection



- Press Mode Button  switch between Dehumidify Mode  and Dry Mode , the corresponding indicator light lights up constant.
- Press Sleep Mode Button  to turn on Sleep Mode, Sleep Mode Indicator Light  lights up constant; press Sleep Mode Button  again to turn off Sleep Mode , Sleep Mode Indicator Light  goes dark.

| | |
|---|---|
| Dehumidify Mode  | Default setting is 50% humidity and High Fan Speed, target humidity and fan speed are adjustable |
| Dry Mode  | Compressor will run continuously in High Fan Speed, target humidity and fan speed not adjustable |
| Sleep Mode  | Default setting is 50% humidity and Low Fan Speed, target humidity and fan speed not adjustable; if product does not receive any command in 3 seconds, all indicator lights turn dim, press any key to wake up indicator lights |

Note:

- Dry Mode facilitates the drying of laundry by lowering ambient humidity level, not directly drying laundry with dry heat.
- At all times, DO NOT cover the product's air outlet, and DO NOT hang wet laundry on top of the product to avoid water dripping into and damaging the product. When drying laundry, please close all windows and doors to facilitate the drying process.




Adjusting Target Humidity

1. Press Humidity Setting Button  repeatedly to select target humidity between 30-80%.
2. After target humidity is selected, display panel blinks 3 seconds then product will automatically confirm setting, and display panel shows the current ambient humidity.
3. To check the set target humidity, press Humidity Setting Button  1 time.
4. If ambient humidity is high, compressor will run; if ambient humidity is low, compressor will not run.

Note:

In Dry Mode  or Sleep Mode , target humidity is not adjustable.

Adjusting Fan Speed

Press Fan Button  to switch between High Fan Speed  and Low Fan Speed , the corresponding Fan Speed Indicator Light will light up constant.





Note:

In Dry Mode  or Sleep Mode , fan speed is not adjustable.





Operation Instructions

B. Advanced Operation







Anion Function

1. Press Anion/Child Lock Button  to turn on Anion Function, Anion Indicator Light  lights up constant.
2. Press Anion/Child Lock Button  again to turn off Anion Function, Anion Indicator Light  goes dark.


Child Lock Function

1. Long-press Anion/Child Lock Button  for 3 seconds to turn on Child Lock Function , Child Lock Indicator Light lights up constant, all buttons become inoperable.
2. Long-press Anion/Child Lock Button  for 3 seconds again to turn off Child Lock Function , Child Lock Indicator Light goes dark.

Timer Function

1. Set product to turn on (On-Timer): In standby state, press Timer/WiFi Button  repeatedly to select Timer between 0-24 hour, display panel blinks for 3 seconds then automatically confirm setting, display panel will start to countdown and Timer Indicator Light  lights up constant. When countdown finishes, the product will automatically turn on.
2. Set product to turn off (Off-Timer): When product is operating, press Timer/WiFi Button  to select Timer between 0-24 hour, display panel blinks for 3 seconds then automatically confirm setting, display panel will show current ambient humidity, and Timer Indicator Light  lights up constant.
3. Cancel timer: Press Timer/WiFi Button  until display panel shows "00", display panel will blink for 3 seconds then cancel timer, and Timer Indicator Light  goes dark.

C. Drainage Instructions

When the water tank is full, the product will automatically stop operating, Water Tank Full Indicator Light  will light up constant in red, buzzer will beep continuously.

1. Turn off the product, then pull out the water tank and empty out the water.
2. Reinstall the water tank, make sure the water tank is inserted back properly into the product body.
3. Turn on the product and it will resume normal operation.

Note:

If water tank is not properly installed, the buzzer will beep continuously.

Continuous Drainage

This product is equipped with a continuous drainage outlet, user can purchase a drainage hose with inner diameter 9.5mm, and connect it to the back of the product body to drain off water. It is recommended not to immerse the end of the drainage hose in water or use a drainage hose that is too long, which may lead to the opening of the hose becoming clogged and causing pressure to build up inside the hose, resulting in inadequate drainage leading to water leakage.

Operation Instructions

Connecting The Product To WiFi

This product can be controlled via smartphone with German Pool Smart Control APP.

A. How To Set Up The APP

1. Connect your phone to WiFi then scan the QR Code below to download and install German Pool Smart Control APP.



Apple IOS System
App Store




Android System
Google Play


2. Open the APP and click “Sign Up” to register your account (Pic 1).
3. Enter your email address, click “Get Verification Code” and a one-time verification code (OTP) will be sent to your email (Pic 2).
4. Enter OTP, set up your password then click “Done” (Pic 3).



Pic 1

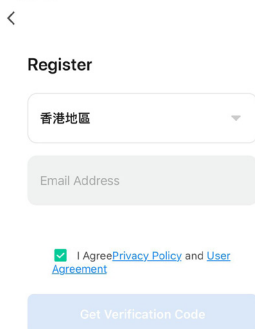


Pic 2

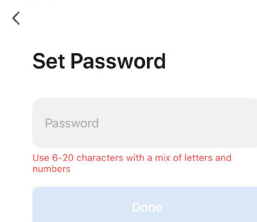

Pic 3

Operation Instructions

B. Pairing Sequence

1. Click “+” on the upper right corner of the APP homepage, then click “Add Device” (Pic 4).
2. Long-press the dehumidifier’s Timer/WiFi Key  for 5 seconds until buzzer beeps for 5 times and WiFi Indicator Light blinks.
3. APP will show “Discovering devices...”. When you see the dehumidifier’s icon, click “Add” (Pic 5), APP will show a large icon of the dehumidifier, click “+” on the right.
4. Select WiFi name and enter your WiFi password, then click “Next” (Pic 6). Dehumidifier and APP will automatically pair up (Pic 7).

Note:


During Pairing Sequence, if APP shows an exclamation mark icon, it means pairing is unsuccessful. Please repeat the steps in “B. Pairing Sequence” to pair again.

5. When pairing is completed, APP will show “Added successfully”. Click “Done” on the upper right corner to return to homepage (Pic 8).


Note:

- The product can only be paired to one account at a time. If another user pairs their smartphone to the product, the previous account will lose their control of the product.
- User who has already been paired can share their control rights with other users. For details, see “C. Sharing Control”.


Operation Instructions

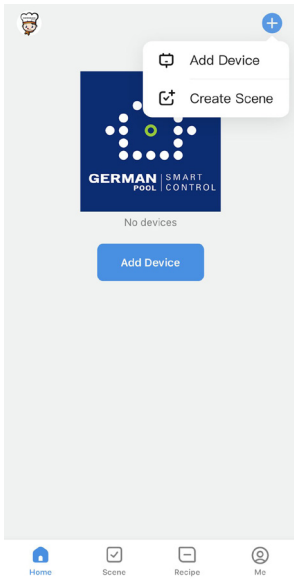


Pic 4

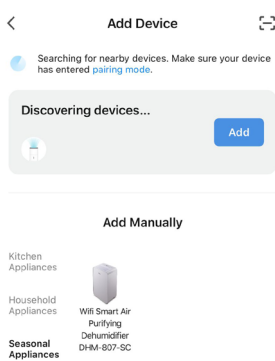


Pic 5

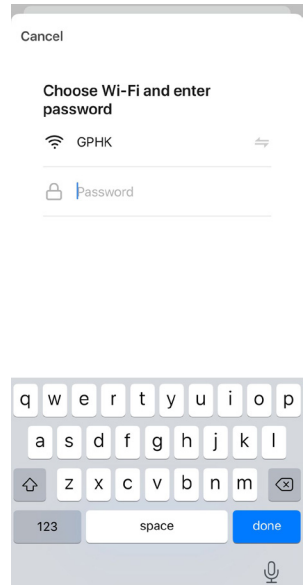

Pic 6

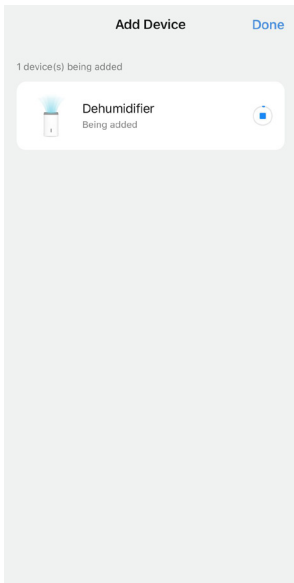


Pic 7

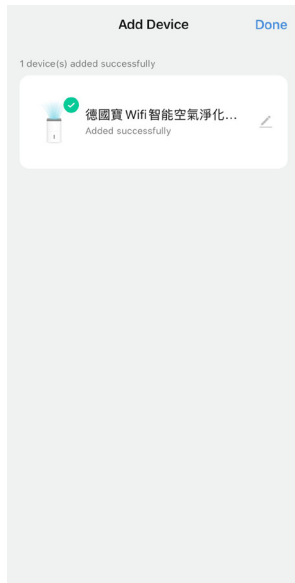

Pic 8


Operation Instructions

C. Sharing Control


1. On the dehumidifier's homepage, click “Settings 

Note:


On the “Share Device” page, you can add or delete other accounts' control rights.

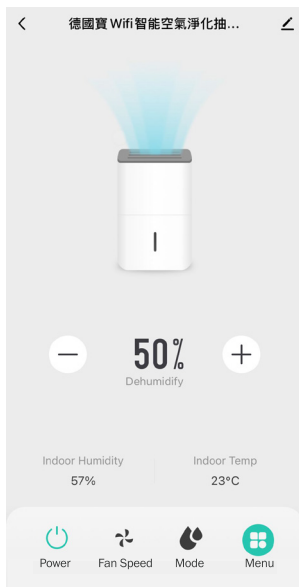

Pic 9

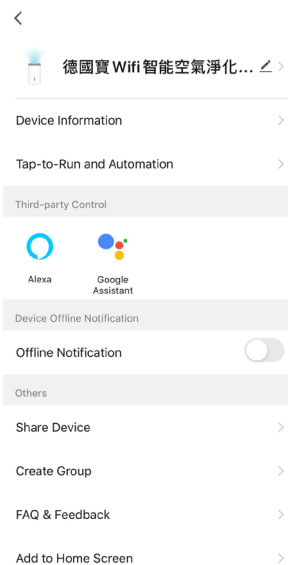

Pic 10

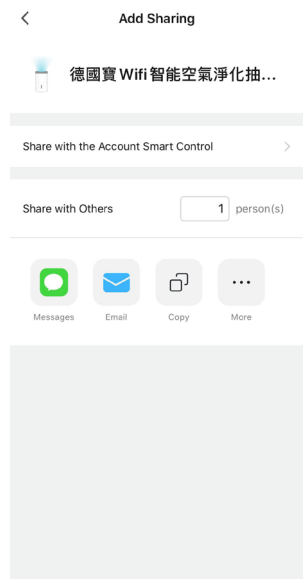
 

 
 














Pic 11

 Operation Instructions


Controlling The Product With The APP




| Key | | Description |
|---|-----------------------------------|--|
|  | On/Off | <ul style="list-style-type: none"> Tap this key to turn on the product. By default, product is set at 50% humidity and High Fan Speed . Tap key 1 time again to turn off the product. Compressor will stop operating, and fan will run for 30 seconds more before turning off |
|  | Target Humidity Decrease/Increase | <ul style="list-style-type: none"> Tap Increase Key + to increase target humidity by 5%; tap Decrease Key - to decrease target humidity by 5% Target humidity is adjustable from 30-70% These keys are not operable in Dry Mode  or Sleep Mode  |
|  | Fan Speed | <ul style="list-style-type: none"> Tap this key then select High Wind Speed  or Low Wind Speed  This key is not operable in Dry Mode , Sleep Mode  or when product is defrosting Fan Speed Key icon will change in accordance with the selected fan speed |
|  | Mode | <ul style="list-style-type: none"> Tap this key then select Dehumidify Mode  / Dry Mode  / Sleep Mode  Mode Key icon will change in accordance with the selected mode |
|  | Menu | <ul style="list-style-type: none"> Tap this key then select Timer Function  or Child Lock Function  |


Operation Instructions

Timer Function


1. Select Timer Function  to enter into Timer Function page. Tap “Add” to enter Timer Setting page (Pic 1).
2. In Timer Setting page, user can set the following parameters (Pic 2):
 - a. Select time.
 - b. “Repeat” section: Select whether you wish to repeat this timer (select day/s of the week; when Timer is turned on, the dehumidifier will run according to the setting for that specific day of the week).
 - c. “Note” section: Make remark for your own reference.
 - d. “Notification” section: Select whether you want to receive notification when the dehumidifier activates the timer.
 - e. “Power” section: Set the timer as On-Timer (time to turn on the product) or Off-Timer (time to turn off the product).
3. After setting is completed, return to Timer Function page. If you wish to add more timers, tap “Add Schedule” at the bottom of the page (Pic 3).

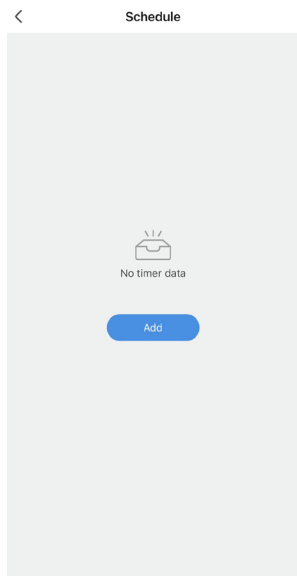

Pic 1

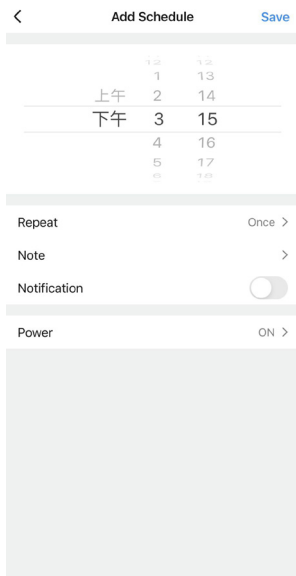

Pic 2

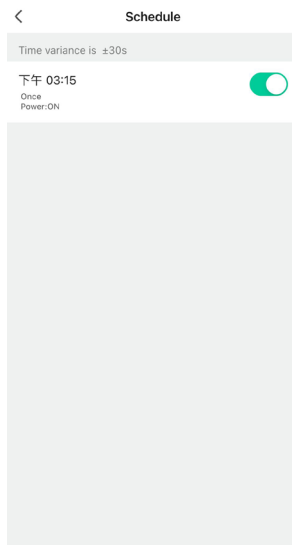




Add Schedule

Pic 3


Operation Instructions

Child Lock Function

1. Tap the switch on the right of the Child Lock icon  to turn Child Lock on and off. Green indicates Child Lock is on, grey indicates Child Lock is off (Pic 4).
2. When Child Lock is turned on, dehumidifier homepage will show a Child Lock icon. Tapping the icon  can turn off Child Lock directly (Pic 5).

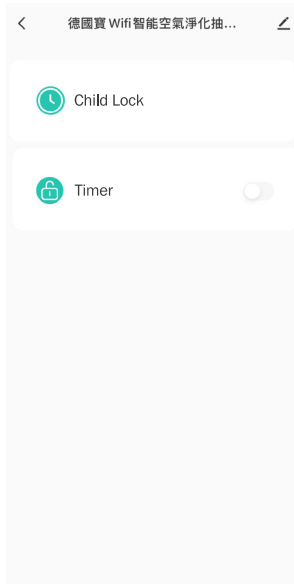

Pic 4

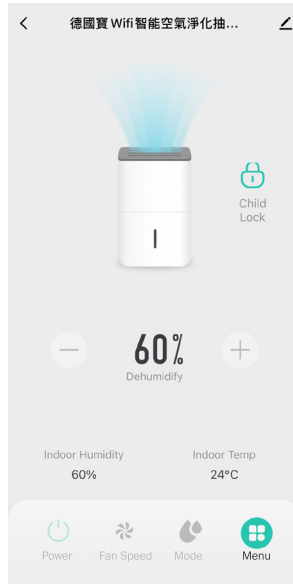

Pic 5

Cleaning & Maintenance

WARNING!

- Unplug the product from the power source before cleaning and maintenance to avoid the possibility of electric shock.
- DO NOT immerse or rinse the product body with water.

Cleaning The Product Body

The product body may be wiped with a wrung out soft cloth.

Cleaning The Filter

1. Remove the filter from the back housing, and use vacuum cleaner to remove the dust on the filter.
2. If the filter is very dirty, use warm water and gentle detergent to rinse off the dirt then allow the filter to air dry completely.
3. Reinstall the filter properly onto the back housing of the product body.

Storage

If this product will not be used for a prolonged period of time, please store it away according to the steps below:

1. Pour off any residual water in the water tank, and wipe off any water that has dripped onto the base of the water tank slot.
2. Dry off the water tank, and store the power cord inside it.
3. Clean off the filter.
4. Store this product in a dry and ventilated place away from sunlight.

Troubleshooting

- When ambient temperature is lower than 5 °C or higher than 35 °C, compressor will not operate.
- When ambient temperature is between 5-16 °C, compressor will automatically defrost periodically; during defrosting, compressor will not operate, but fan will continue to run.
- When this product is operating or when turning it off, the refrigerant may emit an echo sound, this is a normal phenomenon and is not a malfunction.
- This product's air outlet emitting warm air is a normal phenomenon.

| Problem | Possible Cause | Solution |
|--|--|--|
| Product does not start | Is the power cord connected properly? | Plug the plug into the socket properly |
| | Water Tank Full indicator light lit up means the water tank is full or not properly inserted | Empty out the water tank and reinsert properly |
| | Is room temperature outside of 5-35 °C? | When protection mechanism is activated, product will not start |
| Dehumidifying effect is not pronounced | Is the filter clogged? | Clean filter according to instructions in "Cleaning & Maintenance" section |
| | Is air inlet or outlet blocked? | Remove blockage from air inlet or outlet |
| | Is target humidity level close to or higher than current ambient humidity? | Set target humidity to at least 5% lower than current ambient humidity |
| No air is sucked in | Is the filter clogged? | Clean filter according to instructions in "Cleaning & Maintenance" section |
| Product is noisy when operating | Is the product placed on a slanted surface? | Place the product on a level and sturdy surface |
| | Is the filter clogged? | Clean filter according to instructions in "Cleaning & Maintenance" section |
| Display shows error code "E2" | Temperature or humidity sensor damaged or affected with damp | Replace temperature or humidity sensor |
| Display shows error code "CL" | When ambient temperature < 5 °C, product will display this error code, compressor will not operate, but fan and other parts will function as normal | |
| Display shows error code "CH" | When ambient temperature > 35 °C, product will display this error code, compressor will not operate, but fan and other parts will function as normal | |
| Display shows error code "LO" | When ambient humidity < 20%RH, product will display this error code, compressor will not operate, but fan and other parts will function as normal (except when Dry Function is on) | |
| Display shows error code "HI" | When ambient humidity > 90%RH, product will display this error code, compressor and other parts will function as normal | |

WARNING!

- Before maintenance work, turn off the product and unplug product from power source.
- This product must be installed and repaired by the manufacturer's authorized after-sales personnel only; if consumers entrust personnel not designated by the manufacturer, or if consumers perform repair work on their own, there may be a risk of personal injury or property loss.

Technical Specification

| Model | DHM-807-SC |
|---|----------------------------|
| Rated Voltage / Frequency | 220 - 240 V ~ 50 Hz |
| Rated Dehumidification Capacity (26.7 °C, RH60%) | 6.8 L / Day |
| Power Input (26.7 °C, RH60%) | 160 W |
| Rated Dehumidification Capacity (30 °C, RH80%) | 12 L / Day |
| Rated Power Input (EN60335) | 225 W |
| Applicable Room Temperature | 5-35 °C |
| Water Tank Capacity | 2 L |
| Product Dimensions | (H) 500 (W) 280 (D) 200 mm |
| Net Weight | 11.5 kg |

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to www.germanpool.com for the most update version of the user manual.

請即進行保用登記！
有關保用條款細則，請看說明書最後一頁。

Please register your warranty information now !
For Warranty Terms & Conditions,
please refer to the last page of this user manual.

目錄

| | |
|---------|----|
| 警告及注意事項 | 23 |
| 產品結構 | 24 |
| 使用說明 | 25 |
| 清潔及保養 | 36 |
| 故障檢修 | 37 |
| 技術規格 | 38 |
| 保用條款 | 39 |

警告及注意事項

⚠ 警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩弄本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

1. 本產品的安裝必須遵守所在地的規章、法律和準則。本產品僅適合放置在乾燥地方和室內使用。使用本產品必須要連接地線和220-240V/50Hz電壓。
2. 為使本產品達到最佳性能，嚴禁將本產品靠近散熱器附近和其他熱源。
3. 為使本產品達到最大功效，使用時建議關閉室內所有窗戶。
4. 抽濕機的除濕能力取決於室內的溫度和濕度。在較低溫度下，只能去除很少潮氣。

注意：


- 本產品必要連接地線。如電源沒有連接地線，嚴禁連接本產品。
- 本產品接通電源時，必須保證插頭容易接近。
- 必須仔細閱讀本說明書並嚴格遵守。
- 嚴禁使用損壞的電源線、插頭、機殼或控制面板。
- 嚴禁捲曲電源線，嚴禁接觸鋒利的器械。
- 不遵守說明書可能導致本產品的保修無效。

連接電源前必須注意以下事項：


1. 電壓的供應必須和電源標貼上的額定電壓相符合。
2. 插座和電源必須符合電源標貼上的標準。
3. 電源線的插頭必須適合壁上插座。
4. 必須放置在平穩的地方。
5. 電流供應必須符合安全標準。
6. 嚴禁覆蓋空氣進出口。
7. 移動本產品前必須倒空水箱裏的水。
8. 必須使本產品遠離化學物質。
9. 嚴禁向本產品噴灑水或將本產品淹沒在水中。
10. 嚴禁將物體插入本產品的通風口。
11. 在清洗或更換本產品（或機器零部件）時，必須拔掉電源插頭。
12. 嚴禁在電源線上接其他任何分線。如果插座不合適，必須由專業人員安裝合適的壁上插座。
13. 為安全起見，嚴禁讓兒童接近或使用本產品。
14. 本產品的任何維修工作必須由德國寶客戶服務及維修中心處理。本產品的使用和保養一定要按照操作說明進行。
15. 不使用本產品時，必須拔掉電源插頭。
16. 電源線或電源插頭被損壞時必須立即停止使用，並交由德國寶客戶服務及維修中心更換。

產品結構

正面

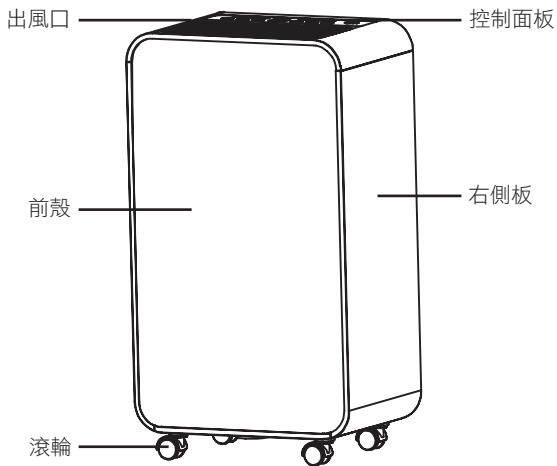


背面

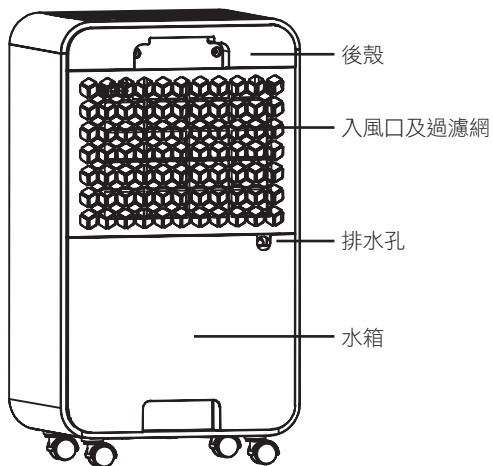

使用說明

控制面板

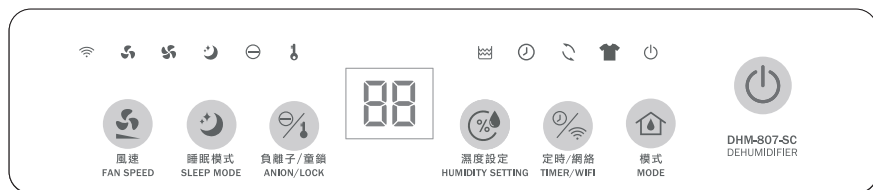

| 圖標 | 說明 | |
|----|---------|--|
| | 電源指示燈 | 開機後指示燈以白色常亮 |
| | 乾衣模式指示燈 | 當模式設置為乾衣模式時，指示燈以白色常亮 |
| | 除濕模式指示燈 | 當模式設置為除濕模式時，指示燈以白色常亮 |
| | 定時指示燈 | 當設置定時功能後，指示燈以白色常亮 |
| | 水箱滿水指示燈 | 當水箱水滿後，指示燈以紅色常亮 |
| | 童鎖指示燈 | 當啟用童鎖後，指示燈以白色常亮 |
| | 負離子指示燈 | 當啟用負離子功能後，指示燈以白色常亮 |
| | 睡眠模式指示燈 | 當模式設置為睡眠模式時，指示燈以白色常亮 |
| | 高風速指示燈 | 當風速設置為高風速時，指示燈以白色常亮 |
| | 低風速指示燈 | 當風速設置為低風速時，指示燈以白色常亮 |
| | WiFi指示燈 | <ul style="list-style-type: none"> · 連接WiFi時，指示燈以白色閃爍 · 連接成功後，指示燈以白色常亮 |

使用說明





| 按鍵 | | 說明 |
|---|---------|---|
|  | 開關鍵 | <ul style="list-style-type: none">在待機狀態下，按此鍵開機，預設以濕度50%及高風速運行再按1次關機，壓縮機停止運行，風扇延時30秒後關閉 |
|  | 模式鍵 | <ul style="list-style-type: none">按此鍵循環選擇「除濕模式」或「乾衣模式」 |
|  | 定時/網絡鍵 | <ul style="list-style-type: none">按此鍵可循環選擇0-24小時定時每按1次增加1小時，直至設置為00可取消定時長按此鍵5秒進入WiFi連接模式 |
|  | 濕度鍵 | <ul style="list-style-type: none">按此鍵1次查看當前所設置的濕度再按可循環選擇30-80%濕度每按1次增加5%濕度直至設置達80%，之後再循環回復至30%長按5秒顯示當前環境溫度 |
|  | 負離子/童鎖鍵 | <ul style="list-style-type: none">按此鍵開啟或關閉負離子功能長按此鍵 3 秒開啟或關閉童鎖功能 |
|  | 睡眠鍵 | <ul style="list-style-type: none">按此鍵開啟或關閉睡眠模式 |
|  | 風速鍵 | <ul style="list-style-type: none">按此鍵循環選擇高風速或低風速在乾衣模式、睡眠模式或除霜期間無法使用 |

A. 基本操作


⚠ 警告！

 使用本產品時，確保產品後部與其他物體的最小間距為20厘米，確保入風口無阻塞。

開機





 


- 接通電源後，蜂鳴器發出提示聲1聲，顯示屏顯示「--」，產品進入待機狀態。
- 按「開關鍵 」開機，電源指示燈 、高風速指示燈  及除濕模式指示燈  常亮，顯示屏顯示當前環境濕度，預設以濕度50%及高風速運行。
- 壓縮機根據環境濕度而定是否運行。




注意：

開機後再按「開關鍵 」關機，壓縮機停止運行，風扇延時30秒後關閉。

使用說明

選擇模式



- 按「模式鍵 」可循環選擇除濕模式  或乾衣模式 ，相應指示燈常亮。
- 按「睡眠鍵 」啟用睡眠模式，睡眠模式指示燈  常亮。再按「睡眠鍵 」關閉睡眠模式，睡眠模式指示燈  熄滅。

| | |
|--|---|
| 除濕模式  | 預設以濕度50%及高風速運行，目標濕度及風速可調節 |
| 乾衣模式  | 壓縮機持續以高風速運行，目標濕度及風速不可調節 |
| 睡眠模式  | 預設以濕度50%及低風速運行，目標濕度及風速不可調節；如3秒內無任何按鍵操作，所有指示燈變暗，此時按任意鍵可喚醒指示燈 |



注意：

- 乾衣功能以抽走空氣水份令衣物變乾，而非直接加熱烘乾衣物。
- 嚴禁以衣服或任何物品遮蓋抽濕機出風口，嚴禁將滴水的衣物晾掛在抽濕機上方，以免抽濕機入水損壞零件。乾衣時應關上門窗，以製造密閉空間進行抽濕。

調節目標濕度

- 按「濕度鍵 」循環選擇30-80%目標濕度。
- 選擇完成後，顯示屏閃爍3秒後自動確認，顯示屏顯示當前環境濕度。
- 如需查看當前所設置的目標濕度，按1次「濕度鍵 」。
- 壓縮機根據環境濕度及目標濕度而定是否運行。



注意：

在乾衣模式  及睡眠模式  下無法調節目標濕度。

調節風速

按「風速鍵 」鍵循環選擇高風速  或低風速 ，相應風速指示燈常亮。


 
注意：

在乾衣模式  及睡眠模式  下無法調節風速。


使用說明

B. 進階操作


負離子功能

1. 按「負離子/童鎖鍵 
2. 再按「負離子/童鎖鍵 

 
童鎖功能

1. 長按「負離子/童鎖鍵 

定時功能

1. 定時開機：在待機狀態下，按「定時/網絡鍵 

C. 排水指引

當水箱水位達到上限，產品會自動停止運作，水箱滿水指示燈  以紅色常亮，蜂鳴器持續發出提示聲。

1. 關機，然後取出水箱，倒掉水箱中的水。
2. 把水箱正確裝回機身，請確認水箱與機體是否安裝穩妥。
3. 重新開機即可正常使用。

注意：

如未有正確裝好水箱，蜂鳴器將持續發出提示聲。

連續排水

此機有一個連續排水孔，可自行購買一條內徑9.5毫米的排水管，連接到機身背部排水。建議使用水管時，出水口不要浸在水裡，防止水管過長或者出水口被堵時管內形成壓力，以致水流不暢導致漏水。

使用說明

使用WiFi連接本產品

本產品可透過德國寶智能控制應用程式「German Pool Smart Control」APP以智能手機操控。

A. 下載及註冊應用程式

1. 連接後WiFi後，掃描下方二維碼下載並安裝「German Pool Smart Control」APP。



蘋果IOS系統
App Store




安卓Android系統
Google Play


2. 點擊「Sign Up (註冊)」註冊用戶資料 (圖1)。
3. 輸入電郵地址後，點擊「Get Verification Code (取得驗證碼)」，您將會收到一個一次性的驗證碼 (圖2)。
4. 輸入驗證碼後，設定您的登入密碼，點擊「Done (完成)」 (圖3)。



(圖1)

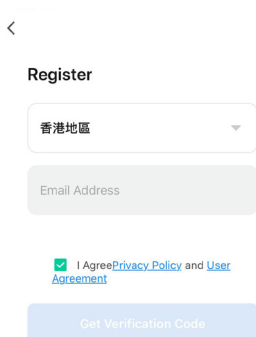


(圖2)

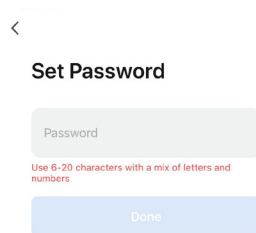

(圖3)

使用說明

B. 配對本產品

1. 點擊APP主頁右上角「+」，再點擊「Add Device（添加裝置）」（圖4）。
2. 長按抽濕機上的「定時/網絡鍵 」5秒，直至蜂鳴器發出提示聲5聲，WiFi指示燈閃爍。
3. APP顯示「Discovering devices...（搜尋裝置...）」，並顯示抽濕機圖案，點擊「Add（添加）」（圖5），APP顯示抽濕機圖案，再點擊右方的「+」。
4. 輸入手機所連接的WiFi名稱及密碼，點擊「Next（下一步）」（圖6），抽濕機與APP自動配對（圖7）。

注意：


如配對期間APP顯示感嘆號符號，代表配對失敗，請按照「B. 連接本產品」步驟重新配對。

5. 配對完成後，APP顯示「Added successfully（添加成功）」，按右上角「Done（完成）」返回主頁（圖8）。


注意：

- 每次只可以一個帳戶進行配對，如由另一帳戶再次進行配對，先前已配對的帳號將失去抽濕機的操作權。
- 已配對的帳戶可以分享抽濕機的操作權予其他帳戶，詳見「C. 操作權分享」部份。


使用說明

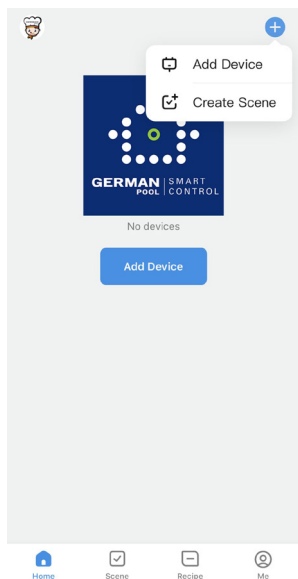


(圖4)

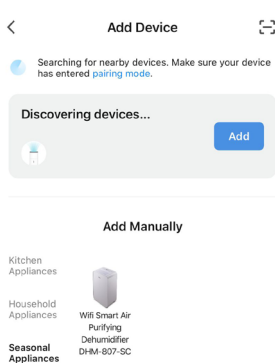


(圖5)

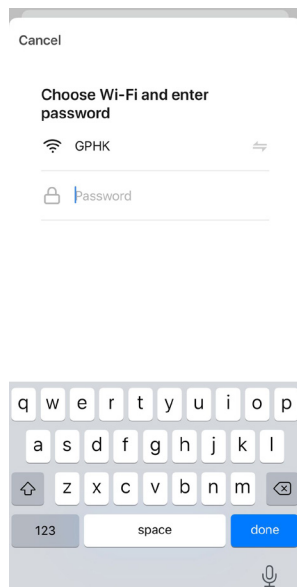

(圖6)

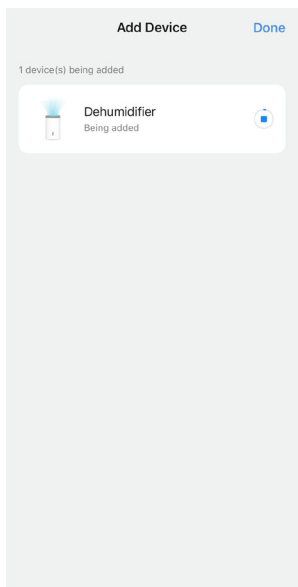


(圖7)

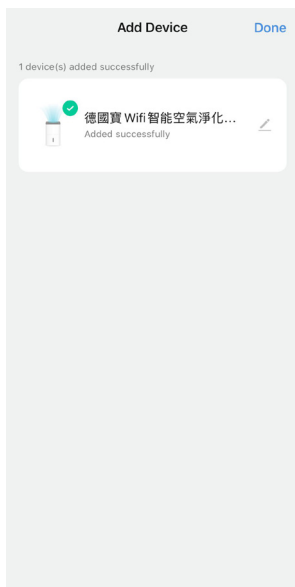

(圖8)


使用說明

C. 操作權分享


1. 在抽濕機操作主頁面點擊右上角「」（圖9），再點擊「Share Device（分享裝置）」（圖10）。
2. 點擊下方「Add Sharing（添加分享）」，可設定所需分享的人數，再點擊「Share with the Account Smart Control（分享予帳戶）」（圖11）。
3. 輸入該帳戶的註冊電郵地址，再點擊右上角「Done（完成）」即可。

注意：


在「Share Device（分享裝置）」頁面裡，你可隨時添加或移除帳戶的操作權。

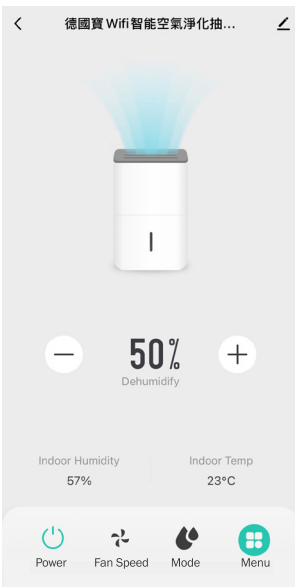

(圖9)

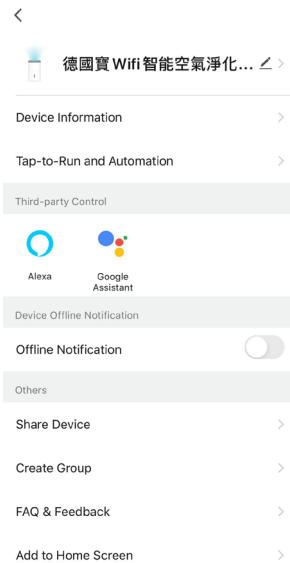


(圖10)

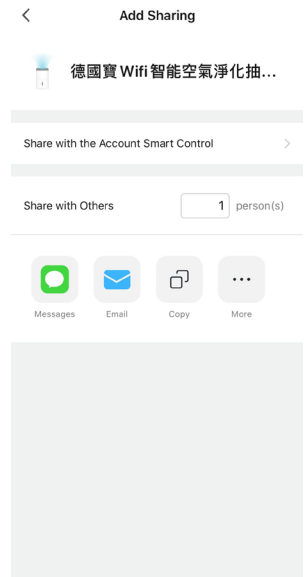







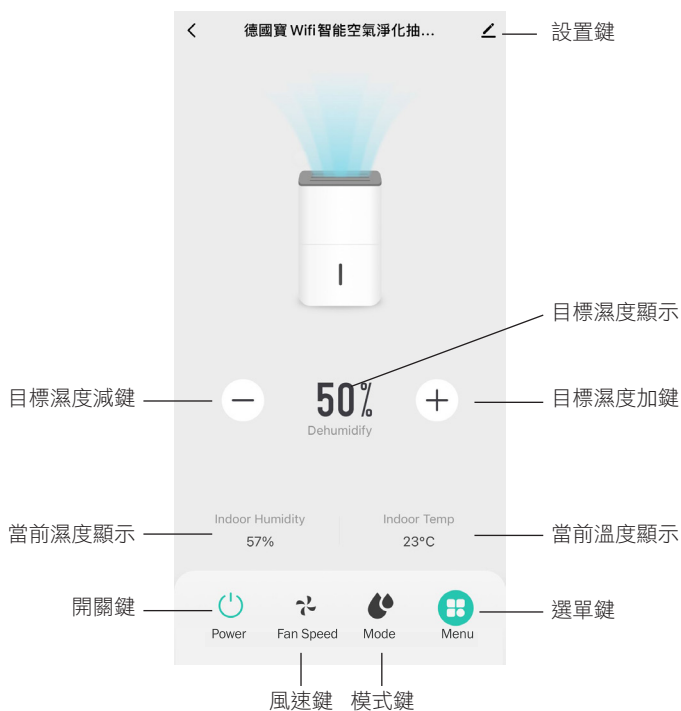










(圖11)

使用說明

   
使用APP操作



| 按鍵 | | 說明 |
|---|----------|---|
|  | 開關鍵 | <ul style="list-style-type: none"> 按此鍵開機，預設以濕度50%及高風速運行 再按1次關機，壓縮機停止運行，風扇延時30秒後關閉 |
|  | 目標濕度減/加鍵 | <ul style="list-style-type: none"> 按減鍵減少目標濕度5%；按加鍵增加目標濕度5% 可調節範圍為30-70% 在乾衣模式、睡眠模式下無法使用 |
|  | 風速鍵 | <ul style="list-style-type: none"> 按此鍵後，可選擇高風速或低風速 在乾衣模式、睡眠模式或除霜期間無法使用 風速鍵的圖標會隨所選擇的風速而改變 |
|  | 模式鍵 | <ul style="list-style-type: none"> 按此鍵後，可選擇「除濕模式」、「乾衣模式」或「睡眠模式」 模式鍵的圖標會隨所選擇的模式而改變 |
|  | 選單鍵 | <ul style="list-style-type: none"> 按此鍵後，可選擇「定時功能」或「童鎖功能」 |

使用說明

定時功能

1. 選擇定時功能  後，進入定時功能介面，按「Add」進入定時設置界面（圖1）。
2. 在定時設置界面裡可設置以下內容（圖2）：
 - a. 選擇所需時間。
 - b. 「Repeat」欄位：選擇是否需要重複此定時（可選星期一至日，開啟此功能後，抽濕機將在所選日子按此設置運行）。
 - c. 「Note」欄位：可輸入筆記提示。
 - d. 「Notification」欄位：選擇是否需要通知（當抽濕機執行定時關機或開機時，手機彈出通知提示）。
 - e. 「Power」欄位：將本定時設置定時開機或定時關機。
 - f. 設置完成後，按右上方的「Save」確認設置。
3. 完成後返回定時功能介面。如需設置更多定時功能，可按底部的「Add Schedule」（圖3）。

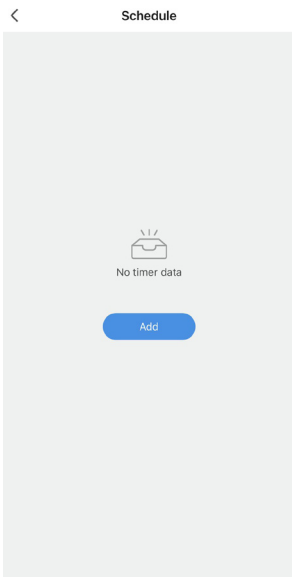


圖1

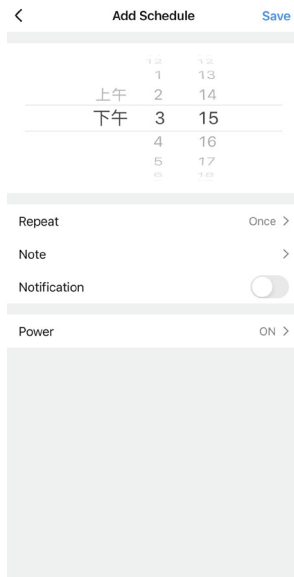


圖2

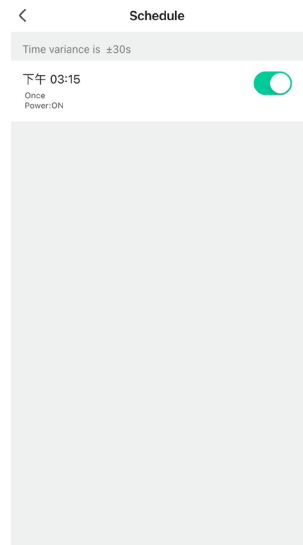



圖3

使用說明

童鎖功能

1. 按童鎖功能  右側的按鈕，綠色代表啟用童鎖，灰色代表關閉童鎖（圖4）。
2. 啟用童鎖後，在抽濕機主界面出現「Child Lock」圖標 ，按下圖標可直接解除童鎖（圖5）。

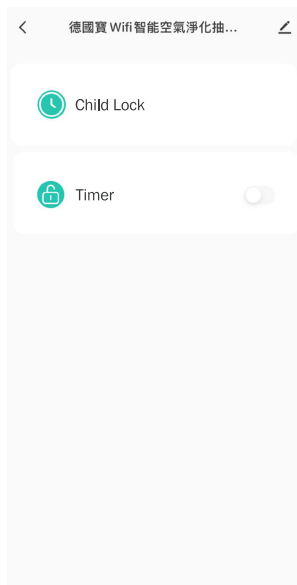


圖4

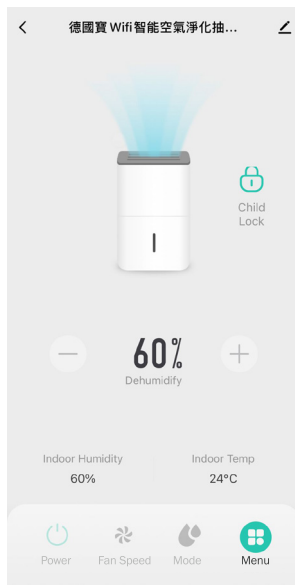


圖5

清潔及保養

⚠ 警告！

- 清潔及保養前必須先拔除電源插頭，以免觸電。
- 嚴禁將機身浸入水中或向機身淋水。

清潔機身

採用柔軟微濕的布擦拭機身即可。

清潔過濾網

1. 從後殼取下過濾網，用吸塵器輕輕吸附表面的灰塵。
2. 如過濾網非常髒污，用溫水及柔和的清潔劑擦拭後晾乾。
3. 將過濾網正確裝回機身，請確認過濾網與機體是否安裝穩妥。

收納方法

如長時間不使用本產品，請按以下步驟收納：

1. 清空水箱內的積水，且將底座上的水滴擦乾。
2. 整理好電源線，收納於乾燥的水箱內。
3. 清潔濾網。
4. 將本產品放置於陽光照射不到的清爽乾燥的環境。

故障檢修

注意：

- 當環境溫度低於5°C，高於35°C時，壓縮機不運作。
- 當環境溫度在5-16°C時，壓縮機每隔一段時間進行自動除霜；除霜期間，壓縮機不運作，風扇仍然工作。
- 本產品運行或停止時，會聽到製冷劑的迴圈聲，屬於正常現象而非故障。
- 本產品出風口排出熱風屬正常現象。

| 故障情況 | 可能原因 | 解決方法 |
|------------|--|--------------------|
| 機器不運作 | 電源線是否正常連接好？ | 將插頭和插座連接好 |
| | 滿水指示燈亮起表示水箱水滿，或水箱未安裝到位 | 將水箱中的水排乾並將其放到位 |
| | 室溫是否在5-35°C以外？ | 保護裝置啟動，本產品不能運作 |
| 抽濕不明顯 | 濾網是否被阻塞？ | 按「清潔及保養」說明將濾網清洗乾淨 |
| | 入風口或出風口是否被阻塞？ | 將阻塞物從入風口或出風口清除 |
| | 設定濕度是否接近或高於當前環境濕度？ | 將濕度設定到低於當前濕度至少5%以上 |
| 無風進入 | 濾網是否被阻塞？ | 按「清潔及保養」說明將濾網清洗乾淨 |
| 運轉時噪音大 | 本產品是否傾斜擺放？ | 將本產品移到平整、堅固的位置 |
| | 濾網是否被阻塞？ | 按「清潔及保養」說明將濾網清洗乾淨 |
| 顯示「E2」故障代碼 | 溫濕度感測器損壞或受潮 | 更換溫濕度感測器 |
| 顯示「CL」故障代碼 | 環境溫度 < 5°C時，出現此代碼，壓縮機不運作，其他部件照常運作 | |
| 顯示「CH」故障代碼 | 環境溫度 > 35°C時，出現此代碼，壓縮機不運作，其他部件照常運作 | |
| 顯示「L0」故障代碼 | 環境濕度 < 20%RH時，出現此代碼，壓縮機不運作，其他部件照常運作，乾衣模式除外 | |
| 顯示「HI」故障代碼 | 環境濕度 > 90%RH時，出現此代碼，壓縮機及其他部件正常運作 | |

⚠ 警告！

- 維修前必須先關機並拔下電源插頭。
- 本產品應由本公司指派的售後人員進行維修，如果消費者委託非本公司指派的人員或者消費者自行進行維修，可能存在造成人身損害或財產損失的風險。

技術規格

| 型號 | DHM-807-SC |
|-----------------------|----------------------------|
| 額定電壓 / 頻率 | 220 - 240 V ~ 50 Hz |
| 額定抽濕量 (26.7°C, RH60%) | 6.8 L / Day |
| 輸入功率 (26.7°C, RH60%) | 160 W |
| 額定抽濕量 (30°C, RH80%) | 12 L / Day |
| 額定輸入功率 (EN60335) | 225 W |
| 適用室溫 | 5-35°C |
| 水箱容量 | 2 L |
| 產品尺寸 | (H) 500 (W) 280 (D) 200 mm |
| 淨重 | 11.5 kg |

- - 產品規格及設計如有變更，恕不另行通知。
- - 中英文版本如有出入，一概以中文版為準。
- - 本產品使用說明書以www.germanpool.com網上版為最新版本。

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year warranty provided by German Pool (effective from the date of purchase).

* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)
- 2) 填妥本公司網頁保用登記表
www.germanpool.com/warranty
- 3) 填妥保用卡郵寄至本公司。



* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) Visit our VIP App and register online:
(Scan the QR Code on the left)
- 2) Visit our website and register online:
www.germanpool.com/warranty
- 3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : DHM-807-SC

機身號碼 Serial No. : _____ 發票號碼 Invoice No. : _____

購買商號 Purchased From : _____ 購買日期 Purchase Date : _____

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞(包括運輸及其他)；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被撞自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：repairs@germanpool.com

中國澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

Customer Service & Repair Centre

Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street, Kowloon

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau, China

A, 1. Andar, Mei Kui Kuong Cheong Fase 2,

No.515 Avenida Do Conselheiro Borja

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwanan, Kowloon, Hong Kong.
Tel: +852 2773 2888
Fax: +852 2765 8215

Mainland China

8th, Xinxiang Road, Wusha Industrial Park,
Daliang, Shunde, Foshan, Guangdong
Tel: +86 757 2219 6888
Fax: +86 757 2219 6809

Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,
No.515 Avenida Do Conselheiro Borja, Macau
Tel: +853 2875 2699
Fax: +853 2875 2661



香港《S MARK》
安全認證



中國櫥櫃/家電行業
十大影響力品牌



CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007
最具潛質
創星品牌企業獎



香港中小企業
最佳拍攝大獎



香港消費者推祟品牌



香港《心嚮》
優質服務證書



香港名牌十年成就獎
HONG KONG TOP BRAND TEN YEAR
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.