

## Built-In Induction Cooker | GIC-BD56B-S



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

# USER MANUAL

# 目錄 Table of Contents

---

安裝說明 Installation Instructions 03

產品結構 Product Structure 04

操作說明 Operating Instructions 05

鍋具 Cookware 06

安全注意事項 Safety Cautions 07

保養與清潔 Care & Maintenance 08

常見故障及處理 Troubleshooting 09



技術規格 Technical Specifications 10

保用條款 Warranty Terms & Conditions 11

# 安裝說明 Installation Instructions

## 安裝前注意 Notice


- 嵌入式電磁爐周圍不應有任何障礙物阻擋機身，以免影響電磁爐的散熱效能  
There should not be any obstacles surrounding the unit
- 請確保電源插頭設在方便接插的地方，並必須接上地線  
Make sure power plug is accessible after installation. Power outlet must be earthed

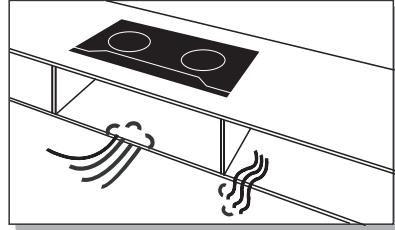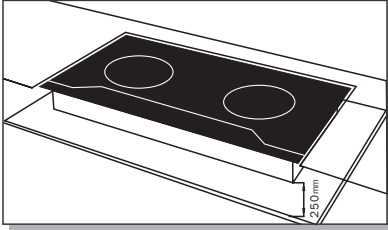

1. 安裝時，注意機身底部以下必須預留不少於250mm高的空間排風。  
For ventilation purposes, there should be no less than 250 mm high empty space under the unit body.

2. 機身底部進出風口不能設在封閉的空間裡，必須保持與不同空間的空氣連接，並儘量與房間裡的空氣保持一定程度的連接。  
Air vent under the unit must be well circulated. Circulation between space under the unit and room atmosphere should be present.


## 安裝程序 Procedures

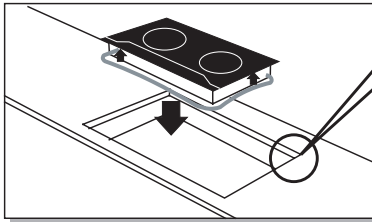

1. 依據參考開孔尺寸 $\geq 680\text{mm(W)} \times \geq 395\text{mm(D)}$ ，在廚櫃檯面開孔。  
According to cutout dimensions  $\geq 680\text{mm(W)} \times \geq 395\text{mm(D)}$ , make a cutout hole on the cabinet/counter top.

2. 將隨機的耐油橡膠貼於玻璃支架底部的黏貼處，然後將機身嵌入櫃中。  
Attach the supplied rubber tape to the bottom part of the unit body, and then place unit through the cutout hole.

3. 插上電源，安裝完畢。  
Connect power and cooker is ready to use.

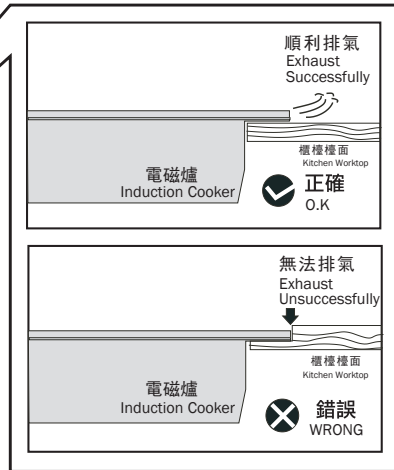


注意：安裝時必須確保後排氣口高於檯面，使之能正常出風（如上圖所示）  
Notes: When the induction cooker is installed, the exhaust outlet must be put ONTO the kitchen work-top, so that it can exhaust successfully. Please refer to the above pictures.

# 產品結構 Product Structure

## 外型 Main Body



## 控制面板 Control Panel

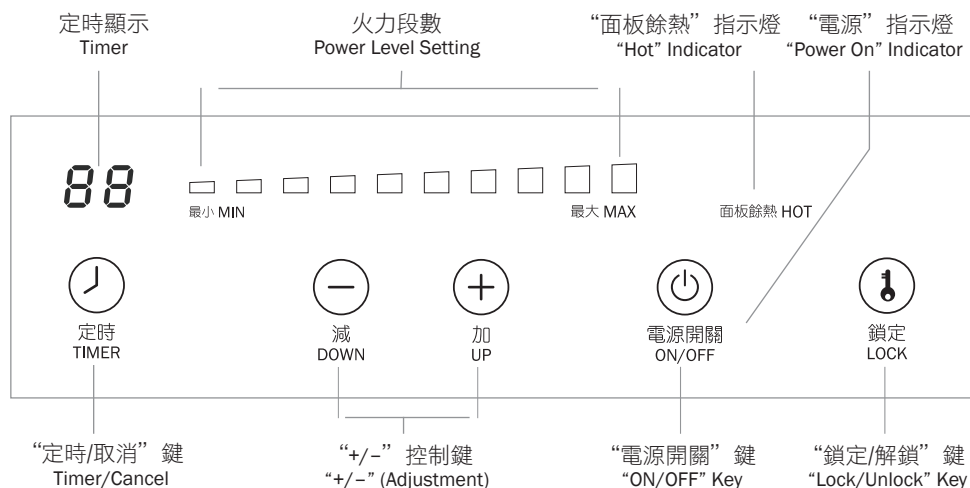

# 操作說明 Operating Instructions

## 按鍵說明

### Ⓞ “電源開關” 鍵

打開機底總電源開關後或於休眠狀態下，按此鍵以進入待機狀態（電源指示燈會亮起）；再按此鍵一次可轉回休眠狀態。

注意：當鍋具不適用或沒有放置好時，電子顯示管顯示“E1”以作警示，但電磁爐並不會進行加熱。

### ⌚ “定時/取消” 鍵

於“加熱狀態”下，按此鍵切換至“定時狀態”，顯示燈會顯示“30”並開始閃動，可按“+/-”控制鍵調校定時設定(1分鐘至6小時；1至99分鐘時定時顯示器顯示“01-99”，2至6小時時定時顯示器顯示“2h-6h”)，完成後，定時顯示器會停止閃爍而轉為常亮。長按此鍵3秒可取消定時設定。

### + - “+/-” 控制鍵

於“待機狀態”下，按此兩鍵可使電磁爐進入加熱狀態。於“加熱狀態”下，按此兩鍵可設定火力(功率)大小。於“定時狀態”下，按此兩鍵可設定定時關機時間。

### 🔒 “鎖定/解鎖” 鍵

按此鍵可使機器進入鎖定狀態，此時，除按“電源開關”鍵以外，其他任何按鍵操作無效；在鎖定狀態下，長按此鍵3秒可使機器進入解鎖狀態，此時，所有按鍵操作有效。

1. 將電磁爐插頭插入插座，打開機底總電源開關，電磁爐發出“嗶”的一聲，表示電磁爐進入“休眠狀態”。
2. 將鍋具放置於陶瓷玻璃板中央，按Ⓞ“電源開關”鍵，電源指示燈亮，再按(+)或(-)鍵，電磁爐便進入加熱狀態（預設火力：第3段）。

注意：當鍋具不適用或沒有放置好時，電子顯示管顯示“E1”以作警示，但電磁爐並不會進行加熱。

### 3. 按(+)或(-)增減火力段數。

注：若沒有放置鍋具或鍋具不合適，電磁爐不會進行加熱，並會發出警告。

單個爐頭功率調節表（兩爐頭完全相同）

火力段數 Power Level	H1 (低 MIN)	H2	H3	H4	H5	H6	H7	H8	H9	HH (高 MAX)
功率 Power	約 About 500W	約 About 800W	約 About 1000W	約 About 1200W	約 About 1400W	約 About 1600W	約 About 1800W	約 About 2000W	約 About 2300W	約 About 2800W

4. 在“加熱狀態”下，按⌚“定時/取消”鍵以進入“定時狀態”，按(+)或(-)鍵設定1分鐘至6小時關機時間(1至99分鐘時定時顯示器顯示“01-99”，2至6小時時定時顯示器顯示“2 h - 6 h”)。

## Control Buttons Functions

### Ⓞ “POWER ON / OFF” Key

Turn on the Main ON/OFF Switch or under“Sleeping” mode press to enter “Heating” mode (power indicator will be on). Press again to switch off operation and return to “Sleeping”.

Note: if no cookware is present or if cookware is not compatible, the digital display will show“E1” as a warning.

### ⌚ “TIMER / CANCEL” Key

Press this key to set timer. When the digits “30” are flashing, press “+” or “-” key to adjust timer settings between 1 minutes to 6 hours (the timer indicator will display “01-99” when the timer setup is from 1 to 99 minutes and the timer indicator will display “2h-6h” when the timer setup is from 2 to 6 hours). Timer will start counting down when time display stops flashing. To cancel timer, press this key for 3 seconds.

### + - “+/-” Adjustment Keys

Under “Sleeping” mode, press to enter “Heating mode”  
Under “Timer Mode” (i.e. when “Timer” Indicator lights up), press to adjust timer.  
Under “Heating” mode, press to set power level.

### 🔒 “LOCK/UNLOCK” Key

Press this key to lock all settings at “Heating” mode or “Timer” mode. Under “Lock” status, induction cooker would not respond to any key press. Press this key for 3 seconds to unlock “Lock” status.

1. Connect power plug, and then turn on the Main ON/OFF switch. A “beep” sound is heard, indicating that cooker is in “Sleeping” mode.
2. Place cookware in the centre of cooking hob. PressⓄ“POWER” key and power indicator will light up, then press (+) or (-) indicating that cooker is in “Heating” mode. (Default value: Level 3)

Note: if no cookware is present or if cookware is not compatible, the digital display will show“E1” as a warning.

### 3. Press(+) or (-) to adjust power level.

Note: if there is no cookware or cookware not appropriate, cooker will not start operation and a buzzing sound is heard.

Power table of single hob (One is as same as the another)

4. In “Heating” mode, press⌚“TIMER/CANCEL” key to enter “Timer” mode. Press(+) or (-) to set shutdown time ranging from 1 minutes to 6 hours (the timer indicator will display “01-99” when the timer setup is from 1 to 99 minutes and the timer indicator will display “2h-6h” when the timer setup is from 2 to 6 hours).

# 鍋具 Cookware

請使用德國寶電磁爐專用或認可之鍋具，盡量不要選用其他代替品，以免性能受影響。

Please use only German Pool authorized cookware or cookware recommended by us. Any unauthorized cookware may affect induction cooker's heating capacity and quality.

## 適用的各類鍋具

- 材質：  
鐵、鑄鐵或導磁不銹鋼
- 形狀：  
底部直徑10 cm以上之平底鍋。鍋具底部直徑不宜超過26 cm，鍋具加上食物的重量不宜超過6 kg

## Appropriate Cookware

- Material:  
Metal, ferromagnetic stainless steel or cast iron
- Shape:  
Flat bottom with a diameter of 10 cm or more.  
Cookware bottom diameter should not exceed 26 cm and must not weight over 6 kg (with food)



磁性不銹鋼壺  
Ferromagnetic  
Stainless Steel  
Water Pot



鐵製煎鍋  
Metal Frying Pan



磁性不銹鋼鍋  
Ferromagnetic  
Stainless Steel  
Cooking Pot



鐵製彩色鍋  
Metal Saucepan



磁性鐵製琺瑯壺  
Ferromagnetic  
Metal Water Pot



鐵板/鑄鍋  
Cast Iron Grilling  
Pan

## 不適用的各類鍋具

- 材質：  
非鐵質金屬、陶瓷、玻璃及以鋁、銅為底的鍋具
- 形狀：  
底部凹凸差距過大的，底部直徑小於10 cm

## Inappropriate Cookware

- Material:  
Non-metallic, non-ferromagnetic, ceramic, glass, aluminum or brass
- Shape:  
Bottom not flat or too bumpy, or bottom diameter smaller than 10 cm



鋁製水壺  
Aluminum  
Water Pot



耐熱玻璃鍋  
Glass Pot



陶瓷鍋  
Ceramic Pot



底部凹凸不平  
Pot With Non-Flat/  
Curved Bottom



鍋底附腳  
Pot With  
Bumpers



鍋底直徑過小  
Pot Bottom  
Too Small

# 安全注意事項 Safety Cautions

警告：如果器具面（面板）有破裂，必需關閉電器電源，以避免觸電的可能性。

警告：刀，叉，勺和蓋等金屬物品不應該放在電磁爐上，因為他們會變熱。

警告：本設備擬用於僅在室內的家庭。

警告：此產品不可通過外部計時器或單獨的遠端控制系統操作。

警告：設備運行時，可觸及表面的溫度可能很高。

警告：如果電源軟線損壞，為避免危險，必須由製造廠或其維修部或類似的專職人員來更換。

WARNING: If the surface (panel) is cracked, switch off the appliance to avoid the possibility of electric shock.

WARNING: Metallic objects such as knives, forks, spoons and lids should not be placed on the induction hotplate since they can get hot.

WARNING: This appliance is intended to be used in indoor household ONLY.

WARNING: This appliance is not intended to be operated by means of an external timer or separate remote-control system.

WARNING: The temperature of accessible surfaces may be high when the appliance is operating.

WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

- 當電磁爐開機工作後，用戶後續對機器沒有任何按鍵操作，機器會在1小時45分到2小時15分鐘內自動停止加熱，進入待機狀態；保證機器安全。
- 請使用2個獨立13A以上的插座，切勿使用萬用插座或與其他電器共用插座。
- 請勿用水直接沖洗電磁爐，以免破壞電器絕緣性能。
- 請勿於排氣口及吸氣口插入鐵絲、金屬等物件，以免發生觸電危險。
- 切勿讓鍋具猛烈撞擊玻璃面板。
- 電磁爐水平放置後，側面及背面距離牆壁必須預留最少10 cm或以上，切勿堵塞出風口及入風口、將爐身鑲嵌或密封。
- 請勿將電磁爐放置在煤氣爐、煤油爐等熱源附近使用。
- 請勿將鐵片或其他鐵磁性材料直接放在玻璃面板上加熱，避免因高溫而產生灼傷危險。
- 空鍋具請勿加熱過久，以免發生危險，鍋具溫度過高時，電磁爐會自動停止加熱。
- 切勿加熱罐頭等密封的東西，否則會因罐頭內氣體受熱膨脹導致爆炸。
- 長期不使用電磁爐時，請關閉機底總開關並將電源插頭由插座拔出。
- 身體、感知或精神力有缺陷或無法獲得經驗和學習知識的人員（包括兒童）必須在負責其安全的人員監督下或瞭解如何使用本設備後方可使用。
- 嚴密看管兒童，防止他們把玩此設備。
- 不能使用蒸汽清潔器。
- 使用後，應通過“電源開關”鍵關掉電磁爐
- 家庭使用的器具和在下列場所使用的器具應有相關說明：
  - 商店，辦公室和其他工作環境的廚房區域；
  - 農家；
  - 旅館，汽車旅館和其他住宿環境裡給客人使用的。
- When the appliance powers on but without pressing any control button, the appliance will stop heating automatically in 1 hour 45 minutes to 2 hours 15 minutes and goes into standby mode; this ensures the safety of the appliance.
- Two single 13 A power jacks must be used. Do not share power jack with other appliances.
- Do not apply water directly onto induction cooker.
- Do not insert any wire or metal objects through air inlet or venting outlet of the induction cooker.
- Please avoid collision between cook-top panel and cookware.
- A distance of at least 10 cm between the wall and the sides of induction cooker must be reserved for venting purposes.
- Do not place or use induction cooker near any heat source.
- Do not heat up any metal plate or other magnetic objects on the cook-top.
- Do not heat empty cookware for an extended time. Overheating of cookware will cause damages and injuries.
- Do not heat up unopened cans on the cook-top. It may cause explosion.
- Turn off the power switch and unplug the power cord when induction cooker is not use for long period of time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cannot use steam cleaner.
- After use, please pass the  “power” key to turn off.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments.

# 保養與清潔 Care & Maintenance

---

- 清潔前必須先拔下電源插頭。
- 任何污垢必須即時清理。
- 必須待爐面完全冷卻才進行清潔。
- 清潔面板時，先以扭乾的濕布擦拭；若仍未能除掉污漬，可用中性去污粉或洗潔精擦拭，然後再用濕布擦拭即可。
- 清潔電磁爐機身時，先用柔軟濕布擦；若有油污難以清除時，用中性洗潔精擦拭後再用濕布擦拭乾淨。
- 切勿用水直接沖洗或將機身浸入水中清洗。
- 切勿使用堅硬之刷子刷洗爐面。
- 切勿使用有機溶劑或苯等化學藥品擦拭電磁爐。
- Power plug must be disconnected before cleaning.
- Any stain or deposit on the cook-top surface must be cleaned off immediately before reusing.
- Cleaning must be done when cook-top surface has completely cooled down.
- To clean the cook-top, wipe with a dry cloth. If stain remains, clean with a moist sponge soaked with mild soap, and then wipe again with a moist cloth.
- To clean the body of induction cooker, wipe with a soft moist cloth. If stain remains, clean with a moist sponge soaked with mild soap, and then wipe with a moist cloth.
- Do not immerse induction cooker into water.
- Do not clean cook-top with any rough cloth or abrasive tool.
- Do not use organic solvents or any cleaning products that contain chemicals such as Benzene.

注意：以下幾種情況會造成玻璃面板變色，實屬正常，不會影響電磁爐正常使用：

- 加熱乾燒時
- 加熱湯水外溢未能及時擦淨
- 使用不潔淨底部鍋具加熱時
- 長時間使用

Note : Over time, cook-top panel may be discoloured due to one of the following situations. Operation of induction cooker would not be affected as this is normal.

- Overheating or burning empty cookware
- Spillage not cleaned immediately
- Cookware not clean
- Long period of usage



# 常見故障及處理 Troubleshooting

使用中如發現電磁爐操作上有問題，在送回本公司維修前請先依照下表進行檢查：  
When you run into any problem operating this product, use the table below to troubleshoot the problem.  
If the problem persists, contact our Repairs & Customer Service Centre.

故障現象 Phenomenon	檢查要點 Check-up Items	處理方法 Solution
<p>接通電源，按機底電源開關，再按“開/關”鍵，電磁爐無反應。</p> <p>Power is connected and Main on/off switch is turned on, but the induction cooker does not respond when the on/off button is pressed.</p>	<ul style="list-style-type: none"> <li>• 是否停電?</li> <li>• 府上的自動開關或保險絲是否發生短路?</li> <li>• 插頭是否脫落或接觸不良?</li> </ul> <ul style="list-style-type: none"> <li>• Is there a power shortage in your area?</li> <li>• Is there a short circuit in the power source of your home?</li> <li>• Is the power plug too loose or not connected well?</li> </ul>	<ul style="list-style-type: none"> <li>• 電源恢復後再使用。</li> <li>• 檢查短路原因，排除後才使用。</li> <li>• 插牢或更換插孔後使用。</li> </ul> <ul style="list-style-type: none"> <li>• Try again after power supply resumes.</li> <li>• Find out the cause of short circuit and eliminate it before switching on the cooker again.</li> <li>• Re-connect the plug or replace the power jack.</li> </ul>
<p>蜂鳴器斷續鳴響且鍋具不加熱。</p> <p>Buzzer beeps continuously and pan is not heated.</p>	<ul style="list-style-type: none"> <li>• 鍋具不適應?</li> <li>• 鍋具位置不合適?</li> </ul> <ul style="list-style-type: none"> <li>• Is the pan not suitable for induction cooking?</li> <li>• Is the pan positioned properly?</li> </ul>	<ul style="list-style-type: none"> <li>• 使用電磁爐適用之鍋具。</li> <li>• 將鍋具放置在電磁爐面板中心。</li> </ul> <ul style="list-style-type: none"> <li>• Use an appropriate pan.</li> <li>• Position the pan in the centre of cook-top.</li> </ul>
<p>在正常運作時停止加熱。</p> <p>Induction cooker stops heating during normal operations.</p>	<ul style="list-style-type: none"> <li>• 是否空鍋或溫度過高?</li> <li>• 吸氣口或排氣口是否堵塞?</li> <li>• 室溫太高?</li> </ul> <ul style="list-style-type: none"> <li>• Is the pan empty or cooking temperature too high?</li> <li>• Are the air inlet and outlet being blocked?</li> <li>• Is the surrounding temperature too high?</li> </ul>	<ul style="list-style-type: none"> <li>• 防止乾燒，降溫後自動繼續。</li> <li>• 待機件冷卻後才使用，並注意保持內部通風。</li> <li>• 室溫降低後才使用。</li> </ul> <ul style="list-style-type: none"> <li>• Avoid operating cooker with an empty pan. Let cooker cool down before switching it on again.</li> <li>• Remove obstruction from the vent. Let induction cooker cool down and try again.</li> <li>• Try again after the room cools down.</li> </ul>
<p>保溫失控。</p> <p>Temperature fluctuates.</p>	<ul style="list-style-type: none"> <li>• 鍋底是否凹凸不平?</li> </ul> <ul style="list-style-type: none"> <li>• Is pan bottom not flat?</li> </ul>	<ul style="list-style-type: none"> <li>• 更換平底鍋具後使用。</li> </ul> <ul style="list-style-type: none"> <li>• Replace pan with a flat-bottomed one.</li> </ul>

\* 以上為常見故障的判斷與檢查，只供用戶作參考之用。

\* 如遇故障切勿自行修理，避免發生危險及對機件造成損害，請立即找專業技術人員或聯絡本公司作出適當維修。

\* Above table enlists the most common problems regarding the operations of the product and their possible causes as well as suggested solutions. It is strictly for users' reference only.

\* Should there be any product malfunction or breakdown, DO NOT repair it yourself. Contact our Repairs & Customer Service Centre or consult a licensed technician immediately.

# 常見故障及處理 Troubleshooting

故障代碼	故障說明	故障代碼	故障說明
E0	電路故障 Internal circuit error	E4	低壓 Under-voltage
E1	無鍋或鍋具不合適 Without cookware or incompatible cookware used	E5	主傳感器開短路保護 Top plate sensor open/short circuit
E2	IGBT過熱保障 IGBT overheat	E6	IGBT傳感器開短路保護 IGBT sensor open /short circuit
E3	高壓 Over-voltage	E7	乾燒保護 Top plate overheat

\*E3及E4並不屬於機器故障，待電壓恢復後（130V-250V）即可使用。

\*E3 & E4 are not product errors. Operation can be resumed when power voltage returns to normal rating (130V - 250V).

## 技術規格 Technical Specifications

型號 Model	GIC-BD56B-S
電壓 Voltage	220 - 240 V
頻率 Frequency	50 - 60 Hz
額定總功率(最大) / Rated Power Output (Max)	5600 W
爐頭數目 Number of Cooking Hob	2
爐頭最大功率 Maximum Output of Cooking Hob	(左 Left) 2800 W / (右 Right) 2800 W
機身尺寸 Dimensions	(H) 97mm (W) 735mm (D) 415mm (連腳 With feet)
	(H) 68mm (W) 680mm (D) 395mm (不連腳 Without feet)
開孔尺寸 Cutout Dimensions	(H) ≥318mm (W) 680mm (D) 395mm
淨重 Net Weight	約 Approx. 9.2 kg
總重 Gross Weight	約 Approx. 10.5 kg
功率調校範圍 Power Adjustment Range	500 W - 2800 W
執行標準 Execution Standards	EN 60335-1:2012+A11:2014 EN 60335-2-9:2003+A1:2004+A2:2006+A12:2007+A13:2010 EN 62233:2008
插頭 Plugs	13A x 2 <sup>#</sup>

<sup>#</sup>擁有兩條獨立電源線，需使用兩個獨立13A電源插座，請先檢查供電插座是否可承受此負荷。

<sup>#</sup>Consists of 2 separate and independent power cords. Two 13A power sockets are needed. Please make sure your household power cords are compatible.

產品規格及設計如有變更，恕不另行通知。

Specifications are subject to change without prior notice.

中英文版本如有出入，一概以中文版為準。

If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.

本產品使用說明書以 [www.germanpool.com](http://www.germanpool.com) 網上版為最新版本。

Refer to [www.germanpool.com](http://www.germanpool.com) for the most up-to-date version of the Operating Instructions.

# 保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

# Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

\* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)
- 2) 填妥本公司網頁保用登記表  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 3) 填妥保用卡郵寄至本公司。



\* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) Visit our VIP App and register online:  
(Scan the QR Code on the right)
- 2) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : GIC-BD56B-S

機身號碼 Serial No. : \_\_\_\_\_ 發票號碼 Invoice No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_ 購買日期 Purchase Date : \_\_\_\_\_

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞(包括運輸及其他)；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including material transfer and others);
  - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
  - the purchase invoice is modified by an unauthorized party;
  - the product is used for any commercial or industrial purposes;
  - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

## 客戶服務及維修中心

中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2773 2888

傳真：+852 2356 9798

電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

中國澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

## Customer Service & Repair Centre

Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street,

Kowloon, Hong Kong

Tel : +852 2773 2888

Fax : +852 2356 9798

Email : [repairs@germanpool.com](mailto:repairs@germanpool.com)

Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,

No.515 Avenida Do Conselheiro Borja

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

## German Pool (Hong Kong) Limited

### Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau  
Kok Road, Tokwanan, Kowloon, Hong Kong.  
Tel: +852 2773 2888  
Fax: +852 2765 8215

### Mainland, China

8th, Xinxiang Road, Wusha Industrial Park,  
Daliang, Shunde, Foshan, Guangdong  
Tel: +86 757 2219 6888  
Fax: +86 757 2219 6809

### Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,  
No.515 Avenida Do Conselheiro Borja, Macau  
Tel: +853 2875 2699  
Fax: +853 2875 2661



香港《S MARK》  
安全認證



中國標榜/家電行業  
十大影響力品牌



CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007  
最具潛質  
創星品牌企業獎



香港中小企業  
最佳拍檔大獎



香港消費者推祟品牌



香港《心嚮》  
優質服務證書



香港名牌十年成就獎  
HONG KONG TOP BRAND TEN YEAR  
ACHIEVEMENT AWARD

©All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.