 


GERMAN
POOL

2-IN-1 GLOBAL VOLTAGE TRAVEL CLOTHES & HAIRDRYER

HDR-WV1200

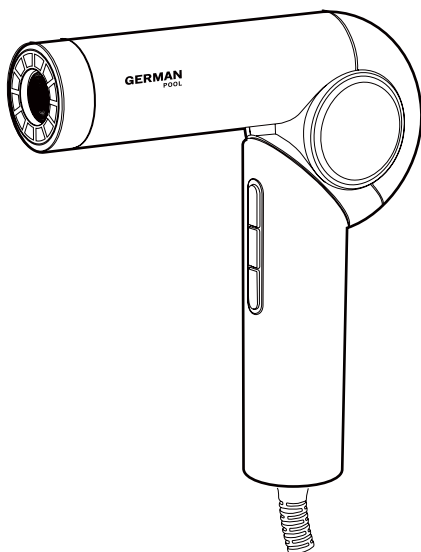

USER MANUAL

Please read these instructions and warranty information carefully before use and keep them handy for future reference.

Warnings and Safety Precautions

Before using this product, please read these instructions carefully and keep them for future reference. These precautions are designed to prevent injury and property damage. Always follow them strictly.

1. This product is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless supervised or instructed on safe use by a responsible person. Children must be supervised to ensure they do not play with electrical appliances.
2. Keep packaging material (such as plastic bags and plug covers) out of children's reach to prevent suffocation.
3. DO NOT use this product on infants to avoid burns.
4. Keep this product out of reach of children and infants to prevent burns, electric shock, or injury.
5. This product is intended for household use only, not for commercial use. Regular maintenance is recommended.
6. This product is designed for drying and styling human hair. DO NOT use on wigs, pets or use for drying shoes and clothes, otherwise it may lead to short circuit and fire.
7. DO NOT disassemble, modify, or repair this product by yourself, otherwise it may lead to malfunction and danger.
8. Always unplug this product when not in use or before maintenance. DO NOT leave this product unattended while it is switched on.
9. Ensure the plug is fully inserted into the outlet to avoid poor contact.
10. When unplugging this product from the power socket, DO NOT pull on the cord, always grip the plug.
11. Discontinue use of this product immediately if the cord or plug is damaged, overheated, or deformed. Otherwise, it may lead to burns, electric shock or fire.
12. If the power cord is damaged, it must be repaired by professional technicians from German Pool Customer Service and Repair Centre to avoid danger.
13. DO NOT use near flammable materials (such as gasoline, volatile oils, solvents, gases, or hairspray), otherwise it may lead to explosion or short circuit and cause fire.

14. When this product is in use, DO NOT stare directly into the air outlet to avoid dust or debris blowing out and causing injury.
15. DO NOT remove the air inlet filter and air inlet cover during use, to avoid hair from being drawn into the hair dryer and causing damage or fire.
16. The nozzle and air outlet may become hot during use, DO NOT touch to avoid burns.
17. Maintain a distance of at least 10cm from the air inlet to prevent hair from being drawn in.
18. When this product is in use, DO NOT hold it by the air inlet or air outlet, to prevent blocking the airflow and causing overheating, electric shock or fire.
19. DO NOT drop or strike this product. If product is damaged, discontinue use immediately.
20. DO NOT wrap the cord tightly around this product during storage. Excessive tension may damage the wiring, increasing the risk of electric shock, burns or fire resulting from a short circuit.
21. DO NOT store this product in a humid environment, otherwise it may lead to electric shock or fire resulting from a short circuit.
22. Keep this product dry at all times, and DO NOT operate with wet hands, in order to avoid electric shock or fire resulting from a short circuit.
23. When using this product in the bathroom, always unplug it immediately after use, to prevent hazards caused by moisture.
24. For your personal safety, it is recommended that you install a residual current device (RCD) with a rated residual operating current not exceeding 30 mA.
25. Always switch off the power of this product and unplug from the power socket before cleaning this product.
26. Clean this product's air inlet and air outlet regularly with towel, cotton swabs or toothbrush to remove any debris.
27. DO NOT press or scrape the air inlet or outlet with fingernails or sharp objects to avoid damage.
28. DO NOT clean this product with alcohol, nail polish remover or detergents, as these may cause malfunction, cracks or discoloration.

⚠ WARNING!

DO NOT use this product if any of the following occur, as continued use may cause burns, fire, short circuit or electric shock:

- Airflow is irregular or intermittent.
- The power cord remains twisted and cannot return to its normal shape.
- Power cord or plug base is deformed or damaged.
- Plug does not fit securely into the outlet.
- Power cord becomes abnormally hot.

Product Structure

Magnetic Concentrator
Nozzle

Inlet Filter

Display Panel

Cool Shot Button



Temperature Button

Wind Speed Button

Straightening Comb

On/Off Switch


Portable Clothes
Dryer Bag
(590x950mm)

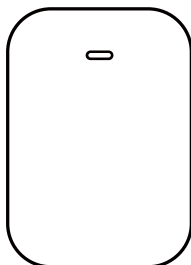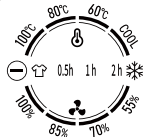

Operation Instructions


Folding & Opening the Hair Dryer

Folded

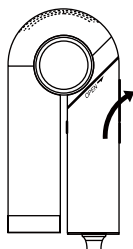

Rotate in the direction of the arrow to open, Handle should sit perpendicular to the main unit when opened

Opened


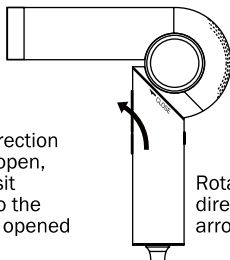


Rotate in the direction of the arrow to fold

⚠ WARNING!

- When folding or opening this product, take care not to pinch your fingers.
- Please rotate the handle according to the indicated direction. DO NOT twist by force as it will damage the product.
- DO NOT forcefully rotate handle in the opposite direction.

Magnetic Accessories

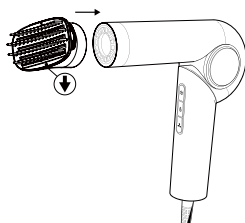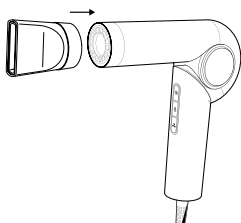


When hair is blown to about 70% dry, attach the concentrator nozzle or straightening comb to style: concentrator nozzle directs the airflow precisely, smoothing away frizz to create a sleek, silky finish; straightening comb gently guides the hair in its natural direction, helps the hair lie flatter and appear more polished. The concentrator nozzle can be directly snapped on magnetically at any angle, while the straightening comb should be snapped on with the arrow guide pointing downwards.

⚠ WARNING!

The attachments become very hot during or immediately after use. Do not touch them directly to avoid burns.

LED Display

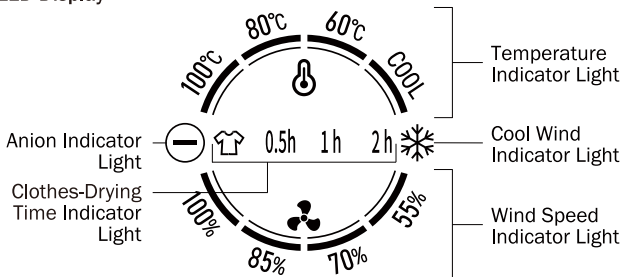

Turn On & Off

⚠ WARNING!

- Before use, check that the outlet voltage and plug type are compatible. Voltage and plug shapes may vary by country or region.
- Always use an AC power supply of 100–240V~. Using a power source above 240V~ may cause a malfunction.
- In some countries or regions, industrial power sources (such as 380V~ high voltage supply) may be connected to households or hotels. Please confirm the local power conditions before using this product.
- A small spark may occur when plugging in or unplugging the power cord. This is a normal phenomenon and not a product defect.
- To reduce sparking caused by instantaneous current, it is recommended to switch off the power before plugging in or unplugging the cord.

1. Rotate the handle in the direction of the OPEN arrow until you hear a “click”, then insert the power plug into the outlet. Ensure the power plug is firmly inserted. DO NOT force rotation in the opposite direction.

2. Ensure the concentrator nozzle is properly attached, then turn the On/Off switch to “ON”, and adjust the airflow and temperature settings according to your preference.
3. After use, turn the On/Off switch to “OFF”, and unplug the product from the socket.

Temperature Button

- Press Temperature Button repeatedly to cycle among Cool / 60°C / 80°C / 100°C. The corresponding indicator light will light up constant.
- When using any of the warm temperature modes, press and hold the Cool Shot Button to switch to cool air immediately. Release the Cool Shot Button to return to the previous mode.

Wind Speed Button

Press Wind Speed Button to cycle among 55% / 70% / 85% / 100%. The corresponding indicator light will light up constant.


Memory Function

This product auto saves the last settings before it is switched off. These settings remain even when the dryer is unplugged. When the product is switched on again, it will run according to its previous settings.

Clothes-Drying Mode

⚠ WARNING!

Clothes-Drying Mode must be used together with the supplied Portable Clothes Dryer Bag. DO NOT use with other garment bags to avoid damaging the product.

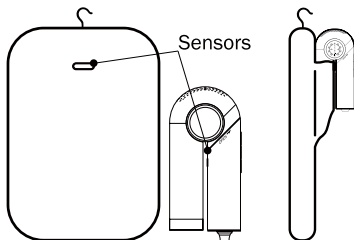

1. Before using Clothes-Drying Mode, remove concentrator nozzle and straightening comb from the main unit, and switch on the hairdryer.
2. Hang clothes inside the clothes dryer bag, insert the hairdryer's air outlet into the opening on the clothes dryer bag, then fold up the hairdryer, make sure the sensor on the hairdryer is aligned with the sensor on the bag, and the product will automatically enter Clothes-Drying Mode.
3. The default clothes-drying time is 30 minutes, after which the product will automatically turn off. To adjust drying time, press Wind Speed Button once to extend drying time to one hour; press Wind Speed Button twice to extend drying time to two hours, corresponding indicator light will light up constant. The maximum clothes-drying time is 2 hours.
4. After Clothes-Drying Mode ends, push On/Off switch to ON position again and the product will return to hair-drying mode.

Note:

- In Clothes-Drying Mode, if the hairdryer is separated from the clothes dryer bag for 3-5 seconds, the hairdryer will automatically turn off.
- The clothes dryer bag must be placed in a dry and cool area, away from sunlight.
- DO NOT block the air outlet to prevent overheating.
- It is recommended to use a low heat for drying, and monitor the drying process regularly.
- DO NOT allow children to operate Clothes-Drying Mode by themselves.

Clothes Not Suitable for Drying in the Clothes Dryer Bag:


1. Silk, Lace: Easily deformed or damaged by heat (e.g., silk pajamas, lace dresses, etc).
2. Wool, Knitted Fabrics: May shrink, pill, or lose structure under high heat (e.g., wool coats, scarves, etc).
3. Elastic Fabrics: Prone to losing elasticity at high temperatures (e.g., leggings, sports tights, etc).
4. Leather, Fur: Can harden or deform when exposed to heat (e.g., leather jackets, fur coats, etc).

5. **Waterproof-Coated Fabrics:** High heat may damage the waterproof layer (e.g., outdoor jackets, raincoats, etc).
6. **Special Coatings or Prints:** High heat may cause peeling or fading.
7. **Heavily Decorated Garments:** Easily damaged by heat (e.g., clothes with sequins, beads, or embellishments, etc).
8. **Flammable Materials:** May block airflow and pose a fire hazard (e.g., down jackets, blankets, etc).

Cleaning & Maintenance

⚠ WARNING!

- Clean the air outlet regularly, and store the product in a dry and well-ventilated area after use.
 - Switch off the power, unplug the product, and allow it to cool down completely before cleaning, maintenance and storage.
1. If dust or hair accumulates on the air inlet filter and air inlet cover, airflow may weaken and the unit may overheat or catch fire. Please clean regularly (recommended to clean at least once a month; clean more frequently if needed). Detach the air inlet cover, use a brush or dry cloth to wipe off the dust on the filter and air inlet cover.
 2. After cleaning, reattach the air inlet cover onto the product properly.

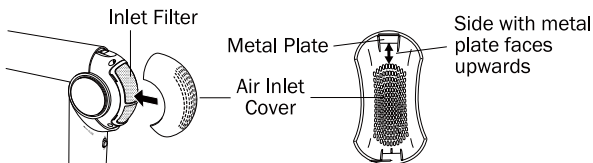

Note:

- The side with metal plate and wider rim should be installed facing the upward direction of the air inlet.
- DO NOT store this product together with hairpins and other foreign objects, to avoid foreign objects entering this product and causing malfunction.
- DO NOT allow this product to come in contact with hair spray or cosmetics, as chemical residues can lead to discoloration or damage of the hair dryer.

Troubleshooting

 WARNING!

If the problem still cannot be solved, contact German Pool Customer Service & Repair Centre. DO NOT disassemble or repair this product yourself.

Problem	Possible Cause	Solution
Pressing buttons yield no response	Power is not connected	Check if the plug is loose
Cool or warm winds abnormal	Cool Button malfunction	Ensure smooth button operation
	Air inlet filter is blocked	Do not block the air inlet while using
	Dust or hair is blocking the air inlet or outlet	Clean air inlet or outlet
Burning smell	Internal damage	Contact German Pool Customer Service & Repair Centre
Power cord or plug abnormally hot	Damaged cord or loose plug	Check if the plug is loose

Model	HDR-WV1200
Voltage	100-240 V~
Frequency	50/60 Hz
Power	1,200 W
Product Dimensions	Folded (H) 84 (W) 168 (D) 48 mm Opened (H) 180 (W) 168 (D) 48 mm
Net Weight	520 g

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to www.germanpool.com for the most update version of the user manual.

保用條款 Warranty Terms & Conditions

此保用提供德國寶產品之機件在正常使用下壹年保用（自購買日起計算）。貴戶須在購機十天內，以下列其中一種方式登記資料，保用手續方正式生效：

Under normal operations, the product will gurantee a 1-year full warranty provided by German Pool (effective from the date of purchase). This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) 填妥德國寶VIP手機應用程式
保用登記表（掃描右方二維碼）
- 2) 填妥本公司網頁保用登記表
www.germanpool.com/warranty
- 1) Visit our VIP App and register online:
(Scan the QR Code on the right)
- 2) Visit our website and register online:
www.germanpool.com/warranty



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。
用戶提供之所有資料必須正確無誤，否則免費保用將會無效。

Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No.: HDR-WV1200

機身號碼 Serial No.: _____

發票號碼 Invoice No.: _____

購買商號 Purchased From: _____

購買日期 Purchased Date: _____

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

警告及注意事項

使用本產品前，必須詳細閱讀以下說明，並妥善保存本明說書以備日後參考。這些安全注意事項是為了防止人身傷害及財產損失，必須確實遵守。

1. 本產品不預期供生理、感知、心智能力、經驗或知識不足之使用者（包括孩童）使用，除非在對其負有安全責任的人員之監護或指導下安全使用。孩童必須受監護，以確保孩童不嬉玩電器。
2. 必須將包裝材料（如塑膠袋、插頭套等）放置於孩童無法觸及之處，以防誤用導致窒息。
3. 嚴禁對嬰兒使用本產品，以免造成燙傷。
4. 必須存放於兒童或嬰兒無法觸摸的地方，避免造成灼傷、觸電或受傷。
5. 本產品並非為商業用途而設計，建議定期進行適當的保養。
6. 本產品僅用於吹乾頭髮和造型頭髮，嚴禁用於吹整假髮、寵物或吹乾鞋子和衣物，否則可能容易造成短路引發火災。
7. 嚴禁自行修理、拆卸、改裝本產品，否則可能因異常操作導致危險。
8. 不使用或維修本產品時，必須拔除插頭；開啟電源後嚴禁離開及讓本產品閒置。
9. 插頭必須完全插入插座，避免接觸不良。
10. 從電源插座拔除電源插頭時，必須手握插頭部位。
11. 電源線或插頭損壞、發熱時，嚴禁繼續使用，否則可能導致燙傷、觸電或火災。
12. 如電線損壞，必須由德國寶客戶服務及維修中心的專業技術人員進行維修，以避免危險。
13. 嚴禁在易燃物質（汽油、揮發油、稀釋劑、瓦斯、髮膠等）附近使用本產品，否則可能導致爆炸或因短路而引發火災。
14. 使用時嚴禁直視出風口，避免灰塵等異物噴出導致傷害。
15. 嚴禁拆下進風口濾網和進風口蓋使用，以免吸入毛髮、引起火災或造成產品故障。
16. 使用過程中出風口和風嘴可能會變熱，嚴禁用手觸摸，否則可能導致燙傷。
17. 必須與進風口保持10厘米以上距離，避免頭髮捲入。


18. 嚴禁在使用時握住進風口或出風口，以免堵塞造成過熱、觸電或火災。
19. 嚴禁摔落或撞擊本產品。如本產品已破損，嚴禁繼續使用。
20. 嚴禁在存放時將電源線纏繞在本產品主體上，否則可能導致電源線因負荷而斷裂，並可能因短路而導致觸電、灼傷或引發火災。
21. 嚴禁將本產品存放在高度潮濕的地方，否則可能導致觸電或因短路而引發火災。
22. 必須保持本產品乾燥，並避免在手部潮濕時使用，以免觸電或因短路引發火災。
23. 在浴室使用本產品時，必須於使用完畢後拔除插頭，以避免水氣造成危險。
24. 為了保護您的安全，建議您在浴室的供電電路中安裝一個額定漏電動作電流不超過30mA的漏電保護開關(RCD)。
25. 清潔本產品時必須確保電源開關在關閉狀態並拔除電源插頭。
26. 必須定期使用毛巾、棉花棒或者牙刷清除進風口和出風口的附著物。
27. 嚴禁用指甲或尖銳物體等按壓或劃刮進風口和出風口，避免損壞產品。
28. 嚴禁使用酒精、去光水或洗滌劑等清潔本產品，否則可能導致故障、破裂和褪色。

警告！

出現以下狀況時嚴禁使用本產品，否則可能導致燙傷、火災、短路或觸電：

- 使用時出風不順，時有時無。
- 電源線扭轉後無法復原。
- 電源線或插頭變形或損壞。
- 插座插入部位鬆動。
- 電源線異常發熱。


產品結構

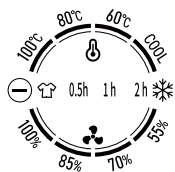

磁吸式集風咀

顯示屏

 進風口濾網

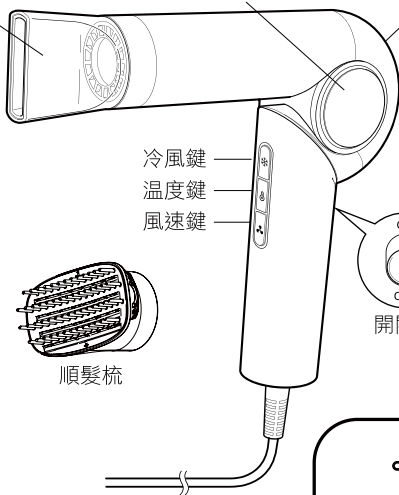


冷風鍵

溫度鍵

風速鍵




 開關鍵



順髮梳

 
便攜乾衣袋
(590 x 950mm)

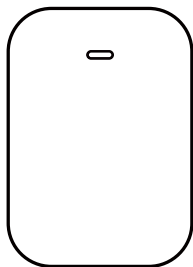

使用說明


摺疊或展開

 摺疊狀態

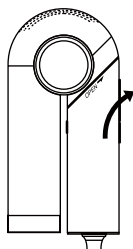

沿箭咀方向旋轉
打開，使手柄和
主體成垂直狀態

 展開狀態


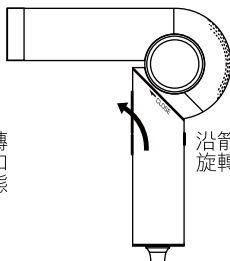


沿箭咀方向
旋轉摺疊

⚠ 警告！

- 摺疊或展開本產品時，注意不要夾到手指。
- 請根據指示的方向旋轉，嚴禁強行轉動把手造成損壞。
- 嚴禁向反方向強行旋轉。

  磁吸配件

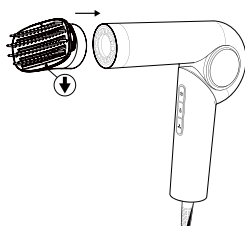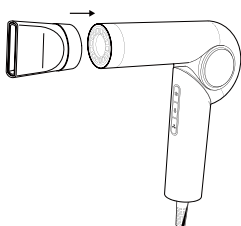


將頭髮吹乾至70%乾後，搭配集風咀或順髮梳使用：集風咀以「平滑」氣流導向髮絲、撫平毛躁、修整乾亂髮絲；順髮梳同步梳理與順整髮流，使髮絲更服貼柔順。集風咀可直接磁吸安裝於主機出口，順髮梳請對準箭頭位置，水平吸附固定。

⚠ 警告！

使用時或剛使用完畢，配件溫度極高，嚴禁直接觸碰。

 LED顯示屏

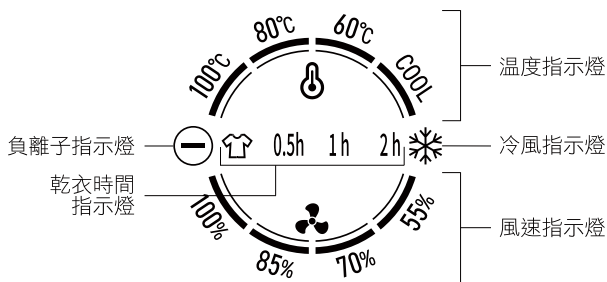

開機及關機

⚠ 警告！

- 使用前必須確認插座的電壓以及形狀。根據國家和地區，電壓和插座形狀會有所不同。
- 必須使用100-240V~的交流電源。使用超過240V~的電源可能會導致故障。
- 某些國家或地區，即使同一個國家內某些地區可能存在工業電源（380V~等高壓電源）接入家庭或酒店，使用本產品前必須確認當地供電情況。
- 插拔電源插頭時可能產生瞬間火花，此屬正常現象，並非產品故障。
- 建議在插拔電源插頭前先將電源關閉，以減少瞬間電流造成的火花現象。

1. 將手柄向「OPEN」箭頭方向轉動，旋轉至發出「喀嚓」聲，然後將電源插頭插入插座，嚴禁向相反方向強行旋轉，必須將電源插頭牢固地插入。
2. 確保集風咀已安裝到位後推動手柄背面的「開關鍵」至「ON」開機，使用時可按需求自由設定風量和溫度。
3. 使用完畢後，推動手柄背面的「開關鍵」至「OFF」將電源關閉，並拔除電源插頭。

溫度檔位

- 按「溫度鍵」可切換4種出風溫度：冷風、暖風（60°C、80°C、100°C），相應指示燈常亮。
- 使用暖風模式期間，長按「冷風鍵」可立即切換至冷風；放開「冷風鍵」後恢復到之前的溫度。

風速檔位

按「風速鍵」可切換4種風速：55%、70%、85%及100%，相應指示燈常亮。


記憶功能

本產品會儲存關閉電源前的風速和溫度設定，即使從插座上拔除電源插頭，下次開機時會使用上次的風速和溫度運行。

乾衣模式

⚠ 警告！

乾衣功能必須配合跟機附送的便攜乾衣袋使用，嚴禁使用其他衣袋以防產品損壞。

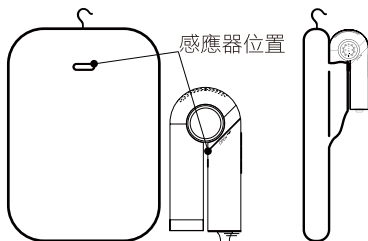

- 使用乾衣模式前將集風咀、順髮梳等配件從主機上拆下，並保持產品為開機狀態。
- 於乾衣袋內掛好衣物後，將主機出風口插入乾衣袋的開口處並摺疊機身，讓機身感應器對準開口處的感應位置，產品自動進入乾衣模式。

3. 預設乾衣時間為0.5小時，完成後產品將自動關機。如需調節乾衣時間，按「風速鍵」1次調節為1小時，再按1次調節為2小時，相應指示燈常亮。最長乾衣時間為2小時。
4. 乾衣模式結束後，推動開關重新開機即可返回吹風機模式。

注意：

- 在乾衣模式下，如主機脫離乾衣袋3-5秒將會自動關機。
- 必須將乾衣袋置於乾燥陰涼處，避免陽光直射。
- 嚴禁遮蓋出風口，以免過熱。
- 建議使用低溫烘乾，並適時觀察烘乾狀況。
- 烘乾時必須避免兒童單獨操作。

以下衣物並不適合烘乾：


1. 絲綢、蕾絲：高溫容易令衣物變形或破損（如絲綢睡衣、蕾絲裙等）。
2. 羊毛、毛織品：高溫可能導致縮水、起毛或結構破壞（如羊毛大衣、圍巾等）。
3. 彈性織物：在高溫下容易令衣物失去彈性（如彈力褲、運動緊身褲等）。
4. 皮革、皮草：高溫會造成硬化或變形（如皮革夾克、皮草外套等）。
5. 防水塗層衣物：高溫會損壞防水膜（如風衣、雨衣）。
6. 特殊塗層或印花衣物：高溫可能導致塗層剝落或褪色。
7. 裝飾品豐富衣物：衣服上有亮片、珠飾等裝飾物，高溫下容易受損。
8. 易燃材質：可能會阻礙空氣流通並引發危險（如羽絨服、毛毯等）。

清潔及保養

⚠ 警告！

- 必須定期清潔出風口，並於使用後存放於乾燥、通風環境中。
- 清潔前必須關閉電源，從插座上拔除電源插頭，並待主機冷卻後再進行清潔保養和收納。

- 若進風口濾網和進風口蓋堆積毛髮、灰塵，可能造成風量減弱並引起過熱或起火，請按使用情況定期清潔（建議至少每月一次，必要時應增加清潔頻率）：拆下進風口蓋，用清潔刷或乾抹布清除濾網和進風口蓋上的灰塵。
- 清潔結束後，將進風口蓋正確裝回主機，並確保安裝穩妥。

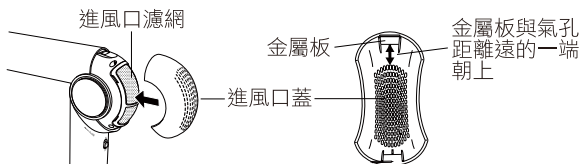

注意：

- 進風口蓋有上下方向區分，請將金屬板與進風孔距離較遠的一端朝上安裝
- 嚴禁將本產品與髮夾等其他物品一起存放，異物進入產品內部可能造成故障。
- 嚴禁讓本產品接觸到髮膠或化妝品，避免主機劣化造成顏色脫落和故障。

故障檢修

⚠ 警告！

如無法排除故障，請與德國寶客戶服務及維修中心聯絡，嚴禁自行拆卸及維修。

故障情況	可能原因	解決方法
按鍵無反應	未接通電源	檢查插頭是否鬆脫
冷熱出風異常	冷風鍵故障	確保按鍵按壓順暢
	進風口濾網堵塞	使用中請勿握持或堵塞進風網
	灰塵堆積於進風口或出風口	清潔進風口或出風口
使用中出現嚴重焦味	內部零件損壞	聯絡德國寶客戶服務及維修中心
電源線或插頭異常發熱	電源線損壞或插頭鬆動	檢查插頭是否鬆脫

型號	HDR-WV1200
電壓	100-240 V~
頻率	50/60 Hz
功率	1,200 W
產品尺寸	摺疊後 (H) 84 (W) 168 (D) 48 mm 展開後 (H) 180 (W) 168 (D) 48 mm
淨重	520 g

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用說明書以www.germanpool.com網上版為最新版本。