

GERMAN POOL

Handheld Garment Steamer

IRH-211



USER MANUAL

Please read these instructions and warranty information carefully before use and keep them handy for future reference.

Warnings and Safety Precautions

 
⚠ WARNING!

- Read all instructions carefully before using this product.
- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
 - This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
 - Mind your children and DO NOT let children play with this product.
 - Cleaning and user maintenance shall not be made by children without supervision.
 - Check the voltage indicated on the rating label before using this product.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
 - Unplug this product from the power source before cleaning and maintenance.
 - Contact German Pool authorized service technician for repair or maintenance of this product.

- This product must be used with standard power supply (220-240V~50/60Hz), incorrect connection of power supply will lead to product damage and invalidate the warranty.
- Please use plug with ground wire, and DO NOT share power supply with other appliances with high power consumption. This product is only suited indoors. DO NOT immerse this product, plug and wires in water or other liquids to avoid electric shock.
- This product must be operated under surveillance at all times, DO NOT operate otherwise.
- Please fill water to the water tank before use, and monitor the water level to avoid spill.
- DO NOT pull the plug by force from its socket, please use gentle force to do so. DO NOT fill hot water or corrosive cleaning agents to the water tank, or it will cause damage to this product. Use only purified water without mineral.
- Unplug this product during filling water, when the water tank is empty, and not in use.
- DO NOT use this product with hazardous power supply or when this product is damaged. DO NOT attempt to dismantle this product to avoid electric shock; please return this product to qualified maintenance personnel for examination repair. DO NOT attempt to repair to avoid fire, electric shock and other hazards.
- Be aware of scalding when touching the hot steam or the steam panel.
- Be cautious of the hot steam ejected when using this product. DO NOT point the panel to human or pets, DO NOT touch the steam panel or its surroundings to reduce the risk of scalding.
- Only original accessories are suitable for this product, imitative and accessories which are not produced by the original manufacturer could lead to damage to this product, electric shock or fire hazard.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by a person responsible for their safety.
- DO NOT use extension cord for this product. Please use >15A cord if absolutely needed. DO NOT share this cord with other electrical appliances. It may cause overheating or electricity faults. Be cautious of tripping from this extension cord and DO NOT cut off suddenly.
- When using this product, the steam must not be directed towards objects with electrical parts, such as the inside of an oven.
- Please unplug this product after use and store it indoor with cool and dry condition.

- A steam sign is marked on the main body of this product indicates the hot steam outlet.
- ⚠ WARNING! In order to avoid danger if the power cord is damaged, it must be replaced by professional technician from German Pool Customer Service & Repair Centre.
- ⚠ WARNING! Turn off this product before cleaning and when it is not in use to avoid power leak.

Product Structure

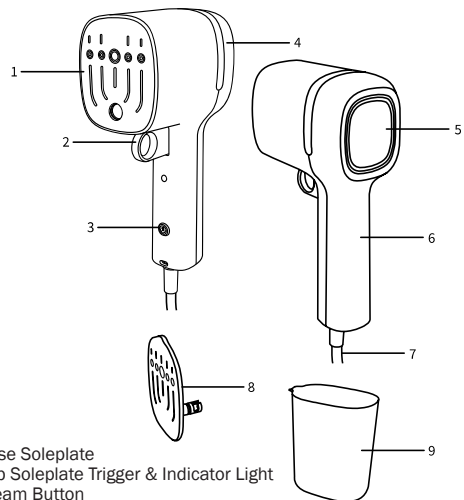

- Base Soleplate
- Clip Soleplate Trigger & Indicator Light
- Steam Button
- Water Tank
- Water Tank Lid
- Handle
- Power Cord
- Clip Soleplate
- Cup

Operation Instructions

 
- Open the water tank lid, use the cup to add a suitable amount of water into the water tank, then close the water tank lid.
- Connect product to the power source, and product will start to preheat, indicator light will light up constant; after product is preheated for approx. 45 seconds, it is ready for use. Press Steam Button and soleplate will release steam continuously.

⚠ WARNING!

- DO NOT overfill water tank to avoid water spilling out; in case of spill, wipe off immediately with dry cloth to avoid danger.
- Product must be disconnected from the power source when adding water; it is recommended to use purified water to extend life of this product.
- When product is connected to the power source, the soleplate and its surroundings will become hot. DO NOT touch to avoid getting burnt.
- If Steam Button is pressed before product is adequately preheated (approx. 45 seconds), hot water may drip from the soleplate.

How To Use The Clip Soleplate


- Insert the Clip Soleplate onto the base soleplate (there will be a gap between the two plates after assembly).
- Turn the Clip Soleplate 90° to the locked position to secure it in place.
- Place the crease between the two soleplates, pull the trigger to press out a crisp crease.

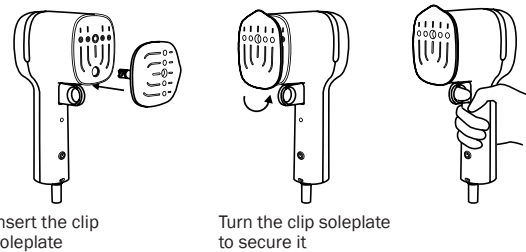

⚠ WARNING!

- DO NOT attach or detach the Clip Soleplate when steam is being released.
- Disconnect this product from the power source and allow it to cool down completely before attaching or detaching the Clip Soleplate.

 Ironing Guideline

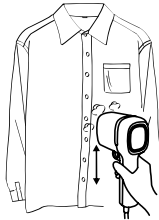

- When in use, the soleplate and the steam emitted can be as hot as 160°C. Check the care label on the garment to make sure it can be ironed.
- DO NOT iron the same spot for a long period of time to avoid damaging the fabric or causing danger.
- DO NOT use this product upside down, otherwise the pump will not be able to draw water.
- When ironing, lightly stretch the garment straight from the bottom to make sure the garment surface is flat. After steam is emitted, press the iron on the garment and move back and forth to remove wrinkles.
- When ironing sleeves, pull the sleeve straight, press the iron close to the top of the sleeve and iron back and forth.
- When ironing collars, firmly press the iron against the collar, linger on the corners for a bit, then iron back and forth.
- When ironing garment edges, pull the edge straight then press the iron against the edge and move the iron upwards. Be careful of the hot steam.

 
保用條款

此保用提供購買產品之條件在正常使用下會保用 (以購買日起計算)

Warranty Terms & Conditions

Under normal operations, the product will guarantee a 5-year full warranty provided by German Pool (effective from the date of purchase).

- 用戶應在本產品內，以下列其中一種方式向本公司登記資料，獲准享此保用條款：
 - 填妥或購買VIP卡並使用方式保用登記表 (請參看右二圖)
 - 填妥本公司網頁保用登記表 www.germanpool.com/warranty
 - 填妥保用卡郵寄至本公司。

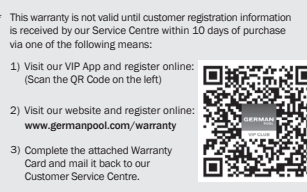

凡請填寫以下表格與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費維修會無效。Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No.: IRH-211

機身號碼 Serial No.: _____

發票號碼 Invoice No.: _____

購買商號 Purchased From: _____

購買日期 Purchase Date: _____

- 未能出示購買發票正本者，將不獲免費維修服務。
- 用戶應依照附設的指示操作。本保用並不包括：
 - 上述安裝、維修、維修更換零件之人工以及一切維修費用；
 - 因天災與人為意外造成的損壞 (包括運輸及其他)；
 - 電源接合不當、不依說明書而錯誤或誤使用本機所引起之損壞。
- 於下列情況下，用戶之保用資格將被取消：
 - 購買發售有非經認可之修改；
 - 產品被用作商業或工業用途；
 - 產品非經認可之技術人員拆卸或加裝任何配件；
 - 機身號碼被塗改、破壞或磨損。
- 總代理有權選擇維修或更換配件或其維修部分。
- 產品一經被轉售，其保用將被視作失效。

- Customer who fails to present original purchase invoice will not be eligible for free warranty service.
- Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper angle, and unauthorised installations.
- This warranty is invalid if:
 - the purchase invoice is modified by an unauthorised party;
 - the product is used for any commercial or industrial purpose;
 - the product is repaired or modified by unauthorised personnel; or
 - unauthorised parts are installed.
- German Pool will, at its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港
九龍深水埗95號
三九龍龍運廣場中心地下室
電話: +852 2333 6249
傳真: +852 2366 9798
電郵: repair@germanpool.com

Customer Service & Repair Centre

Hong Kong, China
Ure & Gif, Sunning Row/Bon Bon
Orgo Centre, 59 Tai Yip Street, Kowloon
Kowloon HongKong
Tel: +852 2333 6249
Fax: +852 2366 9798
Email: repair@germanpool.com

Macao, China
A 18 de Maio Ku Kung Cheng Fao 2
No.525 Avenida Do Cordeiro Boipa
Macao
Tel: +852 2875 2699
Fax: +852 2875 2661

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau

IRH-211_M-23 (1.1)

 
警告及注意事項

⚠ 警告!

- 使用本產品前，請仔細閱讀所有說明。
- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用即告失效。
 - 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
 - 應照顧好兒童，確保他們不會玩弄本產品。
 - 無成年人監管下，勿讓兒童清潔及維護本產品。
 - 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
 - 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格之技術人員進行更換。
 - 清潔或檢查本產品前，必須先關機及拔掉插頭。
 - 請聯繫德國獲授權之技術人員進行維修或保養本產品。

- 必須使用標準的供電電壓 (220~240V~50/60Hz) 連接不正確的電壓會損壞本產品，並使保用失效。
- 必須使用帶地線的電源插頭。嚴禁與其他大功率電器共用電源，本產品只適用於室內使用。
- 為避免觸電危險，嚴禁把本產品、電源插頭或電源線浸入水或其他液體中。
- 本產品在使用過程中必須全程受監控，嚴禁在無人監管的情況下運作。
- 使用前，請往水箱裡注水至水位接近蓋口。在加水過程中，必須留意水箱的水位變化，嚴禁注入過量的水，以免溢出。
- 嚴禁把插頭從插座上猛力拉扯出，必須從插頭從插座上輕輕拔出。
- 嚴禁往水箱裡注入熱水或腐蝕性清潔劑，否則將會損壞本產品。必須使用不含礦物質的水。
- 在不使用本產品、往水箱內加水或者水箱沒有水時，必須拔除電源插頭。
- 在使用危險電源或產品已損壞時嚴禁運行本產品。為避免觸電，嚴禁試圖拆卸本產品。必須把本產品送回合資格的維修人員檢查和修理。嚴禁自行拆卸修換，以免導致本產品在使用時出現火警危險、觸電或人員受傷害。
- 當接觸蒸氣出口的面板或者接觸蒸氣時可能導致燙傷。
- 本產品工作時，蒸氣面板會有高溫蒸氣噴出，請注意安全。為減少接觸蒸氣口噴出蒸氣而導致的危險，在使用本產品時，嚴禁將蒸氣噴頭對向人或寵物。蒸氣面板及其接近的塑膠件溫度會很高，嚴禁接觸避免燙傷。
- 原廠配有配件只適用於本產品。非原廠配備的配件可能會導致火災、觸電或損壞本產品。
- 本產品不建議身體、感官、心智或活動能力殘障的人士 (包括兒童)，或者缺乏經驗和相關認知的人士使用本產品。除非獲得其監護人員提供安全使用本產品的明確指導。
- 使用本產品時嚴禁使用延長線，若一定要使用延長線，必須使用15A以上的線，並且與其他家電電器時共用此延長線，因為低於15A以下或與其他家電共用同一延長線時可能會導致過熱或無法用電。使用延長線時，必須小心不要絆到電線或突然將電線拔除。
- 使用完本產品時，蒸氣不能直接朝向電氣部件的裝置，如烤箱內部。
- 使用完聯後必須拔除電源插頭並將本產品存儲在涼爽、乾燥的室內。
- 主機上帶有蒸氣標識位置，表示該位置有高溫蒸氣排出。
- ⚠ 警告! 如果電源線損壞，為避免危險，必須由德國買客戶服務及維修中心的專業人員更換。
- ⚠ 警告! 為防止漏電及其他危險，不使用及清潔前須關掉本產品。

產品結構

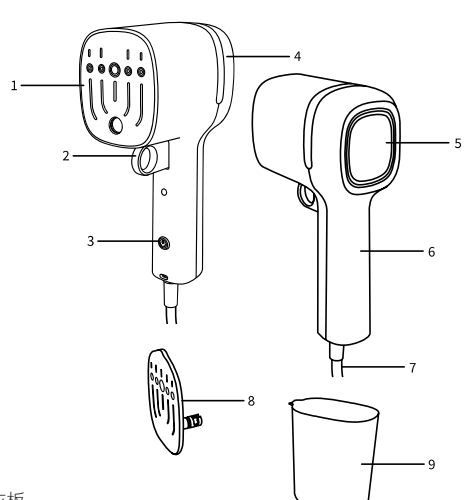

- 熨衣板
- 夾板紙機及指示燈
- 蒸氣鍵
- 水箱
- 水箱蓋
- 手柄
- 電源線
- 熨衣夾板
- 水杯

使用說明

 
- 打開水箱蓋，使用水杯往水箱內加入適量的水，再把水箱蓋合上。
- 接連電源後產品開始預熱，指示燈常亮；預熱約45秒後按蒸氣鍵，熨衣板持續噴出蒸氣即可開始熨衣。

⚠ 警告!

- 嚴禁加入過量的水以免溢出，如水溢出必須立即用布擦乾，避免危險。
- 加水過程中嚴禁接連電源；建議使用純淨水以延長本機壽命。
- 產品通電後嚴禁觸碰面板及其四周，以免高溫燙傷。
- 如在預熱不足45秒的情況下按蒸氣鍵，可能導致水從熨衣板溢出。

使用熨衣夾板


- 將熨衣夾板如所示角度插進熨衣板 (熨衣夾板與熨衣板相隔一定距離，並非完全貼合)。
- 將熨衣夾板旋轉至鎖定位置，使其固定在熨衣板上即可。
- 扣動夾板機，使熨衣夾板與熨衣板夾住衣物進行熨燙。

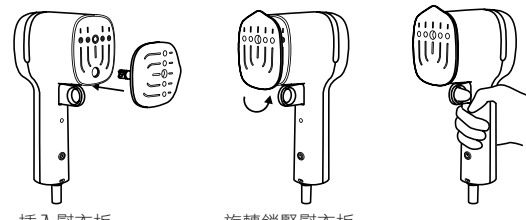

⚠ 警告!

- 嚴禁在產品通電狀態或蒸氣噴出時安裝或拆卸熨衣夾板。
- 在安裝或拆卸熨衣夾板前必須先將產品斷電並確保產品已完全冷卻。

 熨衣小貼士

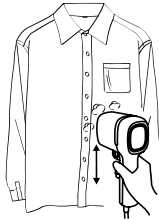

- 使用時，熨衣板與噴出的蒸氣溫度很高，最高可達約160°C。使用前應先參考衣物上的標籤，確認是否可進行熨燙。
- 嚴禁長時間在同一位置熨燙或靜止，以免損壞衣物以及發生危險。
- 嚴禁倒轉使用本產品，否則水氣無法抽水。
- 熨衣板輕輕用力抓住衣物的下部往下拉，儘量使衣物表面平整，熨衣板噴出蒸氣，輕輕壓住衣服上下來回熨燙。
- 熨衣袖時先把衣袖拉直，讓熨衣板貼緊衣袖頂部，然後上下移動。
- 熨衣領時稍為用力往下壓，熨衣板壓在衣領折邊的時間稍長，然後來回上下熨燙。
- 熨衣板摺邊時拉直衣服邊角，熨衣板貼緊衣服向上移動。注意小心蒸氣燙傷。

Cleaning and Maintenance

⚠ WARNING!

- Unplug this product from the power source and let product cool down completely before cleaning and maintenance.
- DO NOT immerse this product or its power cord in water or other liquids.
- If power is disconnected when this product is still emitting steam, residual water left inside the heating element may cause small amounts of steam to be emitted intermittently. DO NOT point the soleplate towards others to avoid scalding.

- This product does not need special detergents for cleaning.
- Wipe the product with a half-dry cloth, no need to add any detergent.
- After a long period of use, if there is any residue stuck on the soleplate, use a moist cloth to rub it clean.
- It is recommended to pour off residual water in the water tank after each use, wind up the power cord after the product has cooled down completely and store product in a dry and steady place.
- DO NOT add vinegar, descaling agent or fragrance in the water tank.

Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Product does not work and indicator light does not light up | Product is not plugged in properly or there is no power connection Indoor circuit breaker/ground wire malfunction, power trip or fuse melt | Plug in the product properly and reconnect power Seek help from a qualified electrician |
| Soleplate does not emit steam though the indicator light is lit | Water tank is empty Pump malfunction | Refill water tank with purified water Contact German Pool Customer Service & Repair Centre |

⚠ WARNING!

If problem persists, contact German Pool Customer Service & Repair Centre for inspection and repair. DO NOT disassemble product by yourself.

Technical Specification

| Model | IRH-211 |
|---------------------|---------------------------|
| Voltage | 220-240 V~ |
| Frequency | 50/60 Hz |
| Power | 920-1100 W |
| Water Tank Capacity | 130 ml |
| Product Dimensions | (H) 245 (W) 76 (D) 112 mm |
| Net Weight | 0.76 kg |

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to www.germanpool.com for the most update version of the user manual.

清潔與保養

⚠ 警告!

- 清潔與保養前，必須先拔除產品電源並讓產品完全冷卻。
 - 嚴禁將產品或其電源線浸入水或其他液體中。
 - 如在少量蒸氣噴出時關閉本產品，發熱器裡尚有餘水，可能會不定期有小量蒸氣噴出，嚴禁將熨衣板對向別人，避免造成蒸氣燙傷。
- 清潔本產品無需添加任何洗滌劑。
 - 使用半乾濕布擦拭機身，無需使用清潔劑。
 - 長時間使用後，如熨衣板有異物，請用濕布擦拭乾淨。
 - 建議每次使用後倒掉水箱內剩餘的水，待機身完全冷卻後把電線繞好，放置於平穩乾燥的場所儲存。
 - 嚴禁在水箱內加入醋、除垢劑或其他芳香物質。

故障檢修

| 故障現象 | 可能原因 | 故障排除 |
|----------------|--|--|
| 產品不工作且指示燈不亮 | 電源插頭未正確插在插座上或未接連電源 | 將電源插頭插進插座上重新接連電源 |
| 熨衣板不出蒸氣，但指示燈亮起 | 家用斷路器/接地故障、斷路器跳開或保險絲斷斷 水箱缺水 產品抽不到水 | 向合資格電工尋求幫助 將水箱加滿純淨水 聯絡德國買客戶服務及維修中心 |

⚠ 警告!

如問題無法解決，請聯絡德國買客戶服務及維修中心安排檢查維修，嚴禁私自拆卸本產品。

技術規格

| 型號 | IRH-211 |
|------|---------------------------|
| 電壓 | 220-240 V~ |
| 頻率 | 50/60 Hz |
| 功率 | 920-1100 W |
| 水箱容量 | 130 ml |
| 產品尺寸 | (H) 245 (W) 76 (D) 112 mm |
| 淨重 | 0.76 kg |

- 產品規格及設計如有變更，恕不另行通知。
- 中文版本如有出入，一概以中文版為準。
- 本產品使用說明書以www.germanpool.com網上版為最新版本。