


GERMAN
POOL



德國寶

原汁机
Slow Juicer

JUS-102

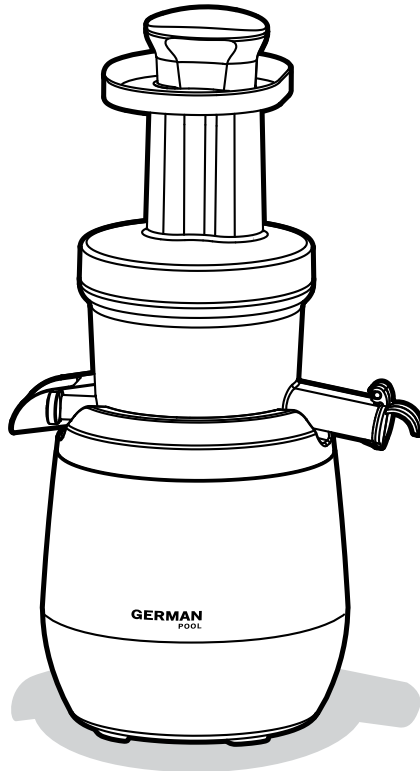

即时网上登记保用
Online Warranty Registration



在使用之前请仔细阅读「使用说明书」及「保用条款」，并妥为保存。
Please read these instructions and warranty information carefully
before use and keep them handy for future reference.

使用说明书 USER MANUAL

请即进行保用登记！
有关保用条款细则，请看本说明书最后一页。

Please register your warranty information now!
For Warranty Terms & Conditions,
please refer to the last page of this user manual.

目录

| | |
|-----------|----|
| 注意事项 | 4 |
| 产品结构 | 5 |
| 组装方法 | 6 |
| 操作说明 | 7 |
| 安全注意事项 | 9 |
| 使用注意事项 | 12 |
| 清洁与保养 | 13 |
| 常见故障及解决方法 | 14 |
| 技术规格 | 15 |
| 电路原理图 | 15 |
| 保用条款 | 31 |


注意事项

使用电器时应始终遵循基本的安全预防措施，包括以下内容：


1. 仔细阅读所有说明。
2. 为防止触电危险，切勿将机器及其部件浸入水中或其他液体中。
3. 儿童使用电器或在其附近使用电器时，须严密看管。
4. 机器不用时，安装或拆除部件前，以及清洗前必须将插头从插座中拔出。
5. 不要接触活动部件。
6. 如电线、插头损坏及设备发生故障后，或机器掉落或损坏时，切勿使用该机器。将机器送至最近的授权服务中心检查、维修或进行电器或机械调整。
7. 使用非厂家推荐或售卖的配件可能会导致火灾、触电或受伤。
8. 切勿用于户外（除非该机器可用于户外）。
9. 切勿将电线悬挂在桌台边缘。
10. 应始终确保进料斗已正确盖紧好。运作过程中，切勿松开进料斗。
11. 每次使用完后，确保机器已关闭。拆卸机器前，确保马达已完全停止运作。
12. 原汁机运作时，切勿将手指或其他物品放入机器中。若食物卡在进料斗，使用推压棒或水果蔬菜的其他部分将其推压下去。当该方法行不通时，关机，然后拆卸原汁机，以清除残余的食物。
13. 如旋转滤网损坏时，切勿使用该机器。
14. 果肉杯没放置好时切勿运行该机器。

妥善保存本说明书

产品结构

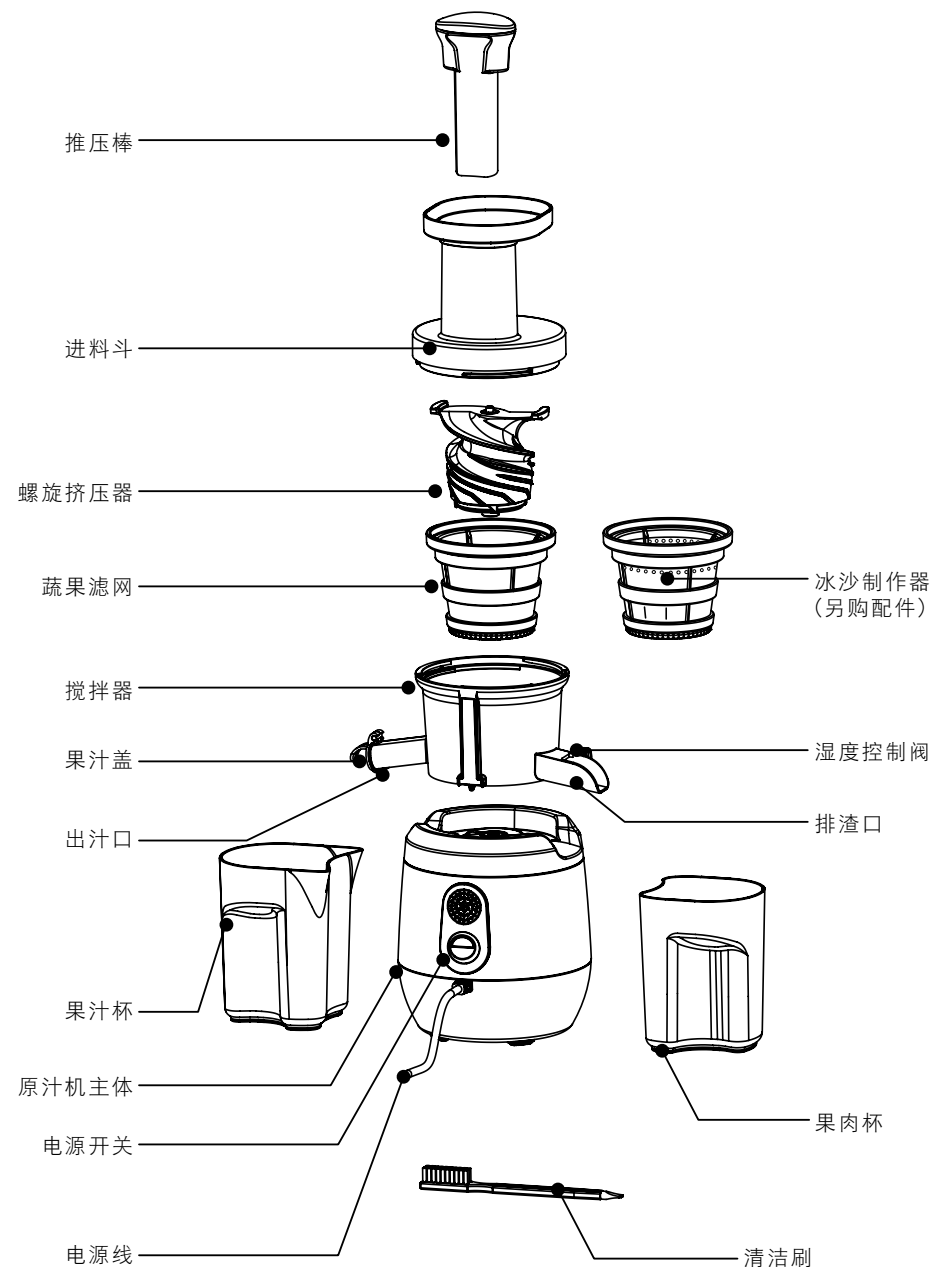

组装方法

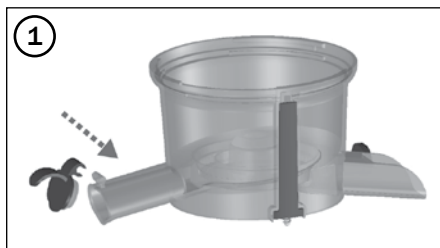

将果汁盖安装到搅拌器的出汁口上。



将搅拌器安装到原汁机主体上。




将蔬果滤网（或冰沙制作器）放入搅拌器内，左右旋转直至底部安装位与搅拌器完全吻合。




将螺旋挤压器装入滤网内，左右旋转直至挤压器完全插入主体的电机轴。

注意：如湿度控制阀在O全开位置，则无法将螺旋挤压器安装到搅拌器组件中。

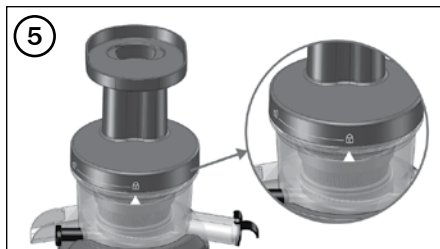


将进料斗盖上“解锁”标示对准搅拌器上△箭嘴，按顺时针方向旋转直至锁紧（进料斗盖上“锁紧”标示对准搅拌器上△箭嘴）。


操作说明

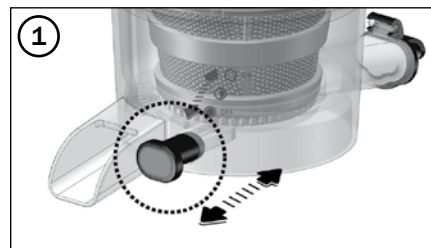

启动前，先将湿度控制阀调至适当位置（详细请参阅湿度控制阀介绍）。

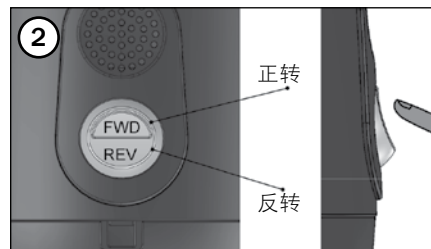

按下电源开关，推至“FWD”正转位置。

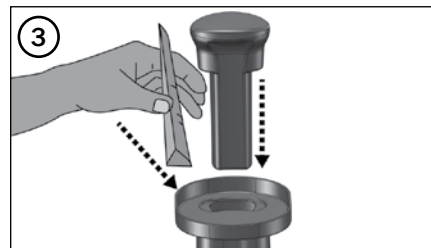


将食材从进料斗逐量投入，然后用推压棒按压。



在投入最后的食材前，将湿度控制阀推到半开位置。

将搅拌器内压榨后的果渣排出，就能轻松打开进料斗。

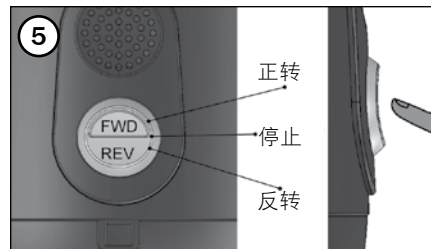


榨汁结束后，将电源开关推至中间停止位，原汁机将停止运转。

注意：按正转或反转之前，请确认螺旋挤压器完全停止运转后，再按其他键。


操作说明

湿度控制阀

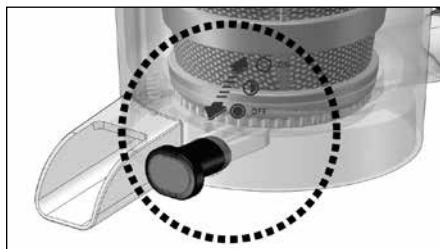


准备，榨汁模式 关闭

一般食材在湿度控制阀关闭状态下榨汁效果会更好。
葡萄、复盆子、石榴等硬核水果应先关闭湿度控制阀后才启动，待果汁开始流出时再转到半开位置继续榨汁。

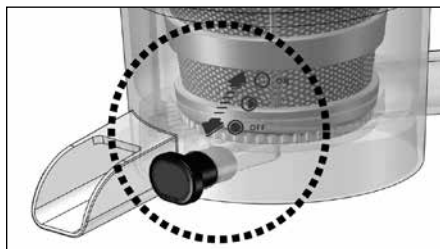

榨汁结束，简易清洗模式 半开

投入最后的食材时，将温度控制阀转到半开位置，以便将榨汁后的渣子排出，渣子排出后，才能打开进料斗。
简易清洗时，将湿度控制阀转到半开位置，并将渣子排出。

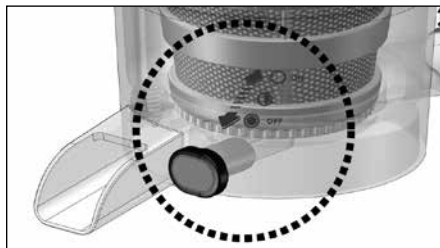

清洗模式 全开

需拆卸清洗搅拌器时，应将湿度控制阀调至全开位置。

电源开关



将电源开关推至“REV 反转”位置，食材将被推回到上部。只有在按住不动的情况下，才会进行反转运作，手指松开后，螺旋挤压器将停止旋转。

“FWD 正转”或“REV 反转”运转时，必须待螺旋挤压器完全停止运作后，才能按其他键。

注意：要反转运作时，请确认原汁机完全停止运转后，再将电源开关推至“REV 反转”位置。推至“REV 反转”位置后，马达不会立即停止运转，出于安全和机器寿命的考虑，会慢慢停止运转。

安全注意事项

1. 请在使用前仔细阅读以下事项。
2. 使用过程中请遵守以下事项。
3. 注意事项有以下区分



警告：操作过程中违反警告标示事项时，可能会发生严重人身伤害或伤亡。



注意：操作过程中违反注意标示事项时，可能会发生严重人身伤害或造成产品损伤。



警告：



请勿用淋湿的手直接插拔电源。可能引起触电或人身伤害。



仅限在220V交流电源下使用。否则可能引起触电、火灾及性能异常现象。



请正确插入电源。否则易造成火灾、触电等人身伤害事故。



禁止过度折弯、捆绑、拖拽、或使用重物压迫电源线，勿将电源线接近高温处、火源处，勿将电源线夹到夹缝或自行变更电源线。易损坏电源线，导致触电或火灾事故。



禁止自行改造、拆卸或修理。禁止插入手指、铁片等异物至搅拌器的缝隙中。易导致火灾、触电、人身伤害、故障等事故。产品的售后服务和检验请联系售后服务及维修中心。



禁止在电源、电源线破损或插头松动时使用。易导致火灾、触电、人身伤害事故。如果电源软线损坏，为避免危险，必须由制造商、其维修部门或类似部门的专业人员更换。



禁止让机体沾到或喷洒到水。避免异物和水渍进入产品开关。禁止手湿时碰触开关。易导致触电、火灾等事故。






为安全起见，请务必接地后使用。请勿接地到煤气管、胶质水管或电话线等物附近。否则会成为触电、火灾、故障、爆炸等事故发生的原因，请务必使用接地插座。






请勿在出汁口插入勺子、筷子等。运行中请勿移动机器或拆分、组装部件。易导致人身伤害或机器故障。

安全注意事项

-  请勿在儿童轻易触碰到的地方使用。儿童或不会使用的人，请不要独自操作使用，儿童碰到或碰倒会有人身伤害或机器故障的危险。
-  注意：
-  请勿在未扣紧进料斗的状态下操作。易导致人身伤害或机器故障。
-  室内漏煤气、天然气等可燃气体时，请勿插拔电源，待开窗通风后使用。易导致人身伤害或机器故障。
-  如果在使用中螺旋挤压器停止工作，请按住“REV 反转”2-3秒，等反转完全停下来之后再按向“FWD 正转”。如果停止工作的状态持续，电机会因过热而损坏部件或性能减退。如果问题经常发生，请停止使用产品，拨打咨询售后服务热线。
-  请注意不要让领带、项链、围巾等卷入进料斗。易导致人身伤害、机器故障、破损。
-  请将此产品放到平稳的地方使用。否则，易导致人身伤害、机器故障。
-  请不要持续使用20分钟以上。电机过热，易导致故障。持续使用后停20分钟再使用。
-  在投入食材时，请勿使用除推压棒以外的物品。易导致人身伤害、机器故障。
-  请勿使产品受到严重的撞击或跌落。易导致触电、损坏、火灾。
-  使用中若有声音异常、过度发热、冒烟等情况，请立即停止使用，并联络客户服务中心。使用新产品时可能会有些许气味，使用一段时间后会自动消失。
-  不使用时，请拔出电源、且拔出电源时，必须握住电源插头拔出。拖拽电源线可能导致触电、火灾等事故。
-  请不要在80° C以上的高温下清洗。请勿放入洗碗碟机、干燥机、微波炉中。易导致机器故障、部件变形。

安全注意事项

-  原汁机重3.6kg，移动时请务必用双手紧托住主体的下部。仅握住搅拌器或主体侧面可能在移动过程中造成跌损，导致人身伤害、机器故障等。
-  操作过程中，请勿拆分搅拌器部件；请勿在进料斗或出汁口深入手指或勺子等物品。易导致人身伤害、事故、机器故障等。
-  如果旋转滤网损坏，请不要使用本机器。

使用注意事项

• 需要注意的食材

- 柿子、梅子、柠檬、李子、桃子等硬核水果，应将果核去除后再选择正转运作。
- 水芹菜、洋芹等纤维含量高的蔬菜，应先切成3-4cm的小段后再投入。
- 请不要投入芝麻、豌豆、树皮、花椒等无法冷压的食材。
- 请不要投入泥鳅、鳗鱼、虾、川鲶、鱿鱼等。
- 请不要投入用酒、蜂蜜、白糖等腌制的水果（葡萄、复盆子、桑葚等）及酶类（七面草、瓦松等）。

不适于谷物粉碎及榨取甘蔗。

易产生部件损坏，发生故障。

- 榨出来的果汁要尽快饮用，请勿长时间保存。
- 可以加工调料（蒜、生辣椒），但不要用于谷物粉碎。（可能引起机器故障或破损）
- 榨过汁的渣滓请不要再正转。软水果可以进行再正转。
- 投入食材前，请不要空转。
- 请不要连续使用20分钟以上。
可能因电机过热而导致机器故障。
连续使用时，请在暂停20分钟后再进行操作。
- 机器运转时，请勿往出汁口插入筷子、勺子等异物。
机器运转时，如果往出汁口插入筷子等物，可能会夹进旋转的刷子中间引起零部件破损。
- 请勿使用推压棒以外的物品。
可能会卡到螺旋挤压器中，引起零部件破损、人身伤害或机器故障。
- 请勿用淋湿的手操作开关。
可能引起触电、漏电或火灾。开关周围请不要黏上异物。

 
注意：使用蔬果滤网时，长时间保存在冰箱里的食材及冷冻水果，榨汁量少或无法榨汁。

清洁与保养

本机使用完毕后，请及时清洗，以备下次使用。

1. 清洗前，请确保切断电源并待主机完全冷却后方可进行清洗。
2. 主机部分严禁用水冲洗或直接浸入水中清洗，可采用湿软布擦拭干净，然后用干软布将水渍擦干。
3. 可拆卸部件，如果肉杯、果汁杯、推压棒、搅拌器、进料斗、滤网、螺旋挤压器等可直接放入水中清洗。
4. 因螺旋挤压器比较锋利，清洗时请特别小心，以免割伤。
5. 可采用附送的清洁刷清洗滤网。
6. 可拆卸部件不应放在高温消毒柜中，可用温水加适量洗涤剂用软布擦洗。
7. 本机全部清洗完毕后，用干布彻底擦干，并将可拆卸部件装回原位。
8. 如长期不用，请将本机放置在干燥通风处。

产品材质：



符合食品接触材料安全标准

推压棒 (ABS)、进料斗 (ABS)、螺旋挤压器 (PC+不锈钢)、蔬果滤网 (PC+不锈钢)、冰沙制作器 (PC+不锈钢)、搅拌器 (PC)、果汁盖 (ABS)、湿度控制阀 (硅胶)、搅拌器硅胶 (硅胶)、果汁杯 (PP)、果肉杯 (PP)

使用条件：

1. 直接接触食品
2. 拟接触的食品: 水果类
3. 最高使用温度及时间: 70°C, 30分钟
4. 是否重复使用: 是
5. 使用方法: 使用前应使用清水进行清洗等

观看操作视频



常见故障及解决方法

委托维修之前请确认以下内容。

无法启动

- 请确认电源插头是否已插好。
- 请确认进料斗是否盖紧。如进料斗未正确安装或未结合便无法启动。
- 请确认搅拌器是否放平安装在主体上。如搅拌器放置不平，则安全装置无法接合便无法启动。
- 请确认是否按本产品的组装方法进行组装，请参考组装指南。
- 请咨询售后服务及维修中心。

进料斗无法打开

- 内部是否渣滓过多？
请将湿度控制阀转到半开状态，然后按向“FWD 正转”，排出内部残余渣滓；或者按“REV 反转”3-5秒后停止，重复2-3次，就能轻松打开进料斗。
- 是否投入过异物、固体物质（如柿子核类的硬核）？
按住“REV 反转”，使异物重新上升至进料斗再去除。
- 请勿强行用力打开，如按所告知的方法仍无法打开，请联系售后服务及维修中心。

正常使用时，突然停止运转

- 是否投入过多或太大的食材？
请拔出插头，拆卸搅拌器组件进行清洗后再使用。
- 如上述方法仍无法解决，请联系售后服务及维修中心。

螺旋挤压器上有裂痕或刮痕

- 是在制造成型物的过程中产生的成型痕迹，属正常现象，对使用无任何影响。

主体顶部有果汁漏出

- 是否投入了太多食材？
投入量大于排出的渣滓量时，橡胶垫会被挤出来，果汁从其间隙处漏出。
一次不要投入太多食材，最好分多次投入食材。

（榨汁时）搅拌器会抖动

- 因为主体电机的动力，会产生轻微的抖动。
根据食材的特性（坚硬或坚韧）也会发生晃动状况，这是螺旋挤压器旋转时产生的正常现象，并非故障。相比水分多、又柔软的食材，榨取坚硬食材时的震动会相对较大。（例如：红萝卜/薯仔/萝卜/甜菜等）

无法将搅拌器组件安装到主体上

- 湿度控制阀在全开状态，无法将搅拌器组件安装到主体上。
在将搅拌器组件安装到主体之前，应将湿度控制阀转到关闭状态。

技术规格

| 型号 | JUS-102 |
|------|----------------------------------|
| 电压 | 220 V |
| 频率 | 50 Hz |
| 功率 | 150 W |
| 转速 | 38 rpm |
| 产品尺寸 | (H) 450 mm (W) 257 mm (D) 202 mm |
| 净重 | 3.9 kg |

生产者：德国宝（香港）有限公司


地址：香港九龙土瓜湾马头角道116号新宝工商中心二期113号室

执行标准：GB4706.1-2005、GB4706.30-2008、GB4806.7-2016、GB4806.9-2016、GB4806.11-2016

3C证书编号：2017010713991232

产品规格及设计如有变更，恕不另行通知。
中英文版本如有出入，一概以中文版为准。
本产品使用说明书以 www.germanpool.com 网上版为最新版本。

产品线路图

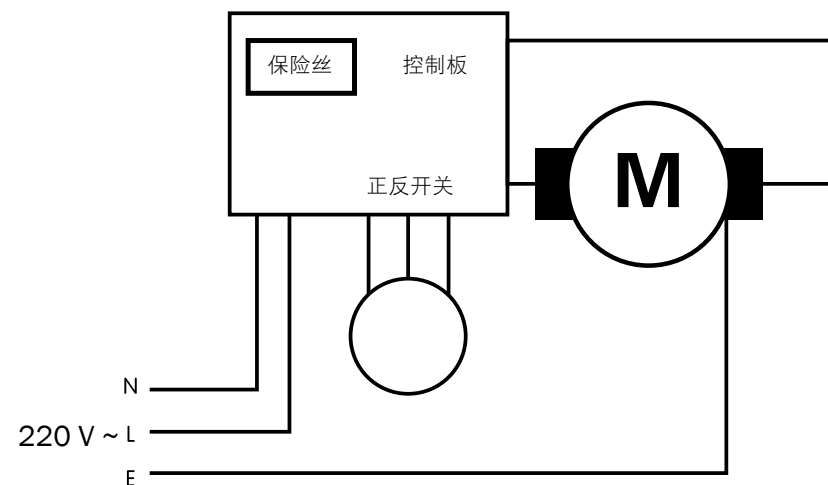

Content

| | |
|-----------------------------|----|
| Notice Before Use | 17 |
| Product Structure | 18 |
| Installation | 19 |
| Operating Instructions | 20 |
| Safety Precautions | 22 |
| Notice for Operation | 25 |
| Care & Maintenance | 26 |
| Troubleshooting | 27 |
| Technical Specifications | 29 |
| Circuit Diagram | 30 |
| Warranty Terms & Conditions | 31 |


Notice Before Use

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. To protect against risk of electrical shock do not put (state specific part or parts in question) in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest customer service centre for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors (this may be omitted if it is specially designed for outdoor use).
9. Do not let cord hang over edge of table or counter.
10. Always make sure the hopper is clamped securely in place before motor is turned on. Do not unfasten the hopper while juicer is in operation.
11. Be sure to turn switch to OFF position after each use of your juicer. Make sure the motor stops completely before disassembling.
12. Do not put your fingers or other objects into the juicer while it is in operation. If food becomes lodged in the hopper, use food pusher or another piece of fruit or vegetable to push it down. If it doesn't work, turn the motor off and disassemble juicer to remove the remaining food.
13. Do not use the appliance if the strainer is damaged.
14. Do not operate without the pulp container in place.

SAVE THESE INSTRUCTIONS

Product Structure

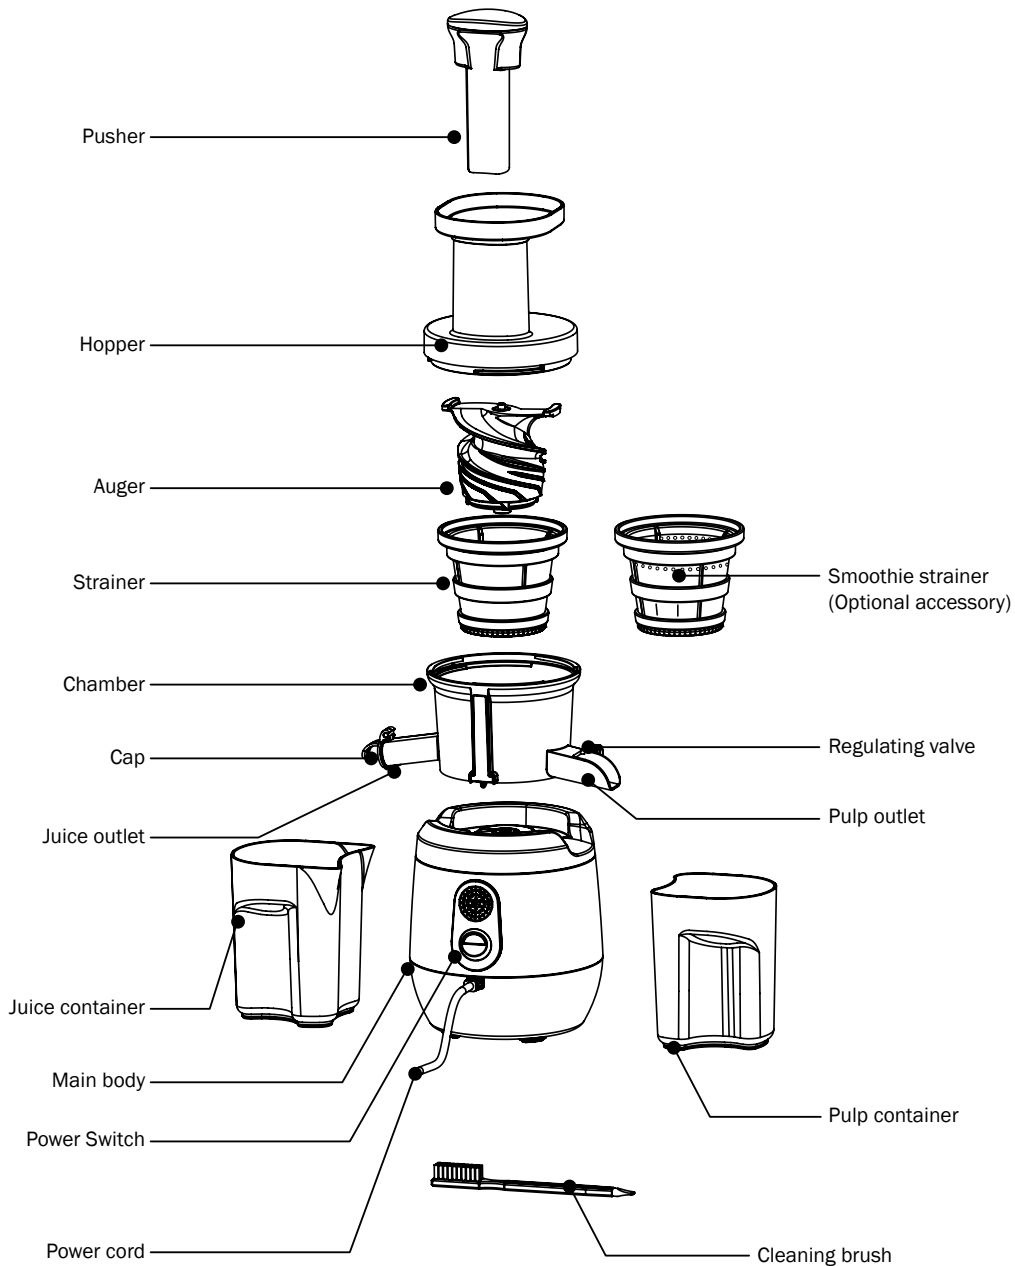

Installation

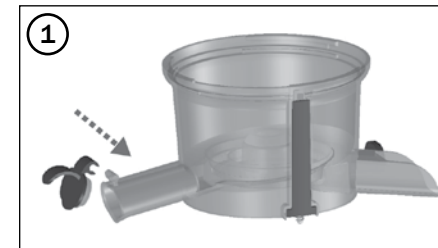

Fix the juice cap to the juice outlet on the chamber.

Watch the video clip



Install the chamber to the main body.




Install strainer into the chamber.




Put the auger into the installed strainer, rotate left and right to install the auger until it is fully inserted into the motor shaft on the main body.

Caution: When regulating valve is in ON position, the auger can't be installed.

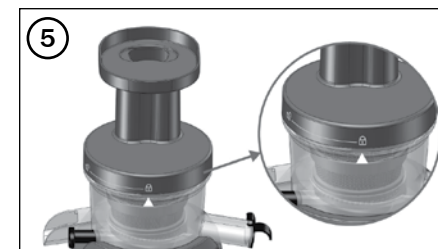


Align the "Unlock" mark on the hopper with "△" mark on the chamber, turn clockwise until the "Lock" mark alignment with "△" mark.

Operating Instructions

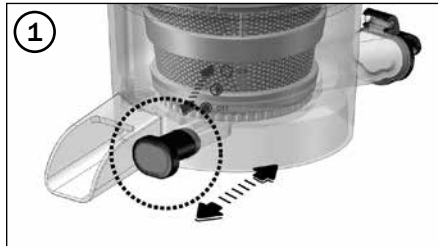

1 Before making juice, adjust the regulating valve to the suitable position. (See regulating valve instruction for details)

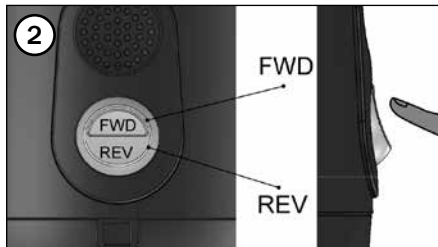


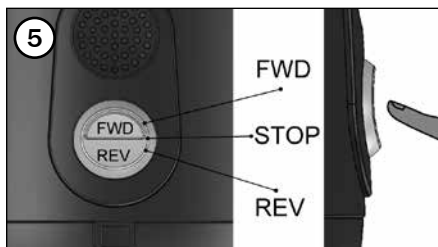
2 Press the power switch to "FWD" position.



3 Put the ingredients into the hopper, push them with the pusher.



4 Push regulating valve to  half-open position before putting the last ingredients into the hopper. (Take out the pulp, then easy to open the hopper)





5 When finish making juice, switch to "Stop" position, and the machine stops working.


Caution: Before pressing to "FWD" or "REV" position, please make sure the auger fully stops, and then to another side.


Operating Instructions


Regulating Valve

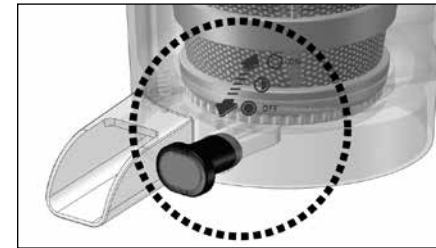


Ready, juice-making mode OFF 
For most ingredients, switch the valve to OFF position, the squeezing effect is better. Squeeze fruit with core like grape, raspberry, pomegranate etc., switch the valve to OFF position and then start to make juice. When juice begins to flow, switch the valve to half-open position to continue squeezing.

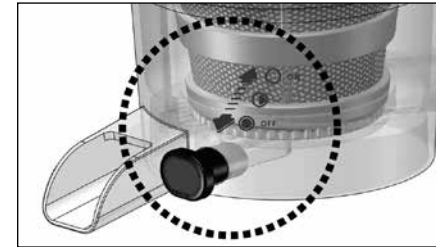


Finish, Simple cleaning mode Half-Open 
Switch the regulating valve to half-open position before putting the last ingredients into the hopper in order to take out the pulp. Only when the pulp is taken out, the hopper can be opened. When do simple cleaning, switch the valve to half-open position and take out the pulp.

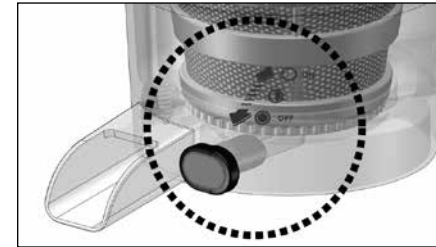

Cleaning mode ON 
Switch the regulating valve to ON position, and then you can disassemble the chamber to clean.

Power Switch

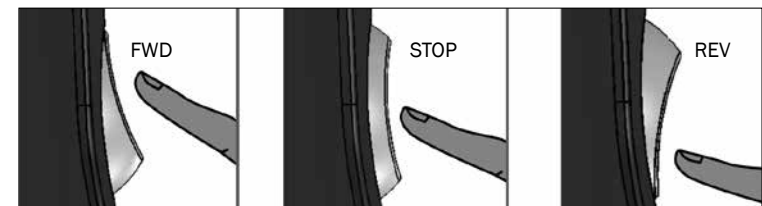

Push the power switch to "REV" position, the juicer works to move the stuck food back to the top. It reverses when press. Once without pressing, it stops working.

Under "FWD" or "REV" operation, make sure the auger fully stops running before push the power switch to the other side.

Caution: Before push the power switch to "REV" position, make sure the auger fully stops running. The motor will stop slowly instead of stop immediately due to the safety concerns.

Safety Precautions

1. Please read the Safety Precautions carefully before using the appliance.
2. Please obey the Safety Precautions in operation.
3. Please pay attention to differentiate below two marks.



Warning: If breach warning items in operation, it may cause serious injury or casualty.



Caution: If breach caution items in operation, it may cause serious injury or product damage.



Warning:



Do not insert or pull the plug with wet hands. May cause the risk of electric shock or personal injury.



Only work in AC 220V.



Ensure the plug is correct and fully inserted. If not, may cause personal injury by fire, electric shock etc.

Prohibit damaging the power cord like over bending, binding, dragging, or heavy loading. Do not let power cord near high temperature or fire. Do not put the power cord in crevice. Do not change the power cord by yourself. If not, easy to damage the power cord, and cause the accident of electric shock, fire.



Prohibit converting, disassembling, mending by yourselves. Prohibit putting other objects in the crevice of chamber like finger, pieces of iron etc. This may cause the accident of electric shock, fire, personal injury, stoppage etc. Please call customer service centre for the product A/S and inspecting.



Prohibit operating when power cord damaged or plug loose. May cause the accident of electric shock, fire, personal injury. If power soft cord damaged, change it by the professional person from manufactory, its customer service centre or relevant departments to avoid danger.



Prohibit immersing main body in water, or splash water over main body. Avoid other objects and water into product switch. **Prohibit touching switch with wet hands.** May cause the accident of electric shock or fire.



Safety Precautions

To ensure safety operation, make sure it is connected the grounding cable when operating.



Do not connect in danger objects like gas pipe, plastic water pipe, telephone line etc. If not, may cause the accident of electric shock, fire, stoppage, and explosion. Must use socket with grounding cable.



Do not insert spoon, chopstick etc. into the juice outlet. Do not move the appliance, disassemble or assemble the components when in use. May cause personal injury or machine stoppage.



Keep the appliance out of the reach of children when using. It cannot be operated alone by children or people who are not able to use it. It may cause the risk of personal injury or machine stoppage if children touch or knock down the appliance.



Caution



Do not use the appliance when the hopper is unlock. May cause the risk of personal injury or machine stoppage.



Do not plug in or pull out the power when gas leakage happens (like coal gas, natural gas etc.). Open the window and circulate air, then it can be used. May cause the risk of personal injury or machine stoppage.

If the auger stops running in using, push the power switch to REV position for 2-3s, and wait until fully finish running, then push to FWD position. If it is still not running, the motor will be overheated; components and performance will be damaged. If it happens regularly, stop using the appliance, and call the customer service centre.



Pay attention that do not let necktie, necklace, or scarf etc. roll into the hopper. May cause personal injury, machine stoppage or damage.











Use the appliance on the steady place. Or it may cause personal injury, machine stoppage.



Do not use the appliance continually over 20 mins. Motor will be overheated, and cause stoppage. Stop for 20 mins before operate again.

Safety Precautions

-  **Do not put other tools instead of the pusher into the hopper.** May cause personal injury or machine stoppage.
-  **Do not impact or drop the product.** May cause the risk of electric shock, fire or damage.
-  **Stop using and call the customer service centre when unusual sound, overheat and smoking happens.** It is normal to have some odor at the first few times, and it will disappear after using for a period of time.
-  **Hold the power socket and unplug after use.** Pull the power cord to unplug may cause the accident of electric shock or fire.
-  **Do not wash components in 80°C. Do not put components into dish washer, drying machine, or microwave oven.** May cause machine stoppage, component out of shape.
-  **The net weight of the juicer is 3.6kg. To move the juicer, must hold lower part of main body by both hands.** Only hold the chamber or side face of main body may cause personal injury, or stoppage.
-  **Do not disassemble the components when use. Do not put other objects (like spoon, or finger etc.) into the hopper or juice outlet.** May cause personal injury, accident, machine stoppage etc.
-  **If the strainer is damaged, stop using the appliance.**

Notice for Operation

- **Foods need to pay attention**
 - Fruits with cores like persimmon, plum, lemon, prune, peach etc., need to discard the cores before put into the hopper.
 - Vegetable with rich fiber like cress, celery etc., need to cut them into 3-4cm small pieces, before put into the hopper.
 - Do not put sesame, peas, bark, pepper etc. into the hopper.
 - Do not put loach, eel, shrimp, squid etc. into the hopper.
 - Do not put preserved fruit (grape, raspberry, mulberry etc.) by wine, honey, sugar, and enzymes.

It is not suitable to crush grain and extract juice of sugarcane.

May cause component damage, or machine stoppage.

- **Drink the squeezed juice as soon as possible, do not store for a long time.**
- **Condiment (garlic, raw chili) can be processed, but do not crush grain. (May cause machine stoppage or damage.)**
- **Do not squeeze the pulp twice except for the soft fruit.**
- **Don't run idle before put ingredients into the hopper.**
- **Do not use the appliance continually over 20 mins.**

Motor will be overheated, and cause stoppage. Stop for 20 mins before operate again.
- **Do not insert spoon, chopstick etc. into the juice outlet.**

May cause component damaged
- **Do not put other tools instead of the pusher into the hopper.**

May insert into the auger and get jammed. Component damage, personal injury or machine stoppage may occur.
- **Do not press the power switch with wet hands.**

May cause the risk of electric shock, leakage, or fire. Do not stick foreign matter around the switch.

Note: When using fruit strainer, fruits or vegetables stored in refrigerator for a long time may not be able to squeeze juice or limited quantity.

 
Care and Maintenance

Clean the juicer in time after use.

1. Disconnect appliance from the power supply and let main body cool down before cleaning.
2. Do not rinse or immerse the main body into water, clean the main body with a slightly damp cloth only.
3. Removable components, such as pusher, hopper, auger, strainer, chamber, juice container, and pulp container can be cleaned with water.
4. Be careful to wash the sharp auger to avoid cutting.
5. Clean the strainers with cleaning brush.
6. Do not put removable components into high temperature sterilizer. They can be cleaned with soft cloth and detergent.
7. After cleaning, dry the components and install to main unit.
8. When not in use, store the appliance in a well-ventilated and dry environment.



Product Material:



Pusher (ABS), Hopper (ABS), Auger (PC+Stainless Steel), Fruit Strainer (PC+Stainless Steel), Smoothie Strainer (PC+Stainless Steel), Chamber (PC), Juice Cap (ABS), Regulating Valve (Silicone), Chamber mat (Silicone), Juice Container (PP), Pulp Container (PP)

Using Conditions:

1. Direct contact with food
2. Food might be contacted: Fruits
3. Maximum operation temperature and time: 70 °C, 30mins
4. Reusable: yes
5. User guide: clean the device with water before use

Troubleshooting

Before entrusting servicing, check the followings:

Fail to start.

- Make sure the power cord is securely plugged.
- Make sure the hopper is clamped securely. When the hopper is not installed in place or not connected, the unit will not start.
- Make sure the chamber is flatly installed in the main body. When the chamber is unevenly placed, the safety devices cannot joint together and the unit is unable to start.
- Make sure the unit is installed according to the installation method of the unit. See installation instructions.
- Call customer service centre.

Fail to open the safety lid.

- Are there too many residues inside the juicer?
Adjust the regulating vale to half open position and push the power switch to "FWD" position to discharge the residues; or push the power switch to "REV" position for 3-5 seconds and then stop, repeat 2-3 times and the hopper is easy to be opened.
- Are foreign matters or solid substances (such as hard core of persimmon) thrown into it?
Push the power switch to "REV" position to lift the objects to the opening and then remove them.
- Do not open the hopper with force. If the hopper is still unable to be opened according to the mentioned instructions, please contact our custom service centre.

Stop suddenly during normal operation.

- Are the food too much or too large?
Unplug the unit, disassemble the chamber and operate again after cleaning.
- If the solution mentioned above still not works, please consult our customer service center.

The auger has cracks or scratches.

- They are forming marks produced in the process molding materials, which is normal and does not affect the usage of the unit.

Juice leaks from the top of the main body.

- Too much food put into the unit?
When the amount of food put into it is larger than the residue amount discharged, the rubber blanket will be pushed out and the juice will leak out from the gaps.
Do not put too much food into the juicer each time and throw in separately for several times will be better.

Trouble Shooting

While making juice the chamber shakes.

- Influenced by the power of the motor, slight shake will happen.
Due to the features of the ingredients (hard or tough), shakes will happen to some extent as well, which is a normal phenomenon derived from the rotation of the screw propeller.
Compared with juicy and soft ingredients, the vibration will be greater while squeezing hard ingredients. (Such as carrot, potato, radish, beta vulgaris, etc.)

Fail to install the chamber to the main body.

- When the regulating valve is in ON position, the chamber cannot be installed to the main body.
Before installing the chamber to the main body, the regulating valve should be adjusted to OFF position.

Technical Specifications

| Model | JUS-102 |
|--------------------|----------------------------------|
| Voltage | 220 V |
| Frequency | 50 Hz |
| Power | 150 W |
| Rated speed | 38 rpm |
| Product Dimensions | (H) 450 mm (W) 257 mm (D) 202 mm |
| Net Weight | 3.9 kg |

Manufacturer: German Pool (Hong Kong) Limited

Address: Room 113, Newport Centre Phase II, 116 Ma Tau Kok Road, Tokwawan, Kowloon, Hong Kong


Standard: GB4706.1-2005, GB4706.30-2008, GB4806.7-2016, GB4806.9-2016, GB4806.11-2016

3C Certificate No.: 2017010713991232

Specifications are subject to change without prior notice.

If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
Refer to www.germanpool.com for the most up-to-date version of the Operating Instructions.

Circuit Diagram

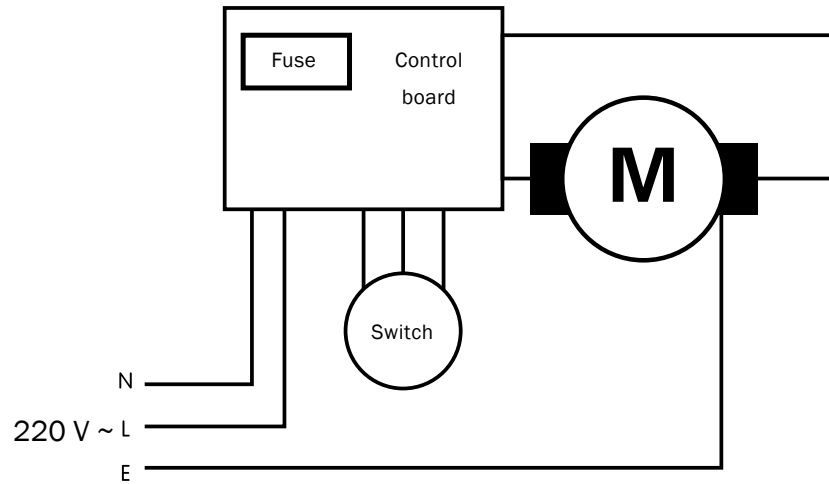

保用条例

此保用提供德国宝产品之机件在正常使用下壹年保用 (自购买日起计算)。

* 贵户须在购机十天内，以下列其中一种方式向本公司登记资料，保用手续方正式生效：

1) 填写本公司网页内之保用登记表格
www.germanpool.com/warranty

2) 填写保用登记卡，邮寄至本公司。



Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:
www.germanpool.com/warranty

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



请填写以下表格并与发票一并保存，以便维修时核对资料。用户提供本公司之所有资料必须正确无误，否则免费保用将会无效。 Please fill out the form below. This information and the purchase invoice will be required for any repairs. Warranty will be invalid if information provided is found to be inaccurate.

型号 | 型号 | Model No. : **JUS-102**

机身号码 | Serial No. : _____

购买商号 | Purchased From : _____

发票号码 | Invoice No. : _____

购买日期 | Purchase Date : _____

- 未能出示购买发票正本者，将不获免费维修服务。
- 用户应依照说明书的指示操作。本保用并不包括：
 - 任何附件及辅助装置；
 - 因天然与人为意外造成的损坏 (包括运输及其它)；
 - 电源接合不当、不依说明书而错误或疏忽使用本机所引致之损坏。
- 于下列情况下，用户之保用资格将被取消：
 - 购买发票有任何非认可之删改；
 - 产品被用作商业或工业用途；
 - 产品经非认可之技术人员改装或加装任何配件；
 - 机身编号被擅自涂改、破坏或删除。
- 如用户自携热水器或部份配件到本公司维修部检查或维修，本公司将会收取检查或测试费用。
- 总代理有权选择维修或更换配件或其损坏部份。
- 产品一经被转让，其保用即被视作无效。
- 香港客户：保用只在香港、九龙及新界区有效，东涌、愉景湾及离岛须额外收取交通费用。

- Customer who fails to present original purchase invoice will not be eligible for free warranty service.
- Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
- This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
- Regardless of warranty status, all walk-in requests for water heater repair or replacement service at our Customer Service Centre are subject to testing and handling charges.
- German Pool will, in its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.
- Hong Kong: Service area includes Hong Kong Island, Kowloon and New Territories. Repairs in Tung Chung, Discovery Bay or other outlying islands are subject to extra service charges.

客户服务中心

全国服务热线：

+86 400 830 3838

传真：+86 0757 2336 0284

电邮：repairs@germanpool.com.cn

Customer Service Centre

China Customer Service Hotline:

+86 400 830 3838

Fax : +86 0757 2336 0284

Email : repairs@germanpool.com.cn

此保用只适用于中国 | This warranty is valid only in China

GERMAN POOL  **德國寶**

德国宝(香港)有限公司 German Pool (Hong Kong) Limited

中国香港
Hong Kong, China

香港九龙土瓜湾马头角道116号
新宝工商中心2期113号室
Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwawan, Kowloon, Hong Kong.
电话 Tel: +852 2773 2888
传真 Fax: +852 2765 8215

中国内地
Mainland China

广东省佛山市顺德区
大良南国东路德顺广场三层
3/F, Takshun Plaza, Nanguo East Road,
Shunde, Foshan, Guangdong
电话 Tel: +86 757 2980 8308
传真 Fax: +86 757 2980 8318

中国澳门
Macau, China

澳门俾利喇街145号
宝丰工业大厦3楼
3/F, Edificio Industrial Pou Fung,
145 Rua de Francisco Xavier Pereira, Macau
电话 Tel: +853 2875 2699
传真 Fax: +853 2875 2661



香港《S-MARK》
安全認證



中國品牌/家電行業
十大影響力品牌



CEO非凡品牌大賞



香港優質商號



香港工商業獎



2007
最佳管理
創建品牌企業獎



香港中小企業
最佳拍檔大獎



香港消費者推銷品牌



香港《O-Mark》
優質原裝證書



香港名牌十年成就獎
HONG KONG TOP BRAND TEN YEAR
ACHIEVEMENT AWARD

© 版权所有。未获德国宝授权，不得翻印、复制或使用时作任何商业用途，违者必究。

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.

www.germanpool.com