

## Multifunctional Pressure Cooker

PRC-509



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

# USER MANUAL

# Table of Contents

---

Warnings & Safety Precautions	03
Product Structure	05
Operation Instructions	06
Troubleshooting	10
Cleaning & Maintenance	11
Technical Specification	12
Warranty Terms & Conditions	23

# Warnings & Safety Precautions

---

## **⚠ WARNING!**

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.
- Contact German Pool authorized service technician for repair or maintenance of this product.

This “Warnings & Safety Precautions” section contains important information that will enable you to use the product safely and correctly and prevent personal injury or property damage to you and others. After reading, keep it in a safe place so that it can be consulted at any time by all users of this product.

1. This product needs to be placed on a stable and firm desktop for use.
2. The input power of this product is 220-240V~50/60Hz. Please confirm before use. At the same time, the grounding protection in the power socket must be effective to prevent accidents.
3. DO NOT immerse the power cord, plug and this product in water or other liquids to prevent the risk of electric shock.
4. DO NOT hand the power cord on the edge of a cabinet, table or high-temperature surface.
5. DO NOT damage, excessively bend, stretch or twist the power cord. DO NOT put heavy objects on the power cord or clamp the power cord.
6. If the power cord is damaged, it must be replaced with a special cord by German Pool Customer Service & Repair Centre.
7. If this product needs maintenance during use, user must contact German Pool Customer Service & Repair Centre, or go directly to German Pool’s designated maintenance point for maintenance. DO NOT disassemble this product by yourself to avoid danger.
8. Before cleaning this product, the power connector must be unplugged, and the socket must be wiped dry before this product is used again.
9. The steam exhaust pipe of this product must be checked regularly to ensure that it is not blocked.
10. Before opening the lid, make sure that the pressure in the pot is fully released.
11. DO NOT force the lid open when the floater has not sunk down.
12. During operation, DO NOT open the lid or put your hands or face close to the steam outlet. At the same time, DO NOT move or shake this product to avoid affecting the cooking effect or causing burns.
13. DO NOT put a wet towel on the lid, otherwise it will cause the pot body and lid to deform and discolor.


# Warnings & Safety Precautions

---

14. During use or just after use, DO NOT touch the inner pot directly with your hands to avoid high temperature burns.
15. DO NOT wash rice in the inner pot. Rice should be washed in other containers before pouring into the inner pot of this product to avoid damage to the nonstick coating of the inner pot.
16. After the inner pot is placed in the pot body, gently rotate the inner pot left and right to ensure that the inner pot is in full contact with the heating plate and the temperature cup.
17. DO NOT heat the inner pot of this product on an open flame.
18. DO NOT continue to use this product when the inner pot is deformed. Contact German Pool Customer Service & Repair Centre to purchase a new inner pot.
19. Before putting the inner pot into this product, make sure there are no rice grains or vegetable residues adhering to the bottom of the inner pot or the surface of the heating plate. If there are, user must clean it before putting the inner pot in, otherwise it may cause the machine to overheat or result in poor cooking effect.
20. If the inner pot is not properly placed, or the inner pot has not been placed in, or the inner pot is not filled with food or water, DO NOT turn on this product.
21. When moving or repairing this product, unplug the power cord first and wait for the product to cool down before proceeding.
22. After use, if user does not want to use Keep Warm function, unplug the power cord in time. DO NOT pull on the cord to unplug.
23. Clean the lid, lid sealing ring, float valve and pressure-relief valve regularly to prevent odor.
24. Use only the inner pot provided together with this product, to avoid abnormalities caused by incompatibility of the inner pot.
25. DO NOT open the lid during the operation of this product to avoid undercooked food or scalding.
26. The sealing ring of this product is a specially designed component for product safety. If the sealing ring is damaged, DO NOT continue to use this product. Contact German Pool Customer Service & Repair Centre to replace with an original sealing ring.
27. Food ingredients (including water) must not exceed the maximum scale line of this product's inner pot.
28. If there are children around, be extra careful when using this product. Keep this product out of reach of children, and DO NOT let children use this product by themselves.
29. This product should be stored in a place where children cannot reach it. DO NOT let individuals (including children) with physical, sensory or mental disabilities or lack of relevant experience and knowledge use or play with this product.
30. During the operation of this product or when exhausting, DO NOT remove the pressure-relief valve and DO NOT poke the float valve to avoid being scalded by hot steam.
31. This product is for home use only. DO NOT use this product for other purposes not specified.
32. After opening the package, put the plastic bag into the trash can immediately to prevent children from playing with it and causing suffocation.
33. DO NOT operate this product with an external timer or independent remote-control system.

# Product Structure


---

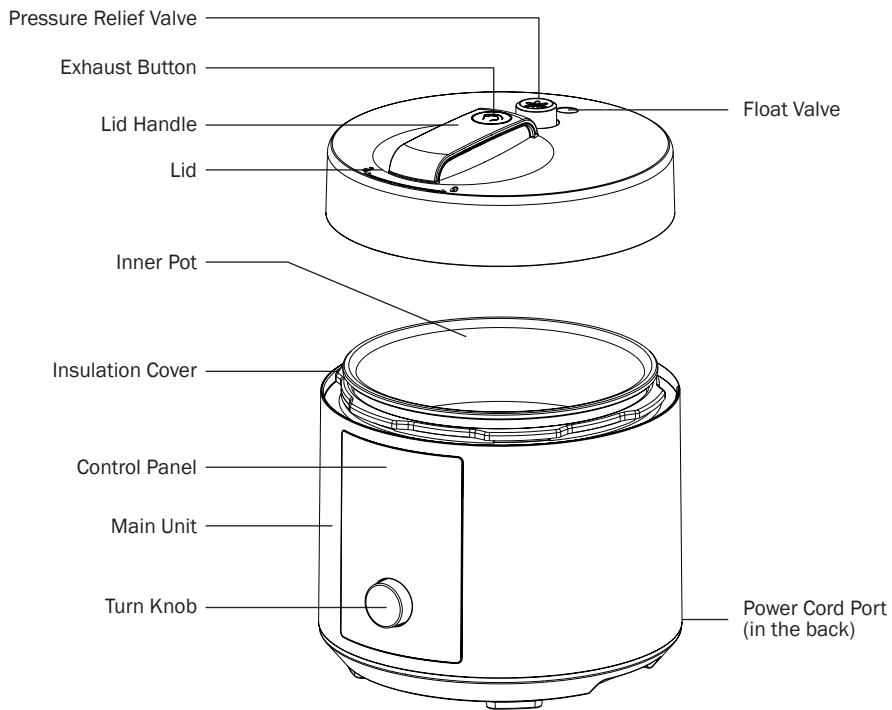

Measuring Cup



Rice Scoop

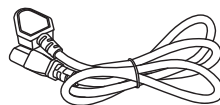


Power Cord


# Operating Instructions

## Before Cooking

1. Open the lid: grip the lid handle, turn handle clockwise to Unlocked position, then lift off the lid.

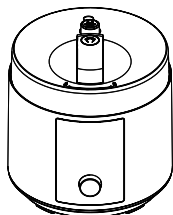


Locked Position

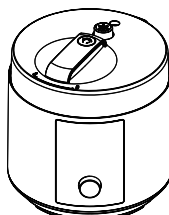

Unlocked Position

### Note:

Before opening the lid, make sure the Float Valve has sunk.

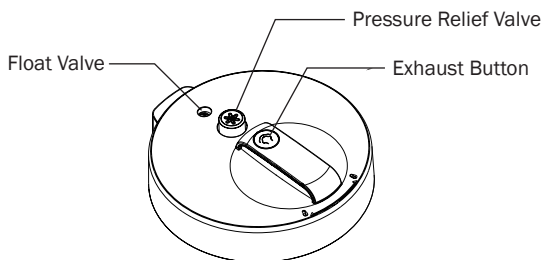


### Note:

- When the Float Valve has sunk, it means the pot is not pressurized, and it is safe to open the lid; when the Float Valve has risen up, it means there is pressure inside the pot, the lid will automatically lock and the lid cannot be opened.
- To manually exhaust pressure, press Exhaust Button. Be careful of hot steam venting from the Pressure Relief Valve to avoid scalding.
- If the Float Valve is not cleaned regularly, or if food residue causes it to stick and fail to drop automatically, making it impossible to open the lid, gently push it down through the valve opening using a slender object like a chopstick. It is recommended to clean the Float Valve after each use to prevent it from sticking and blocking the lid from opening.

2. Take out the inner pot, and place in food ingredients and water according to the scale lines. DO NOT fill to beyond the maximum and minimum scale marks.

# Operating Instructions

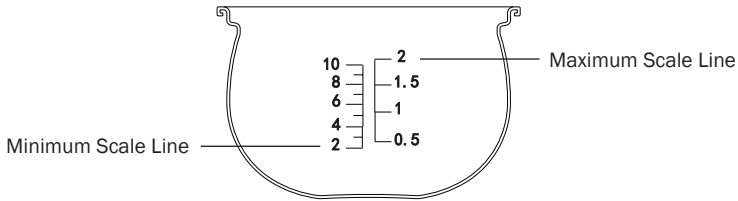


- Place the inner pot into the main unit, make sure the bottom of the inner pot and the surface of the heating plate are clean and dry, and DO NOT place foreign objects between the heating plate and insulation cover. After placing in the inner pot, gently rotate it to ensure good contact between the pot and the heating plate.

## Note:


- DO NOT use the inner pot to wash food ingredients to avoid scratching the nonstick coating.
- When cooking rice, the recommended rice-to-water ratio is 1:1.1-1.3. When cooking porridge, the recommended ratio is 1:7-8. Depending on personal texture preference or the type of rice used, user may increase or decrease the amount of water accordingly.

- Close the lid: grip the lid handle, turn handle anti-clockwise to Locked position until you hear a "click" sound indicating the lid has been securely locked. Before locking the lid, make sure the sealing ring has been properly installed inside the lid.

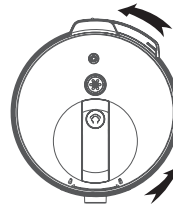

Turn the lid anti-clockwise to lock

- Install the Pressure Relief Valve and check that the Exhaust Button is in the sprung-up position; if it is not, press the button until it is sprung up completely. Make sure the Float Valve has sunk (before heating, the Float Valve should sink). If the Float Valve is clogged, it must be cleaned thoroughly before use. Always keep the valve opening clear.

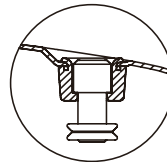


Float Valve in sunk down position

- Connect power: insert the power cord connecting end into the port located on the bottom of the pressure cooker, and plug the socket end into a power socket. When powered on, the product will emit one beep, and display will show "00:00", indicating that the product is in standby state.

# Operating Instructions

## Control Panel

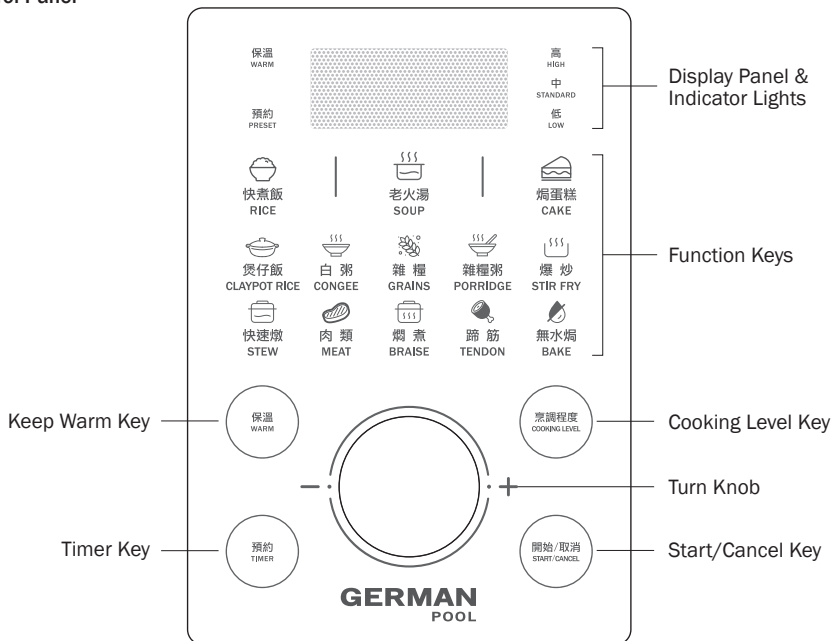

## How To Cook

1. Connect power, product enters standby state, Display Panel shows "00:00".
2. Rotate Turn Knob to desired function, the corresponding indicator light blinks, Display Panel shows the default pressurized time (except for Stir Fry function).

Function	Rice	Soup	Cake	Claypot Rice	Congee
<b>Default Time</b>	12 min	35 min	25 min	25 min	20 min
<b>Low</b>	8 min	25 min	20 min	18 min	15 min
<b>Standard</b>	12 min	35 min	25 min	25 min	20 min
<b>High</b>	20 min	40 min	30 min	30 min	25 min
Function	Grains	Porridge	Stir Fry	Stew	Meat
<b>Default Time</b>	40 min	23 min	40 min	25 min	40 min
<b>Low</b>	35 min	18 min	H1 Power	20 min	25 min
<b>Standard</b>	40 min	23 min	H2 Power	25 min	40 min
<b>High</b>	50 min	28 min	H3 Power	35 min	50 min
Function	Braise	Tendon	Bake		
<b>Default Time</b>	35 min	45 min	30 min		
<b>Low</b>	28 min	30 min	24 min		
<b>Standard</b>	35 min	45 min	30 min		
<b>High</b>	40 min	55 min	35 min		


# Operating Instructions

- The cooking level is set to Standard by default (except for Stir Fry function); to adjust cooking level, tap Cooking Level Key repeatedly to cycle among Low / Standard / High; the corresponding indicator light will blink. After cooking level is set, press Turn Knob or tap Start/Cancel Key to start cooking.

## Note:

- When selecting function or during cooking, tap and hold Start/Cancel Key for 2 seconds, and product will return to standby state.
- When user selects Stir Fry function, Display Panel shows H3 by default, indicating High power. To adjust power, tap Cooking Level Key repeatedly to cycle among H3 (High power) / H2 (Standard power) / H1 (Low power). User can tap Cooking Level Key anytime during cooking to adjust cooking power.
- Pressurized time refers to the duration in which the pressure inside the pot is maintained at the selected function's cooking pressure. When user first starts cooking, display panel shows [---]. When the pressure inside the pot reaches the set pressure, pressurized time starts to countdown and is shown on the display panel.

- When cooking is finished, the product automatically enters Keep Warm state, and Keep Warm Indicator Light lights up constant.
- To retrieve food from the cooker, tap and hold Start/Cancel Key for 2 seconds to exit Keep Warm state, press the Exhaust Button on the lid handle, Pressure Relief Valve will release pressure until the Float Valve sinks down.

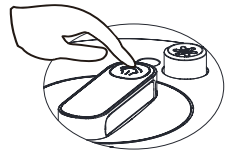

## **⚠ WARNING!**

When cooking liquid food (such as congee, thick sauce), DO NOT immediately press the Exhaust Button to depressurize. User must wait until the Float Valve naturally sinks down before opening the lid, otherwise the food will spray out from the Pressure Relief Valve.

## On-Timer Function

- Connect power, product enters standby state, Display Panel shows "00:00".
- Rotate Turn Knob to select desired function, the corresponding indicator light blinks, Display Panel shows default pressurized time.
- Tap Timer Key to enter timer settings. Timer Indicator Light blinks, timer duration is 30 minutes by default.
- Rotate Turn Knob to adjust timer duration. For duration under 2 hours, each click increases/decreases by 10 minutes. For duration over 2 hours, each click increases/decreases by 30 minutes. Adjustable time range is 30 min - 24 hrs.
- Cooking level is set to Standard by default. To adjust cooking level, tap Cooking Level Key repeatedly to cycle among Low / Standard / High; corresponding indicator light will blink.
- When setting is complete, press Turn Knob or tap Start/Cancel Key, Timer Indicator Light lights up constant, product starts to countdown. When countdown reaches zero, the product will automatically start to cook.




# Cleaning & Maintenance

---

## Cleaning the Pressure Relief Valve

Pull out the Pressure Relief Valve, rinse thoroughly with water and allow to air dry completely, then reinstall properly back onto the lid.

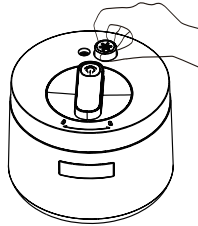

## Cleaning the Inner Pot

Take out the inner pot and wash with a soft sponge, then wipe dry with dry soft cloth. DO NOT wash the inner pot with steel wool or harsh scourer to avoid damaging the nonstick coating.

## Cleaning the Exterior & Lid

Wipe gently with a wrung-out moist cloth. DO NOT use gasoline or other solvents. DO NOT immerse the main unit or directly rinse with water or other liquids to avoid damaging the product.

### Note:

After each cleaning, it is essential to check that the Float Valve, Sealing Ring, anti-blockage nut, Pressure Relief Valve and other components are properly installed to avoid affecting performance or causing a safety hazard.

# Troubleshooting

---

### ⚠ WARNING!

- DO NOT repair or disassemble this product by yourself. Before maintenance work, turn off the product and unplug product from the power source.
- If user encounters problems not mentioned below or if problem persists, please contact German Pool Customer Service & Repair Centre for assistance. This product must be repaired by German Pool Customer Service & Repair Centre only; if user entrusts personnel not designated by German Pool, or if user performs repair work on their own, there may be a risk of personal injury or property loss.

# Troubleshooting

---

Problem	Possible Cause	Solution
Lid cannot close	Sealing ring not installed properly	Install sealing ring properly
	Float valve is stuck	Use a chopstick to push down the float valve
Lid cannot open	Float valve has not sunk after pressure is released	Use a chopstick to push down the float valve
	There is pressure inside the pot	Depressurize according to Operation Instructions
Lid is leaking air	Sealing ring has not been installed or is installed incorrectly	Install sealing ring properly
	There is food debris on the sealing ring	Clean sealing ring
	Sealing ring is damaged	Contact German Pool Customer Service & Repair Centre to replace sealing ring
	Lid is not closed properly	Close the lid properly
Float valve is leaking air	There is food debris on the floater sealing ring	Clean floater sealing ring
	Floater sealing ring is damaged	Contact German Pool Customer Service & Repair Centre to replace floater sealing ring
Exhaust valve is releasing an excessively strong jet of steam	Pressure-relief valve is not installed properly	Install pressure-relief valve properly
	Product's pressure control mechanism is damaged	Contact German Pool Customer Service & Repair Centre

# Technical Specification

---

Model	PRC-509
Voltage / Frequency	220-240 V ~ 50/60 Hz
Power	900 W
Capacity	5 L
Working Pressure	70 kPa
Product Dimensions	(H) 292 (W) 278 (D) 304 mm
Net Weight	4.6 kg

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to [www.germanpool.com](http://www.germanpool.com) for the most update version of the user manual.

# 目錄

---

警告及注意事項 14

產品結構 16

使用說明 17

清潔及保養 21

故障檢修 22

技術規格 22

保用條款 23

# 警告及注意事項

## ▲ 警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

「警告及注意事項」中記載重要內容，可使您安全且正確地使用本產品，並預防對您或他人造成人身傷害或財產損失。閱讀本說明書後必須妥善保管，以便本產品的所有使用者可以隨時查閱。


1. 本產品需放置在平穩牢固的桌面上使用。
2. 本產品輸入電源為220-240V ~ 50/60Hz，必須確認後再使用，同時電源插座內接地保護必須有效，以防出現意外。
3. 嚴禁將電源線、插頭及本產品浸入水中或其他液體中，以防止觸電危險。
4. 嚴禁將電源線懸掛在櫥櫃、桌子的邊緣或高溫表面。
5. 嚴禁損壞、過分彎曲、拉伸、扭轉電源線，嚴禁在電源線上放置重物或夾住電源線。
6. 如電源軟線損壞，必須由德國寶客戶服務及維修中心更換專用軟線。
7. 產品使用過程中如需維修，必須與德國寶客戶服務及維修中心聯繫，或直接到本公司指定的維修點進行維修，嚴禁自行拆卸，以免發生危險。
8. 本產品在清洗前必須拔除電源線，再次使用前必須把電源線及插座擦乾。
9. 必須對本產品的蒸氣排管道進行定期檢查，以確保其不被堵塞。
10. 打開鍋蓋前，必須確保鍋內壓力充分釋放，方可打開鍋蓋。
11. 浮子未落下時，嚴禁強行打開鍋蓋。
12. 本產品在工作過程中，嚴禁打開鍋蓋或將手或臉靠近蒸氣出口，同時嚴禁移動或晃動本產品，以免影響烹飪效果或造成燙傷。
13. 嚴禁將濕毛巾放於鍋蓋上，否則會引起鍋體、鍋蓋的變形或變色。
14. 本產品在使用中或剛使用完畢，嚴禁用手直接接觸內鍋，以免高溫燙傷。
15. 嚴禁將米放在內鍋內淘洗，應放在其它容器內清洗後再倒入本產品內鍋中，以免造成內鍋不黏塗層損傷。
16. 內鍋放入主機後，請左右輕輕旋轉內鍋，以確保內鍋與發熱盤、感溫器充分接觸。
17. 嚴禁將本產品內鍋置於明火上加熱。
18. 內鍋變形時嚴禁繼續使用，必須聯絡德國寶客戶服務及維修中心購買新內鍋。
19. 內鍋放入本產品前，必須先確認內鍋底部或發熱盤表面是否有米粒或菜渣黏附，如有則須清洗、清理乾淨後再放入內鍋，否則可能導致機體過熱或烹飪食物效果不良的現象。

# 警告及注意事項

---

20. 內鍋未放置好、無內鍋或內鍋未裝食材或水時，嚴禁將本產品通電工作。
21. 移動或檢修本產品時，必須先拔除電源線插頭，待產品冷卻後再進行。
22. 本產品使用完畢後，如無需使用保溫功能，必須及時拔除電源線，拔除時嚴禁拉扯電源線。
23. 必須定期清洗鍋蓋、鍋蓋密封圈、浮子閥及排氣閥，以免產生異味。
24. 必須使用本產品自帶的內鍋，避免因內鍋不適應而導致產品出現異常。
25. 嚴禁在本產品工作過程中打開鍋蓋，以免造成食物煮不熟或燙傷。
26. 本產品的密封圈是為產品安全而特別設計的部件，如密封圈出現損壞，嚴禁繼續使用本產品，必須由德國寶客戶服務及維修中心更換本產品的原裝密封圈。
27. 烹飪的食物（包含水）嚴禁超過內鍋最高刻度線。
28. 若有小孩在旁必須加倍小心使用。嚴禁讓小孩單獨使用或將本產品置於小孩能觸及的地方。
29. 本產品應儲存到兒童不能觸及的地方，嚴禁讓肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人（包括兒童）使用或玩耍本產品。
30. 本產品在工作過程中或排氣時，嚴禁取下排氣閥或捅浮子閥，以免被熱蒸氣燙傷。
31. 本產品僅適用於家庭使用，嚴禁將此本產品用於未指定之其它用途。
32. 打開包裝後，必須立刻將塑膠袋放入垃圾桶，以免兒童玩耍，造成窒息的危險。
33. 本產品嚴禁在外接計時器或獨立的遙控控制系統的方式下運行。


# 產品結構

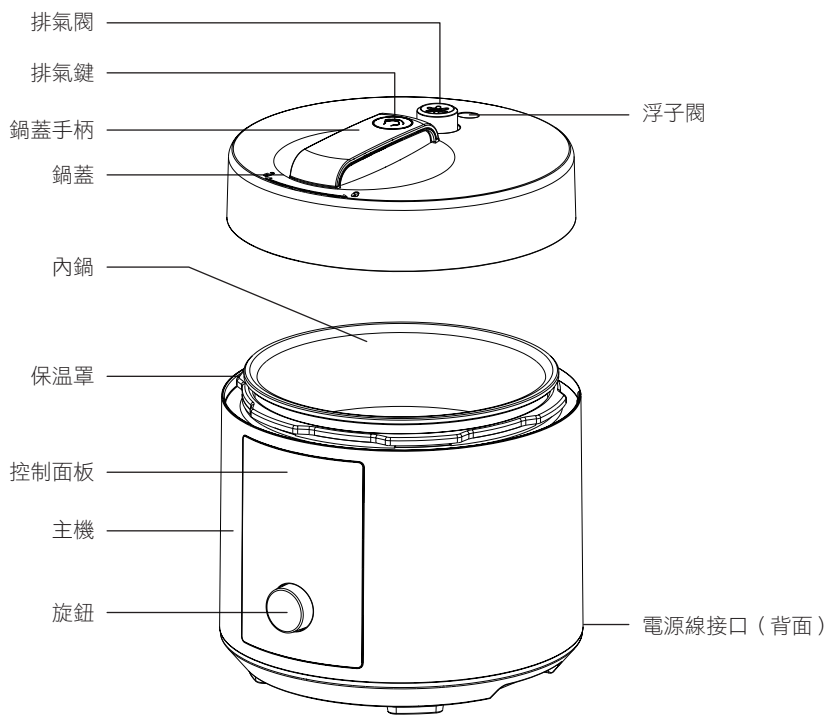

量杯



 飯勺




電源線


# 使用說明

## 烹調前準備工作

1. 打開鍋蓋：握緊鍋蓋手柄，順時針方向旋轉鍋蓋至開蓋位置，然後直接向上提起鍋蓋。

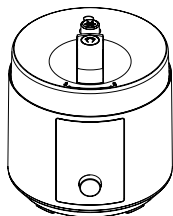


鍋蓋鎖上狀態

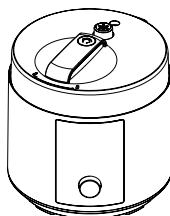

鍋蓋解鎖狀態

### 注意：


打開鍋蓋前，必須確認浮子閥是否落下。

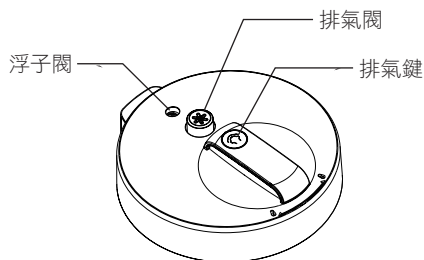

### 注意：

- 當浮子閥落下時，表示鍋內無壓力，可以打開鍋蓋；當浮子閥升起時，表示鍋內有壓力，鍋蓋會自動上鎖，此時不能打開鍋蓋。
- 如需手動排氣，請按壓「排氣鍵」，排氣時會有蒸氣從排氣閥中排出，注意避免燙傷。
- 如浮子閥未定期進行清潔，或因食物黏附令浮子閥未能自動掉下，導致無法不開鍋蓋，可在浮子閥口用筷子等細長物捅一下，使浮子閥下降；建議在每次使用本產品後清潔浮子閥，防止浮子閥因被黏住而無法打開鍋蓋。

2. 取出內鍋，參照內鍋上的最高刻度放入食材及注水。注意食物和水均嚴禁超過最高刻度或低於最低刻度。

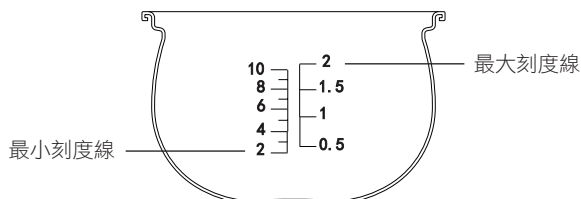


# 使用說明


- 將內鍋放入主機，放入前先把內鍋底部及發熱盤表面抹乾淨，保溫罩及發熱盤表面嚴禁放有雜物。放入後，左右輕輕旋轉內鍋，保持內鍋與發熱盤接觸良好。

## 注意：

- 嚴禁用內鍋直接清洗食材，以免刮傷內鍋的不黏塗層。
  - 煮飯時米和水的比例建議為1：1.1-1.3；煮粥時米和水的比例建議為1：7-8，烹調時可根據個人口感喜好或不同米質，增加或減少水量。
- 關上鍋蓋：握緊鍋蓋手柄，逆時針方向旋轉鍋蓋至鎖緊位置，並聽到「咔嚓」扣合聲；關上鍋蓋前必須檢查密封圈是否已正確安裝在鍋蓋內。

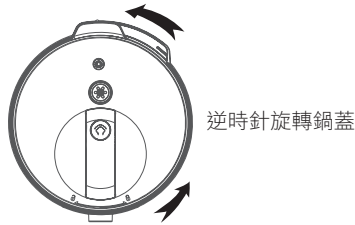


- 裝上排氣閥，檢查排氣鍵是否處於彈起狀態，否則將排氣鍵按起來至最高位置，並檢查浮子是否落下（未加熱工作前浮子處於落下狀態），如浮子閥有堵塞必須清潔乾淨再使用，並時刻保持閥孔暢通。

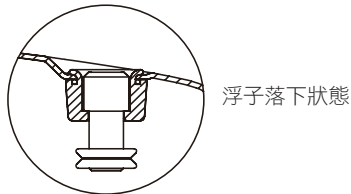

- 接通電源：將電源線一端插入壓力鍋底部的插座上，另一端插到電源插座上，通電後產品發出蜂鳴器提示聲一聲，顯示屏顯示「00:00」進入待機狀態。

# 使用說明

## 控制面板

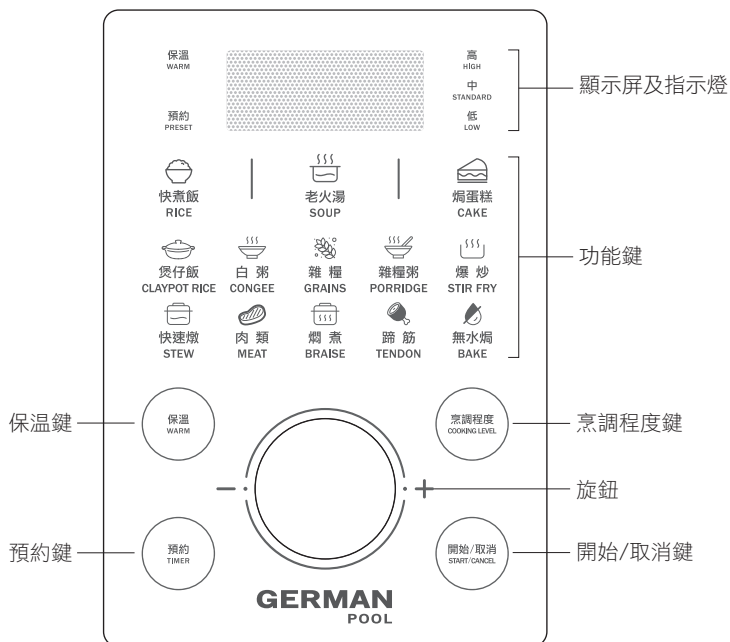

## 開始烹調

1. 接通電源進入待機狀態後，顯示屏顯示「00:00」。
2. 擰動旋鈕選擇所需功能，相應指示燈閃爍，顯示屏顯示預設保壓時間（爆炒功能除外）。


功能	快煮飯	老火湯	焗蛋糕	煲仔飯	白粥
預設時間	12分鐘	35分鐘	25分鐘	25分鐘	20分鐘
低	8分鐘	25分鐘	20分鐘	18分鐘	15分鐘
中	12分鐘	35分鐘	25分鐘	25分鐘	20分鐘
高	20分鐘	40分鐘	30分鐘	30分鐘	25分鐘
功能	雜糧	雜糧粥	爆炒	快速燉	肉類
預設時間	40分鐘	23分鐘	40分鐘	25分鐘	40分鐘
低	35分鐘	18分鐘	H1火力	20分鐘	25分鐘
中	40分鐘	23分鐘	H2火力	25分鐘	40分鐘
高	50分鐘	28分鐘	H3火力	35分鐘	50分鐘
功能	燜煮	蹄筋	無水焗		
預設時間	35分鐘	45分鐘	30分鐘		
低	28分鐘	30分鐘	24分鐘		
中	35分鐘	45分鐘	30分鐘		
高	40分鐘	55分鐘	35分鐘		

# 使用說明

3. 預設烹調程度為「中」（爆炒功能除外），如需調整，重複按「烹調程度鍵」可循環選擇低 / 中 / 高，相應指示燈閃爍，完成後按旋鈕或「開始/取消鍵」開始烹調。

## 注意：

- 在選擇功能或烹調期間長按「開始/取消鍵」2秒可返回待機狀態。
  - 選擇爆炒功能時，預設為高火力，顯示屏顯示H3。按「烹調程度鍵」可循環選擇H3（高火力）/ H2（中火力）/ H1（低火力），在烹調期間可隨時按「烹調程度鍵」調整火力。
  - 保壓時間表示鍋內壓力維持時間，當烹調開始後，顯示屏顯示「--」，直至鍋內加熱至壓力達到預設水平，保壓時間開始計時，顯示屏顯示倒數時間。
4. 烹調完成後，產品自動進入保溫狀態，保溫指示燈常亮。
  5. 如需取用食物，長按「開始/取消鍵」2秒退出保溫狀態，按下鍋蓋手柄上的排氣鍵讓限壓排氣閥排氣，直至浮子落下。

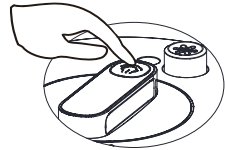

## ▲ 警告！

如烹調流質食物（如粥類、黏性液體等），烹調完成後嚴禁馬上排氣，須等待冷卻讓浮子自然落下，否則食物會在排氣閥噴出。

## 預約烹調

1. 接通電源進入待機狀態後，顯示屏顯示「00:00」。
2. 擰動旋鈕選擇所需功能，相應指示燈閃爍，顯示屏顯示預設保壓時間。
3. 按「預約鍵」進入預約設置，預約指示燈閃爍，預設為30分鐘。
4. 擰動旋鈕調整預約時間，2小時內以10分鐘遞增或遞減，2小時後以30分鐘遞增或遞減，可調時間為30分鐘至24小時。
5. 預設烹調程度為「中」，如需調整，重複按「烹調程度鍵」可循環選擇低 / 中 / 高，相應指示燈閃爍，
6. 設置完成後，按旋鈕或「開始/取消鍵」，預約指示燈常亮，產品進入倒數狀態，並在倒數完畢後自動烹調。

## 注意：

- 在預約倒數期間如需取消，長按「開始/取消鍵」2秒返回待機狀態。
- 選擇爆炒功能時，無法預約。

## 保溫功能

1. 接通電源進入待機狀態後，顯示屏顯示「00:00」。
2. 按「保溫鍵」開啟保溫功能，保溫指示燈常亮。
3. 顯示屏顯示累計保溫時間（以分鐘計算，未滿1分鐘顯示00:00），最長保溫時間為24小時。
4. 保溫期間如需取消，長按「開始/取消鍵」2秒返回待機狀態。


# 清潔及保養

## ⚠ 警告！

清洗本產品前必須先拔除電源插頭，完全排壓並待機身冷卻後再清洗。


### 清潔浮子閥

拆下浮子閥上的小膠圈並取下浮子閥，將浮子閥和小膠圈清洗乾淨及晾乾後，按照原來的安裝方式安裝到位；如非清潔，嚴禁拆開浮子閥。

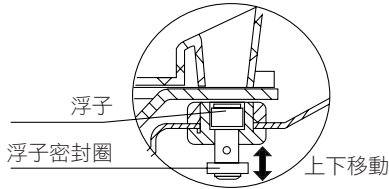

### 清潔排氣閥

把排氣閥向上拔出，用水清洗乾淨及晾乾後，正確安裝回鍋蓋上。

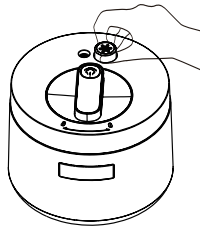

### 清潔內膽

取出內膽並用柔軟的海綿清洗，完成後用乾軟布將水擦乾；嚴禁使用鋼絲球擦洗，以避免損傷不黏塗層。

### 清潔電熱盤

如有飯粒或其他雜物附在電熱盤上，必須先將雜物去除，並用乾軟布擦乾。

### 清潔外殼及上蓋

用擰乾水的濕布輕輕擦拭即可，嚴禁使用汽油或其它溶液，嚴禁將本產品放入水沖洗、浸入水或其它液體中，以免產品損壞。

## 注意：

每次清潔完畢後，必須檢查浮子閥、密封圈、防堵螺母、排氣閥等部件是否安裝到位，避免影響使用或發生危險。

# 故障檢修

## ▲ 警告！

- 嚴禁自行維修或拆卸本產品。維修前必須將產品關機並拔除電源插頭。
- 如下表未提及問題，請聯絡德國寶客戶服務及維修中心。本產品須由德國寶客戶服務及維修中心進行維修，若委託非德國寶指定人員或用戶自行進行維修，可能存在人身傷害或財產損失風險。

故障情況	可能原因	解決方法
鍋蓋難以合上	密封圈未放置好	重新安裝密封圈
	浮子卡住推桿	用筷子壓下浮子
鍋蓋難以打開	排氣後浮子未落下	用筷子壓下浮子
	鍋內有壓力	按照操作步驟排空壓力
鍋蓋漏氣	未放置密封圈或安裝不正確	重新安裝密封圈
	密封圈沾有食物殘渣	清潔密封圈
	密封圈破損	聯絡德國寶客戶服務及維修中心更換密封圈
	未合好鍋蓋	正確合上鍋蓋
浮子閥漏氣	浮子閥密封圈黏有食物殘渣	清潔浮子閥密封圈
	浮子閥密封圈破損	聯絡德國寶客戶服務及維修中心更換浮子閥密封圈
排氣閥排氣強烈	排氣閥放置不正確	正確安裝好排氣閥
	產品壓力控制失靈	聯絡德國寶客戶服務及維修中心

# 技術規格

型號	PRC-509
電壓 / 頻率	220-240 V ~ 50/60 Hz
功率	900 W
容量	5 L
工作壓力	70 kPa
產品尺寸	(H) 292 (W) 278 (D) 304 mm
淨重	4.6 kg

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用說明書以[www.germanpool.com](http://www.germanpool.com)網上版為最新版本。

# 保用條款

# Warranty Terms & Conditions

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

\*貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)

2) 填妥本公司網頁保用登記表  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

3) 填妥保用卡郵寄至本公司



\* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our VIP App and register online:  
(Scan the QR Code on the right)

2) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : PRC-509

機身號碼 Serial No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_

發票號碼 Invoice No. : \_\_\_\_\_

購買日期 Purchase Date : \_\_\_\_\_

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞(包括運輸及其他)；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including material transfer and others);
  - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
  - the purchase invoice is modified by an unauthorized party;
  - the product is used for any commercial or industrial purposes;
  - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

## 客戶服務及維修中心

香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2773 2888

傳真：+852 2356 9798

電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

## Customer Service & Repair Centre

Hong Kong

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street,

Kowloon, Hong Kong

Tel: +852 2773 2888

Fax: +852 2356 9798

Email: [repairs@germanpool.com](mailto:repairs@germanpool.com)

Macau

A, 1 Andar, Mei Kui Kuong

Cheong Fase 2, No.515 Avenida

Do Conselheiro Borja Macau

Tel: +853 2875 2699

Fax: +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

## German Pool (Hong Kong) Limited



香港《S MARK》  
安全認證



中國經銷家電行業  
十大影響力品牌

CEO

CEO非凡品牌大賞



香港優質商號



香港工商業獎



2007  
最具潛質  
創建品牌企業獎



香港中小企業  
最佳拍檔大獎



HONG KONG  
CONSUMER CHOICE  
2007  
香港消費者推崇品牌



香港《Q MARK》  
優質服務證書



香港名牌十年成就獎  
HONG KONG TOP BRAND TEN YEAR  
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.